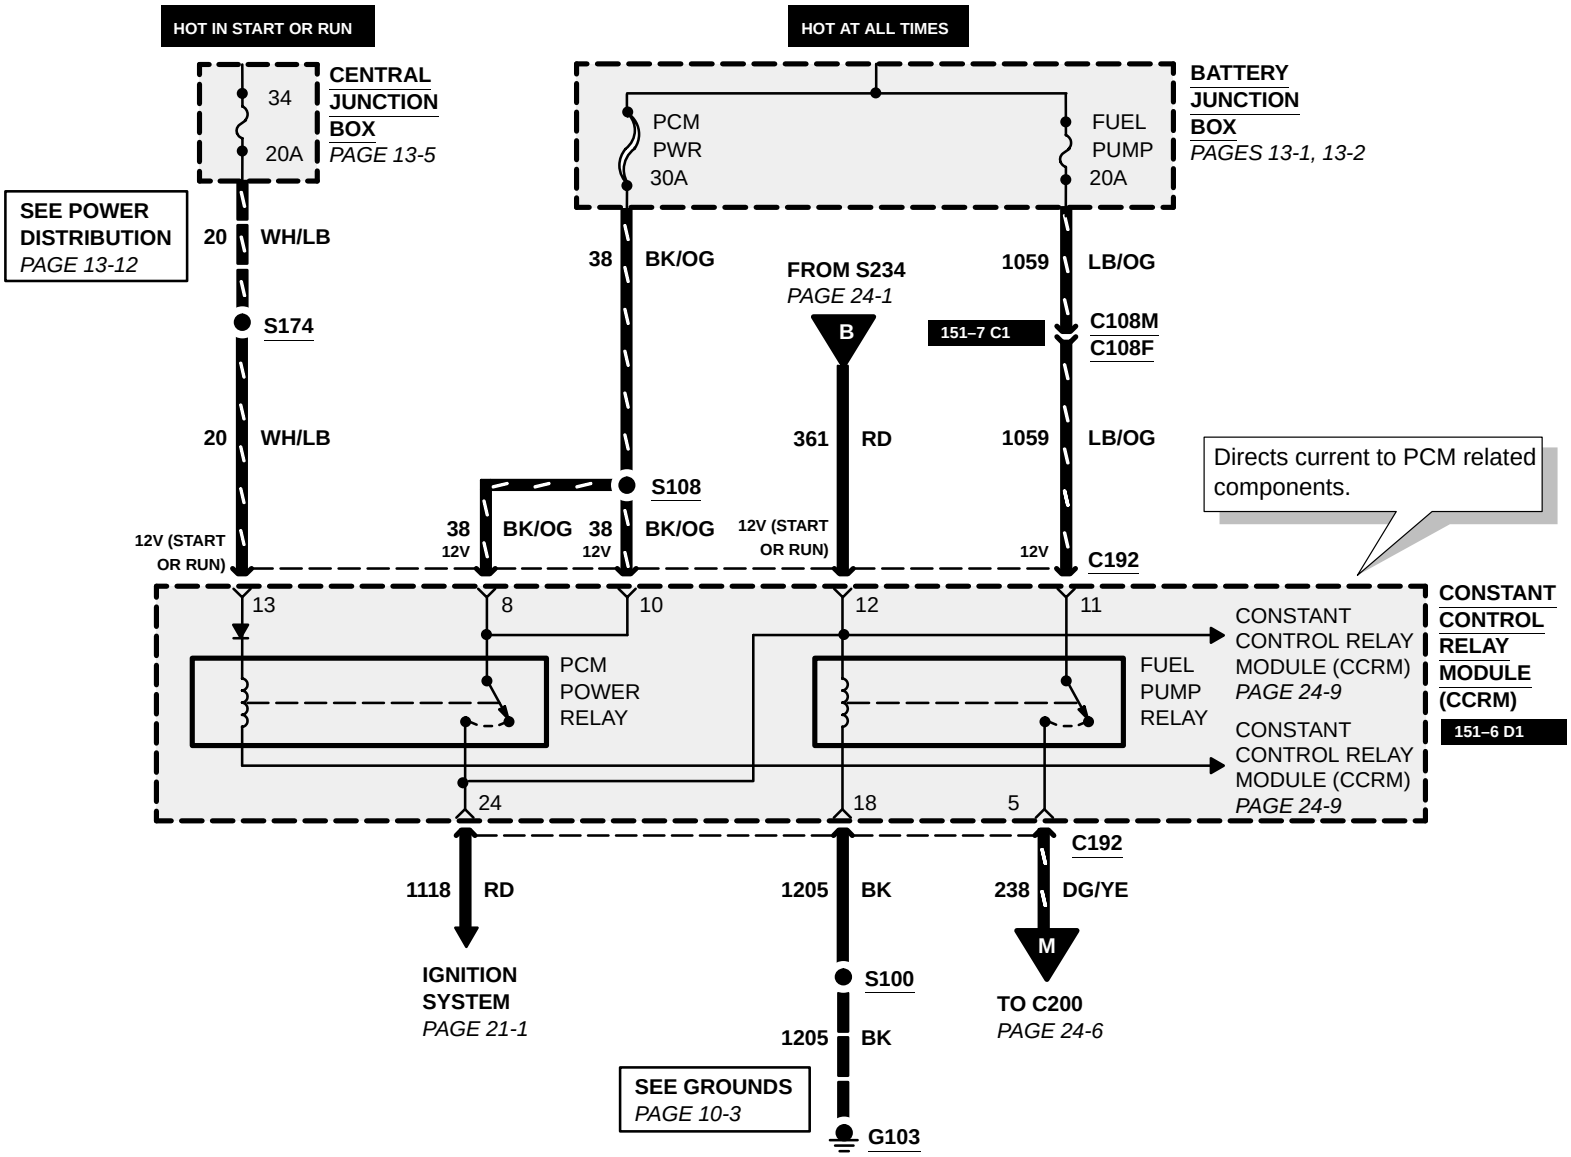
HOT IN START OR RUN
HOT AT ALL TIMES
CENTRAL JUNCTION BOX
PAGE 13-5
34
20A
BATTERY JUNCTION BOX
PAGES 13-1, 13-2
PCM PWR 30A
FUEL PUMP 20A
SEE POWER DISTRIBUTION
PAGE 13-12
20 WH/LB
S174
38 BK/OG
FROM S234
PAGE 24-1
1059 LB/OG
B
151–7 C1
C108M
C108F
20 WH/LB
361 RD
1059 LB/OG
S108
Directs current to PCM related components.
12V (START OR RUN)
38 BK/OG
12V
38 BK/OG
12V
12V (START OR RUN)
12V
C192
13
8
10
12
11
CONSTANT CONTROL RELAY MODULE (CCRM)
PAGE 24-9
PCM POWER RELAY
FUEL PUMP RELAY
CONSTANT CONTROL RELAY MODULE (CCRM)
151–6 D1
24
18
5
CONSTANT CONTROL RELAY MODULE (CCRM)
PAGE 24-9
C192
1118 RD
1205 BK
238 DG/YE
M
IGNITION SYSTEM
PAGE 21-1
S100
TO C200
PAGE 24-6
1205 BK
SEE GROUNDS
PAGE 10-3
G103