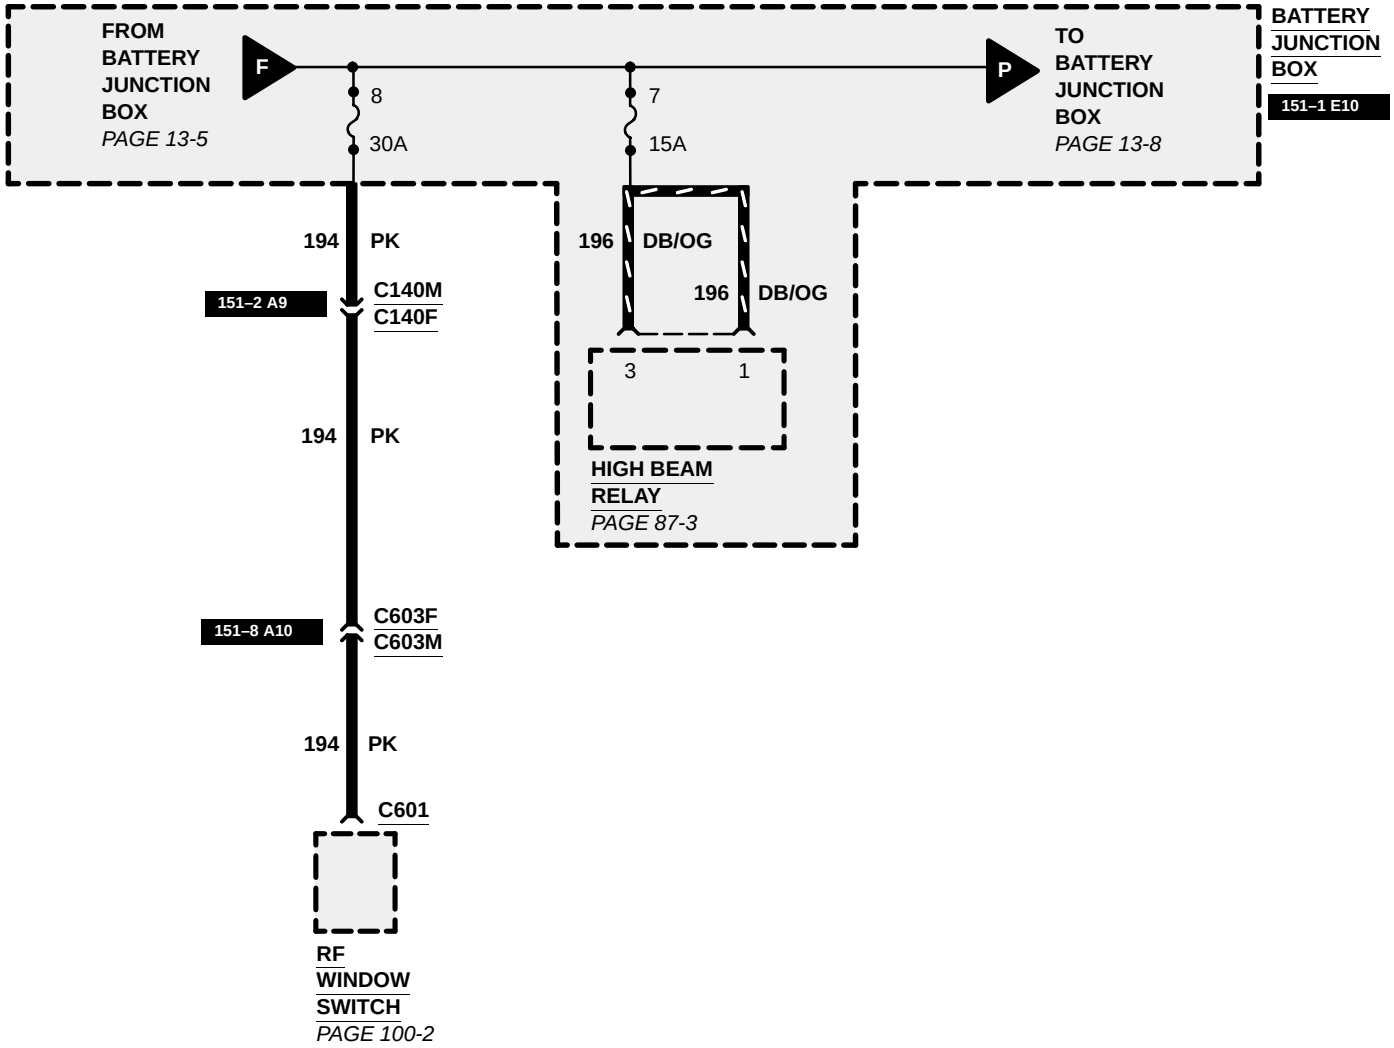
FROM BATTERY JUNCTION BOX
PAGE 13-5
F
8
30A
7
15A
P
TO BATTERY JUNCTION BOX
PAGE 13-8
BATTERY JUNCTION BOX
151–1 E10
194 PK
151–2 A9
C140M
C140F
194 PK
196 DB/OG
196 DB/OG
3
1
HIGH BEAM RELAY
PAGE 87-3
151–8 A10
C603F
C603M
194 PK
C601
RF WINDOW SWITCH
PAGE 100-2