C127 (BK)

14398

Anti–theft hood switch (19A434)

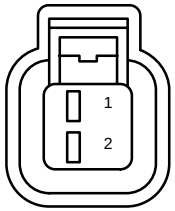

F02069

Pin	Circuit	Circuit function
1	23 (TN/LG)	Anti–theft, switch sense
2	1205 (BK)	Ground

C128 (BK)

14398

Mass Air Flow (MAF) sensor (12B579)

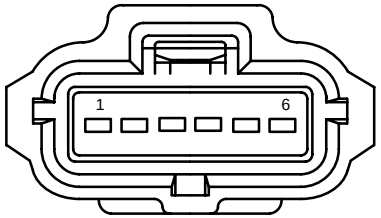

F06077

Pin	Circuit	Circuit function
1	359 (GY/RD)	signal, return
2	1140 (VT)	Voltage supplied in Start and Run (overload protected)
3	1205 (BK)	Ground
4	968 (TN/LB)	Mass Air Flow (MAF) sensor (12B579), signal, return
5	967 (LB/RD)	Mass Air Flow (MAF) sensor (12B579), output
6	743 (GY)	Intake Air Temperature (IAT) sensor (12A697), input

C130 (BK)

14398

A/C clutch cycling pressure switch (19D594)

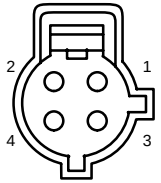

F04195

Pin	Circuit	Circuit function
1	570 (BK/WH)	Ground
2	–	not used
3	–	not used
4	347 (BK/YE)	A/C demand signal

C132 (BK)

14398

Ambient air temperature sensor (19E702)

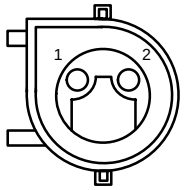

F02177

Pin	Circuit	Circuit function
1	234 (DB/WH)	Ambient air temperature sensor (19E702), feed
2	233 (DB/YE)	Sensor signal return (reference/ground)

C137 (BK)

14398

Windshield washer pump motor (17618)

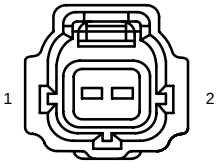

F02091

Pin	Circuit	Circuit function
1	946 (VT/LG)	Washer pump relay, rear, switched output
2	941 (BK/WH)	Washer pump relay, front, switched output