PIN	CIRCUIT	CIRCUIT FUNCTION
31	–	NOT USED
32	G032 (WH)	Signal Return
33	–	NOT USED
34	G830 (WH)	Crankshaft Position (CKP) (+) Sensor
35	–	NOT USED
36	–	NOT USED
37	–	NOT USED
38	G831 (WH)	Crankshaft Position (CKP) (–) Sensor
39	–	NOT USED
40	–	NOT USED
41	–	NOT USED
42	G042 (WH)	NOT USED
43	G043 (WH)	NOT USED
44	–	NOT USED
45	G045 (WH)	Injector #3
46	G046 (WH)	Indicator Light Switch Return
47	G047 (WH)	Injector #4
48	–	NOT USED
49	G049 (WH)	Injector #5
50	G050 (WH)	Indicator Light Switch Return
51	G051 (WH)	Injector #6
52	G052 (WH)	Indicator Light Switch Feed
53	G053 (WH)	Injector #7
54	G054 (WH)	NOT USED
55	G055 (WH)	Injector #8
56	G056 (WH)	NOT USED
57	G057 (BK)	Ground
58	G058 (WH)	NOT USED
59	G059 (BK)	Ground
60	G060 (WH)	NOT USED
61	G061 (BK)	Ground
62	G062 (BK)	Ground
63	G063 (BK)	Ground
64	G064 (BK)	Ground

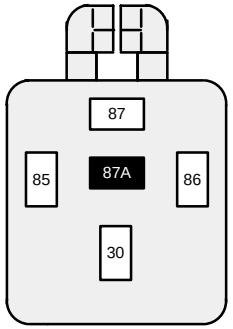

C4060

COLD START HEATER RELAY

PIN	CIRCUIT	CIRCUIT FUNCTION
30	G109 (WH)	Cold Start Heater
85	G007 (GY)	Compuvalve Module
86	G080 (WH)	Fuel Pump Cutoff
87	G002 (WH)	B (+) (Power)
87A	–	NOT USED

CONNECTOR REFERENCE LIST

CONNECTOR	SECTION-PAGE
C157	31-4
C182	29-5, 30-5
C183	29-5
C193	30-5
C224	130-5
C236	62-6
C237	62-6
C267	59-6
C915	102-2