AIR

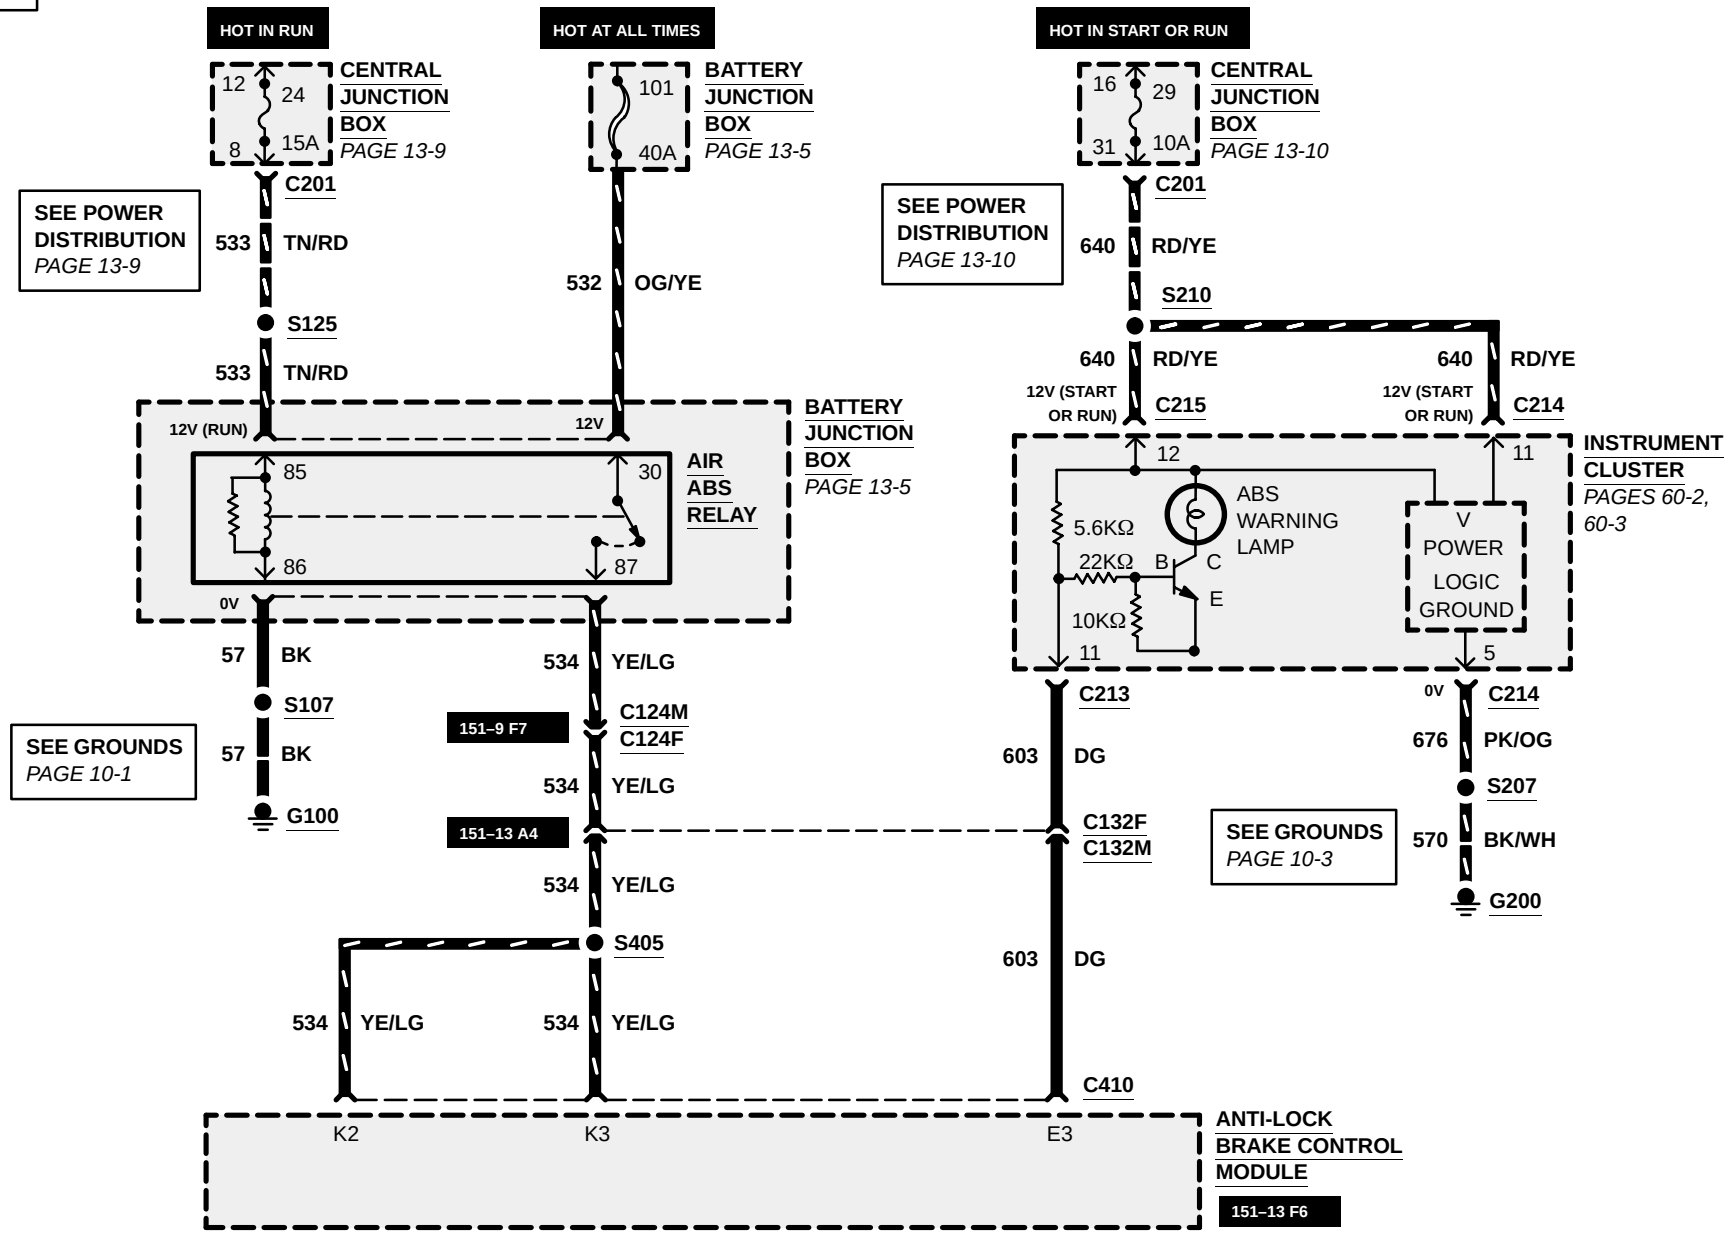
HOT IN RUN
HOT AT ALL TIMES
HOT IN START OR RUN
CENTRAL JUNCTION BOX
PAGE 13-9
BATTERY JUNCTION BOX
PAGE 13-5
CENTRAL JUNCTION BOX
PAGE 13-10
12
24
8
15A
101
40A
16
29
31
10A
SEE POWER DISTRIBUTION
PAGE 13-9
SEE POWER DISTRIBUTION
PAGE 13-10
C201
533 TN/RD
S125
533 TN/RD
532 OG/YE
640 RD/YE
S210
640 RD/YE
640 RD/YE
12V (START OR RUN)
C215
12V (START OR RUN)
C214
12V (RUN)
12V
BATTERY JUNCTION BOX
PAGE 13-5
85
30
86
87
AIR ABS RELAY
INSTRUMENT CLUSTER
PAGES 60-2, 60-3
12
11
5.6KΩ
22KΩ
10KΩ
ABS WARNING LAMP
B
C
E
V POWER
LOGIC GROUND
0V
57 BK
S107
57 BK
G100
SEE GROUNDS
PAGE 10-1
534 YE/LG
C124M
C124F
151–9 F7
534 YE/LG
151–13 A4
534 YE/LG
S405
534 YE/LG
534 YE/LG
C213
603 DG
C132F
C132M
603 DG
C410
0V
C214
676 PK/OG
S207
570 BK/WH
G200
SEE GROUNDS
PAGE 10-3
K2
K3
E3
ANTI-LOCK BRAKE CONTROL MODULE
151–13 F6