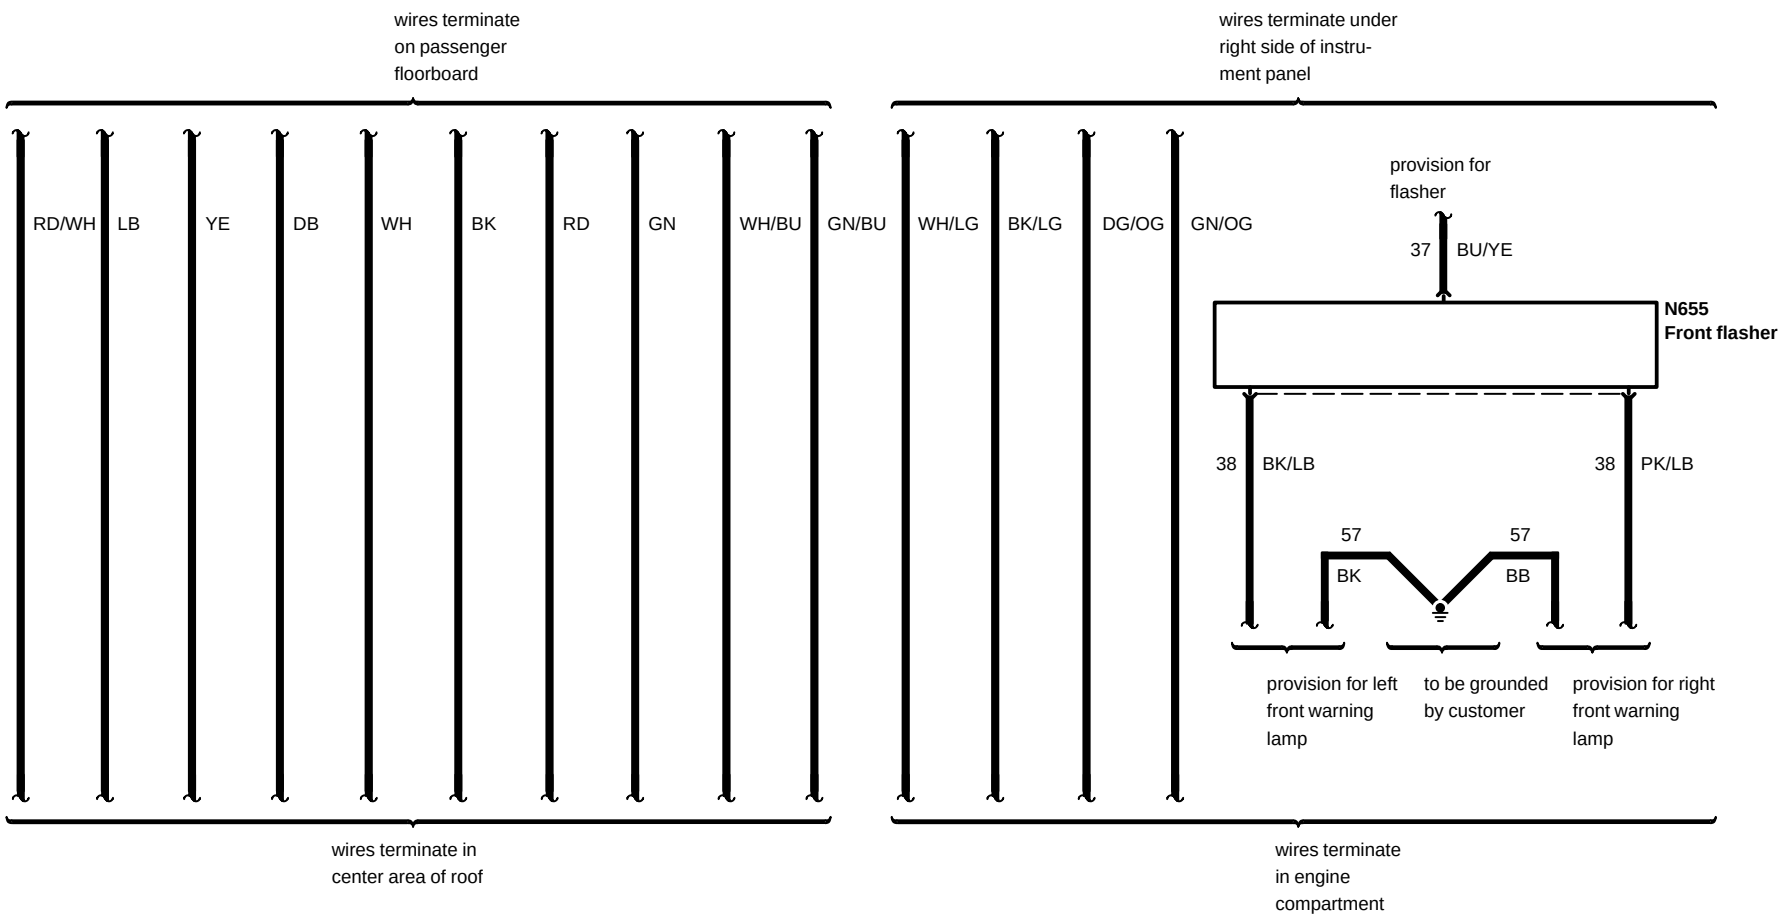
wires terminate on passenger floorboard
wires terminate under right side of instrument panel
RD/WH
LB
YE
DB
WH
BK
RD
GN
WH/BU
GN/BU
WH/LG
BK/LG
DG/OG
GN/OG
provision for flasher
37
BU/YE
N655
Front flasher
38
BK/LB
38
PK/LB
57
BK
57
BB
provision for left front warning lamp
to be grounded by customer
provision for right front warning lamp
wires terminate in center area of roof
wires terminate in engine compartment