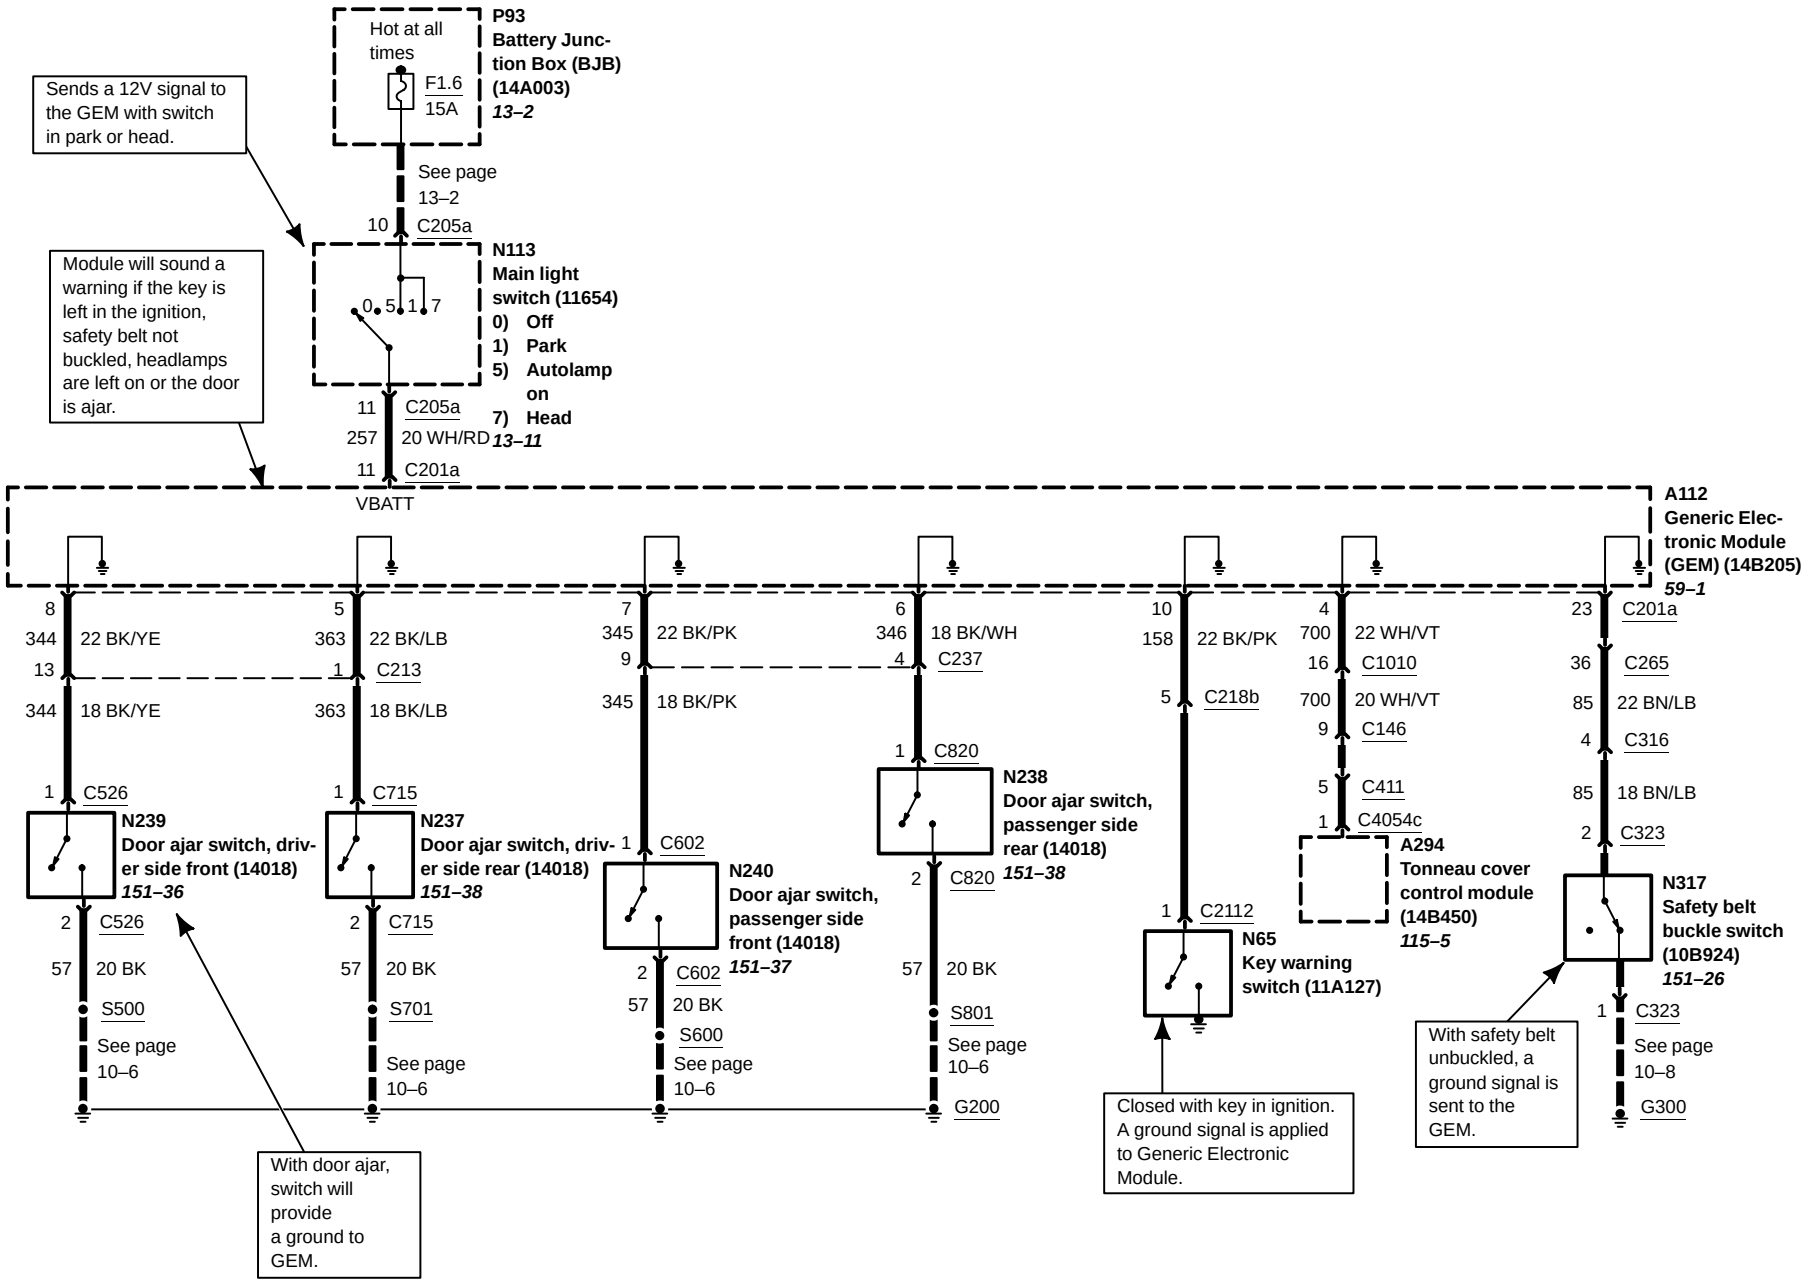
Hot at all times
F1.6
15A
P93
Battery Junction Box (BJB) (14A003)
13–2
Sends a 12V signal to the GEM with switch in park or head.
See page 13–2
10 C205a
Module will sound a warning if the key is left in the ignition, safety belt not buckled, headlamps are left on or the door is ajar.
N113
Main light switch (11654)
0) Off
1) Park
5) Autolamp on
7) Head
0 5 1 7
11 C205a
257 20 WH/RD
13–11
11 C201a
VBATT
A112
Generic Electronic Module (GEM) (14B205)
59–1
8 344 22 BK/YE 13 344 18 BK/YE 1 C526
N239
Door ajar switch, driver side front (14018)
151–36
2 C526 57 20 BK S500
See page 10–6
5 363 22 BK/LB 1 C213 363 18 BK/LB 1 C715
N237
Door ajar switch, driver side rear (14018)
151–38
2 C715 57 20 BK S701
See page 10–6
7 345 22 BK/PK 9 345 18 BK/PK 1 C602
N240
Door ajar switch, passenger side front (14018)
151–37
2 C602 57 20 BK S600
See page 10–6
6 346 18 BK/WH 4 C237 1 C820
N238
Door ajar switch, passenger side rear (14018)
151–38
2 C820 57 20 BK S801
See page 10–6
G200
With door ajar, switch will provide a ground to GEM.
10 158 22 BK/PK 5 C218b 1 C2112
N65
Key warning switch (11A127)
Closed with key in ignition. A ground signal is applied to Generic Electronic Module.
4 700 22 WH/VT 16 C1010 700 20 WH/VT 9 C146 5 C411 1 C4054c
A294
Tonneau cover control module (14B450)
115–5
23 C201a 36 C265 85 22 BN/LB 4 C316 85 18 BN/LB 2 C323
N317
Safety belt buckle switch (10B924)
151–26
1 C323
See page 10–8
G300
With safety belt unbuckled, a ground signal is sent to the GEM.