C973

15A404
17C712

E268
Roof marker lamp,
right center

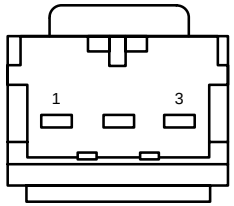

F03235

Pin	Circuit	Circuit function
1	57 (BK)	Ground
2	–	not used
3	14 (BN)	Power, Exterior lamps

C974

15A404
17C712

E17
Roof marker lamp,
right

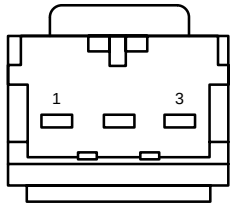

F03235

Pin	Circuit	Circuit function
1	57 (BK)	Ground
2	–	not used
3	14 (BN)	Power, Exterior lamps

C983

15B484

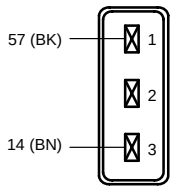

F03079

17C712

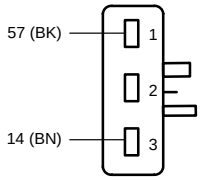

F03105.1

C984

15B484

E16
Roof marker lamp,
left

Lariat

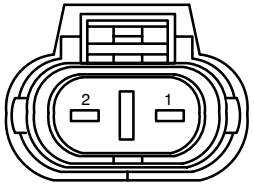

F02443

Pin	Circuit	Circuit function
1	57 (BK)	Ground
2	14 (BN)	Power, Exterior lamps

C985

15B484

E266
Roof marker lamp,
left center

Lariat

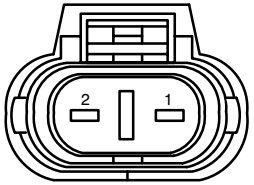

F02443

Pin	Circuit	Circuit function
1	57 (BK)	Ground
2	14 (BN)	Power, Exterior lamps

C986

15B484

E267
Roof marker lamp,
center

Lariat

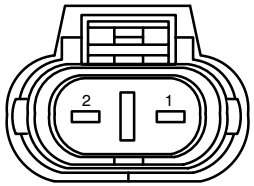

F02443

Pin	Circuit	Circuit function
1	57 (BK)	Ground
2	14 (BN)	Power, Exterior lamps