SUPERCREWZER

CONNECTOR REFERENCE LIST

CONNECTOR	SECTION-PAGE
C206	13-35
C242	13-37
C246	13-37

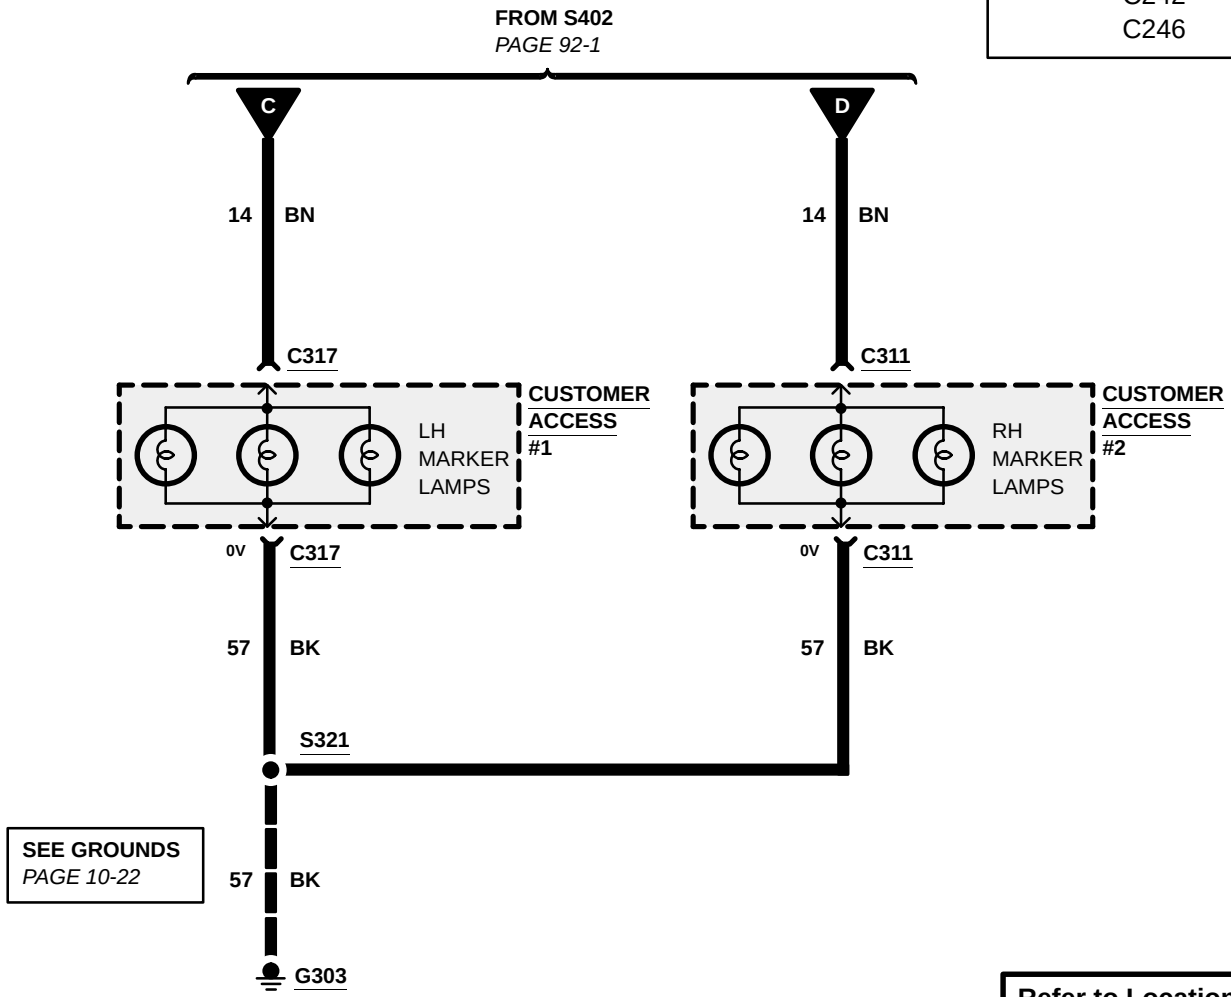

Refer to Location Index, Cell 152, for Component, Connector, Splice, Ground and Base Part Number descriptions and locations.