160-1 VEHICLE REPAIR LOCATION CODES

VEHICLE REPAIR LOCATION CODES

TO PINPOINT THE ACTUAL VEHICLE LOCATION OF A REPAIR, THE VEHICLE REPAIR LOCATION CODE IS REQUIRED.

FOR EXAMPLE, AN "X" HAS BEEN PLACED IN THE QUADRANT OF THE VEHICLE DIAGRAMS INDICATING THE LOCATION OF THE REPAIR. SEE DIAGRAMS.

LOCATION CODE, FOR THE EXAMPLE IS: A5/FU — (UNDER THE FLOOR OF DRIVER'S LEFT FOOT.)

FRONT/REAR DIRECTION

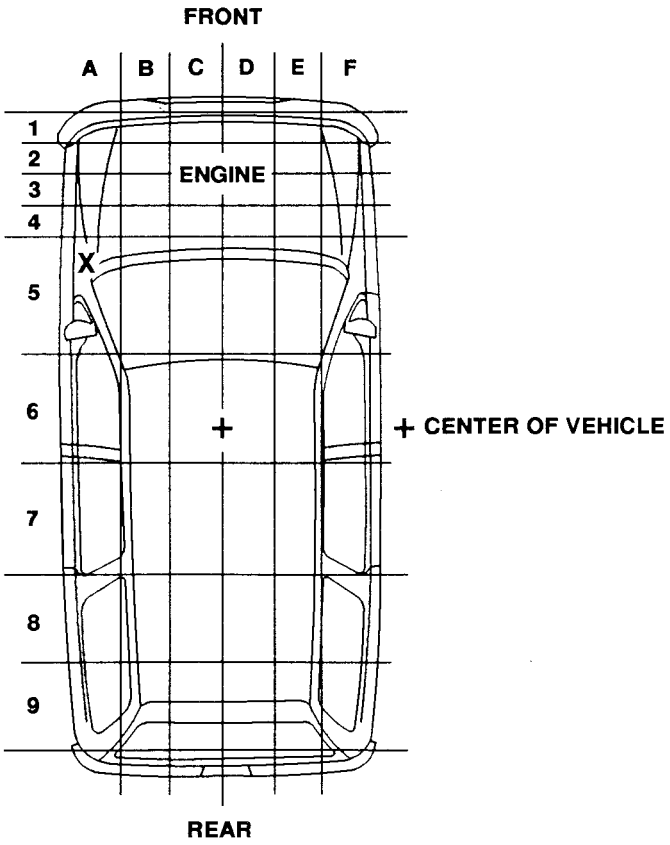

OVER/UNDER DIRECTION

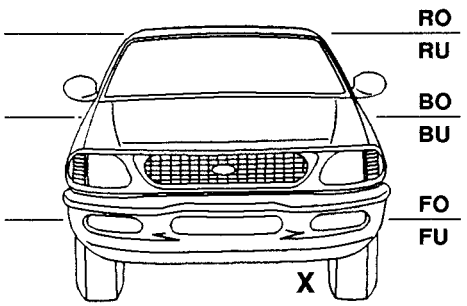

R = ROOF LINE
RO = ROOF OVER
RU = ROOF UNDER

B = BELT LINE
BO = BELT OVER
BU = BELT UNDER

F = FLOOR PAN
FO = FLOOR OVER
FU = FLOOR UNDER

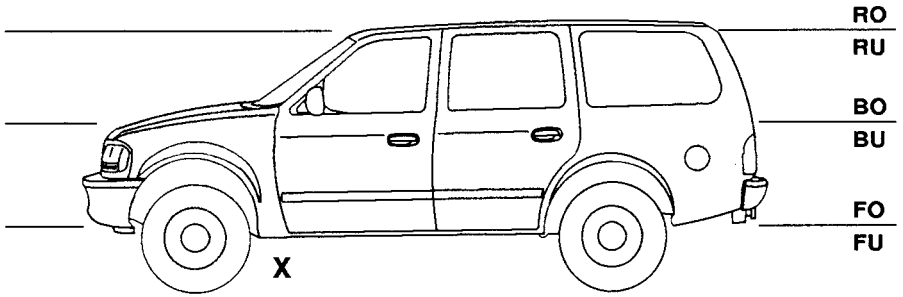

SIDE VIEW

EXPEDITION/NAVIGATOR
FCS–12886–01