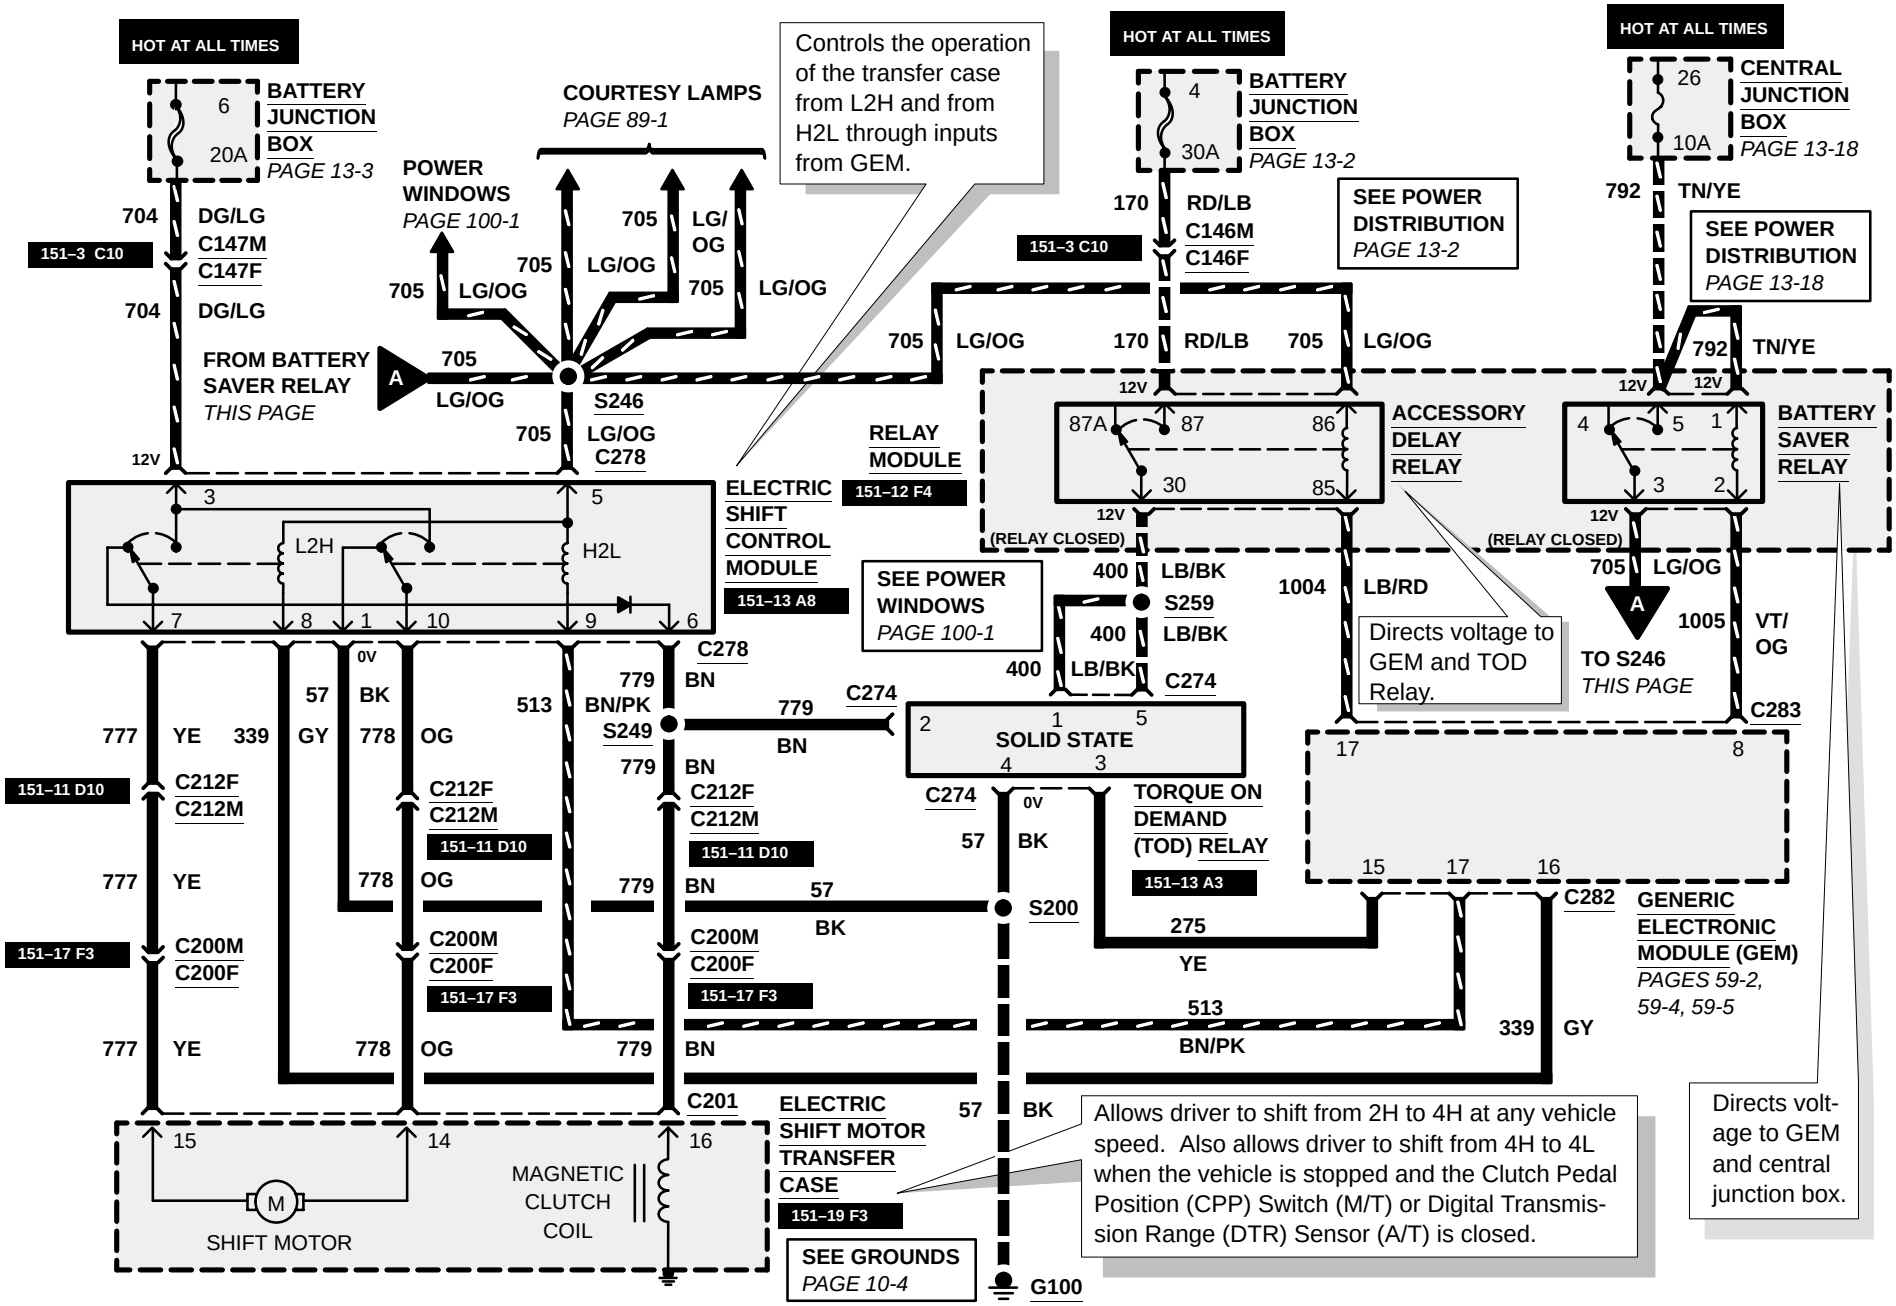
HOT AT ALL TIMES
BATTERY JUNCTION BOX
PAGE 13-3
6
20A
704
DG/LG
C147M
C147F
151–3 C10
704
DG/LG
FROM BATTERY SAVER RELAY
THIS PAGE
A
12V
COURTESY LAMPS
PAGE 89-1
POWER WINDOWS
PAGE 100-1
705
LG/OG
705
LG/OG
705
LG/OG
705
LG/OG
S246
705
LG/OG
C278
Controls the operation of the transfer case from L2H and from H2L through inputs from GEM.
HOT AT ALL TIMES
BATTERY JUNCTION BOX
PAGE 13-2
4
30A
170
RD/LB
C146M
C146F
151–3 C10
SEE POWER DISTRIBUTION
PAGE 13-2
705
LG/OG
170
RD/LB
705
LG/OG
HOT AT ALL TIMES
CENTRAL JUNCTION BOX
PAGE 13-18
26
10A
792
TN/YE
SEE POWER DISTRIBUTION
PAGE 13-18
792
TN/YE
12V
12V
12V
87A
87
86
30
85
ACCESSORY DELAY RELAY
4
5
1
3
2
BATTERY SAVER RELAY
12V
12V
(RELAY CLOSED)
(RELAY CLOSED)
RELAY MODULE
151–12 F4
ELECTRIC SHIFT CONTROL MODULE
151–13 A8
3
5
L2H
H2L
7
8
1
10
9
6
SEE POWER WINDOWS
PAGE 100-1
400
LB/BK
S259
400
LB/BK
400
LB/BK
C274
1004
LB/RD
Directs voltage to GEM and TOD Relay.
705
LG/OG
A
1005
VT/OG
TO S246
THIS PAGE
C283
17
8
0V
57
BK
513
779
BN/PK
S249
779
BN
C278
C274
779
BN
2
1
5
SOLID STATE
4
3
C274
0V
57
BK
TORQUE ON DEMAND (TOD) RELAY
151–13 A3
777
YE
339
GY
778
OG
C212F
C212M
151–11 D10
779
BN
C212F
C212M
151–11 D10
C212F
C212M
151–11 D10
15
17
16
C282
GENERIC ELECTRONIC MODULE (GEM)
PAGES 59-2, 59-4, 59-5
777
YE
778
OG
779
BN
57
BK
S200
275
YE
C200M
C200F
151–17 F3
C200M
C200F
151–17 F3
C200M
C200F
151–17 F3
513
BN/PK
339
GY
777
YE
778
OG
779
BN
C201
ELECTRIC SHIFT MOTOR TRANSFER CASE
151–19 F3
57
BK
15
14
16
M
SHIFT MOTOR
MAGNETIC CLUTCH COIL
Allows driver to shift from 2H to 4H at any vehicle speed. Also allows driver to shift from 4H to 4L when the vehicle is stopped and the Clutch Pedal Position (CPP) Switch (M/T) or Digital Transmission Range (DTR) Sensor (A/T) is closed.
Directs voltage to GEM and central junction box.
SEE GROUNDS
PAGE 10-4
G100