C438 (BK)

12A690

B120
Transmission range sensor

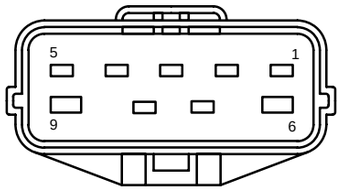

F09018

Pin	Circuit	Circuit Function
1	15-TA18 (GN/OG)	Voltage, ignition switch in Start or Run (not overload protected)
2	15S-TA40 (GN/BK)	Voltage, ignition switch in Start or Run (not overload protected), switched
3	15S-TA42 (GN/WH)	Voltage, ignition switch in Start or Run (not overload protected), switched
4	15S-TA38 (GN/BU)	Voltage, ignition switch in Start or Run (not overload protected), switched
5	15S–TA37A (GN/YE)	Voltage, ignition switch in Start or Run (not overload protected), switched
6	50-BB14 (GY/RD)	Voltage, ignition switch in Start (not overload protected)
7	15S-TA41 (GN/OG)	Voltage, ignition switch in Start or Run (not overload protected), switched
8	15S-TA39 (GN/RD)	Voltage, ignition switch in Start or Run (not overload protected), switched
9	50S-BB12 (GY)	Voltage, ignition switch in Start (not overload protected), switched

C439 (BK)

12A690

A40
Transmission hard-ware unit

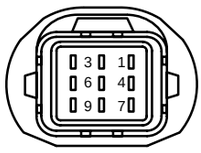

F09020

Pin	Circuit	Circuit Function
1	15S-TA65 (GN/WH)	Voltage, ignition switch in Start or Run (not overload protected), switched
2	15S-TA17 (GN/OG)	Voltage, ignition switch in Start or Run (not overload protected), switched
3	15S-TA63 (GN/BK)	Voltage, ignition switch in Start or Run (not overload protected), switched
4	9-TA36 (BN/GN)	Sensor signal return (reference/ground)
5	8-TA36 (WH/GN)	Sensor signal
6	15S-TA23 (GN/YE)	Voltage, ignition switch in Start or Run (not overload protected), switched
7	91S-TA17 (BK/RD)	Ground, switched
8	15S-TA24 (GN/BU)	Voltage, ignition switch in Start or Run (not overload protected), switched
9	15S-TA64 (GN/OG)	Voltage, ignition switch in Start or Run (not overload protected), switched