C864

with B5 manual transmission

12A690, 9H589

N321
Park/Neutral Position (PNP) switch

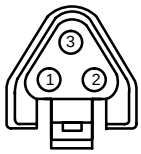

F03015

Pin	Circuit	Circuit Function
1	15S-LG3 (GN/YE)	Voltage, ignition switch in Start or Run (not overload protected), switched
2	15-LG28 (GN/WH)	Voltage, ignition switch in Start or Run (not overload protected)
3	–	not used

with MTX manual transmission



F02058

Pin	Circuit	Circuit Function
1	15S-LG3 (GN/YE)	Voltage, ignition switch in Start or Run (not overload protected), switched
2	15-LG28 (GN/WH)	Voltage, ignition switch in Start or Run (not overload protected)

F03093

C870

12A522, 12A690

O5
Generator

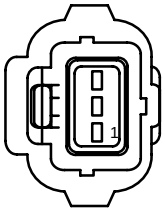

Pin	Circuit	Circuit Function
1	4-EB6 (GY)	Data link, bus positive
2	5-EB6 (BU)	Data link, bus negative
3	30-BA10 (RD)	Voltage supplied at all times (not overload protected)

C882

14K733

N76
Dual pressure switch

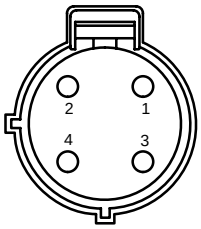

F04030

Pin	Circuit	Circuit Function
1	8-PA13 (WH/RD)	Sensor signal
	15S-FA38 (GN/RD)	Voltage, ignition switch in Start or Run (not overload protected), switched
2	–	not used
3	9-PA13 (BN/RD)	Sensor signal return (reference/ground)
4	15S-RE8 (GN/YE)	Voltage, ignition switch in Start or Run (not overload protected), switched
	15S-FA17 (GN/RD)	Battery voltage, hot in Start and Run only (not overload protected), switched

C887

14335

E87
Cargo space lamp



F01005

Pin	Circuit	Circuit Function
1	29-LB6 (OG/YE)	Voltage supplied at all times (overload protected)