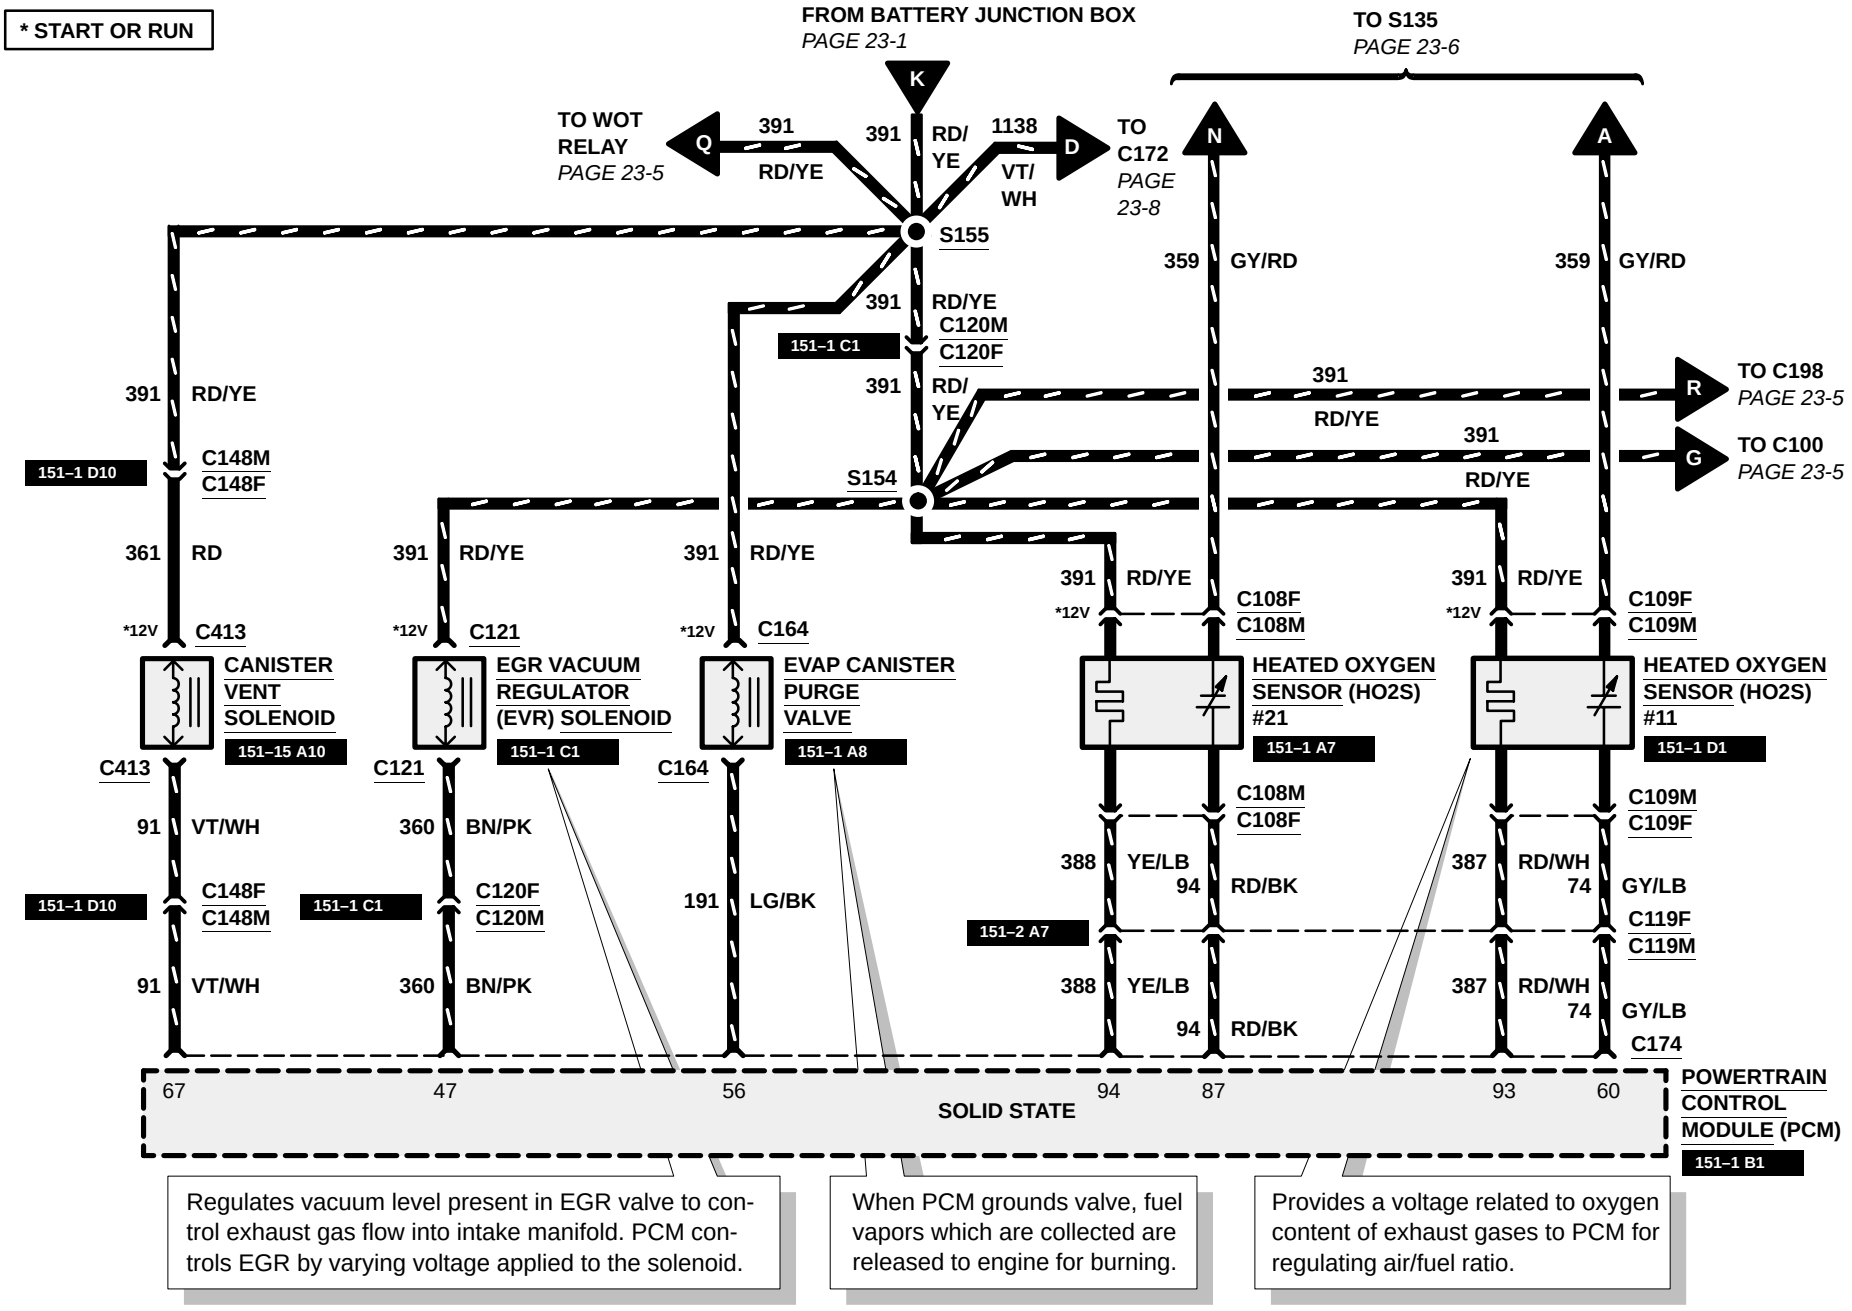
* START OR RUN
FROM BATTERY JUNCTION BOX
PAGE 23-1
TO S135
PAGE 23-6
TO WOT RELAY
PAGE 23-5
TO C172
PAGE 23-8
TO C198
PAGE 23-5
TO C100
PAGE 23-5
S155
S154
C120M
C120F
C148M
C148F
C413
C121
C164
C108F
C108M
C109F
C109M
C119F
C119M
C174
CANISTER VENT SOLENOID
EGR VACUUM REGULATOR (EVR) SOLENOID
EVAP CANISTER PURGE VALVE
HEATED OXYGEN SENSOR (HO2S) #21
HEATED OXYGEN SENSOR (HO2S) #11
POWERTRAIN CONTROL MODULE (PCM)
SOLID STATE
151–1 C1
151–1 D10
151–15 A10
151–1 A8
151–1 A7
151–1 D1
151–2 A7
151–1 B1
391 RD/YE
1138 VT/WH
359 GY/RD
361 RD
91 VT/WH
360 BN/PK
191 LG/BK
388 YE/LB
94 RD/BK
387 RD/WH
74 GY/LB
*12V
67
47
56
94
87
93
60
Regulates vacuum level present in EGR valve to control exhaust gas flow into intake manifold. PCM controls EGR by varying voltage applied to the solenoid.
When PCM grounds valve, fuel vapors which are collected are released to engine for burning.
Provides a voltage related to oxygen content of exhaust gases to PCM for regulating air/fuel ratio.