C220c

14401

A30
Instrument cluster

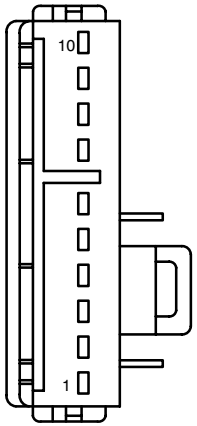

F10024

Pin	Circuit	Circuit function
1	640 (RD/YE)	Voltage supplied in Start and Run (overload protected)
2	584 (YE)	Voltage supplied in Start and Run (overload protected)
3	904 (LG/RD)	Generator/Battery indicator, control
4	608 (BK/YE)	Air bag indicator, control
5	977 (VT/WH)	Brake indicator, control
6	603 (DG)	Anti–lock brake indicator, control
7	1001 (WH/YE)	Voltage supplied at all times (overload protected)
8	398 (BK/YE)	Ground
9	–	not used
10	871 (YE)	Safety belt indicator, control

C237 (BK)

14A005
14A488

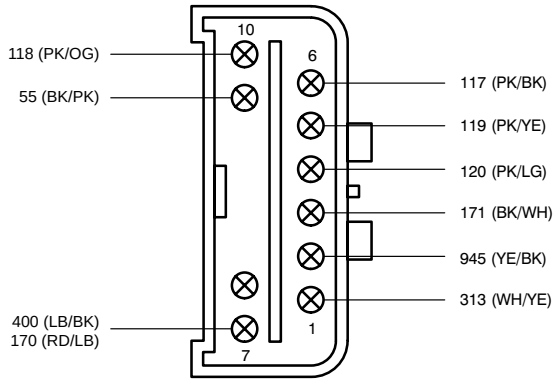

F10025

14630

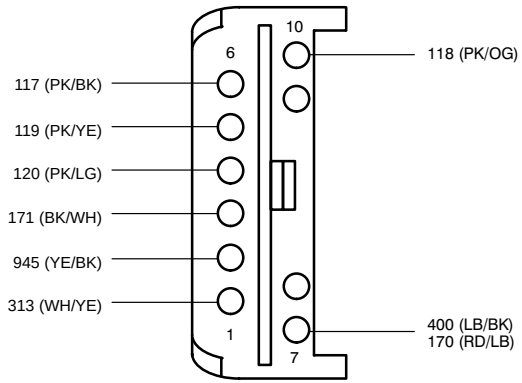

F10009