C936

14401

N208
Start inhibit switch

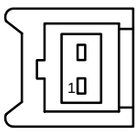

F02012

Pin	Circuit	Circuit Function
1	31S-BB16 (BK/RD)	Ground, switched
2	31S-BB6 (BK/YE) +	Ground, switched
	31S-BB16A (BK/RD)	Ground, switched
	31S-BB16A (BK/RD)	Ground, switched

C937

14A584

Y28
Speaker, left front



F02058

Pin	Circuit	Circuit Function
1	8-MD28 (WH)	Sensor signal
2	10-MD28 (GY)	Signal 2 (Y–direction, reverse, downward)

C938

14A584

Y18
Speaker, right front



F02058

Pin	Circuit	Circuit Function
1	8-MD28 (WH)	Sensor signal
2	10-MD28 (GY)	Signal 2 (Y–direction, reverse, downward)

C939

14014, 14A584

Y17
Speaker, left rear



F02058

Pin	Circuit	Circuit Function
1	8-MD11 (WH/VT)	Sensor signal
	8-MD29 (WH/VT)	Sensor signal
2	10-MD11 (GY/WH)	Signal 2 (Y–direction, reverse, downward)
	10-MD29 (GY/WH)	Signal 2 (Y–direction, reverse, downward)

C940

14014

Y19
Speaker, right rear



F02058

Pin	Circuit	Circuit Function
1	8-MD18 (WH)	Sensor signal
2	10-MD18 (GY)	Signal 2 (Y–direction, reverse, downward)