C108

12B637

Knock sensor 2
(6G004)

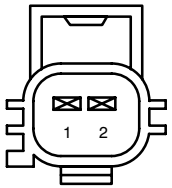

F02066

Pin	Circuit	Circuit function
1	8-RJ19 (WH/RD)	Knock sensor 2 (6G004), feed
2	10-RJ19 (GY/RD)	Signal return

C109

12B637

Knock sensor 1
(6G004)

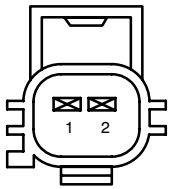

F02066

Pin	Circuit	Circuit function
1	8-RJ18 (WH/BK)	Knock sensor 1 (6G004), feed
2	10-RJ18 (GY/BK)	Signal return

C110 GY

13076

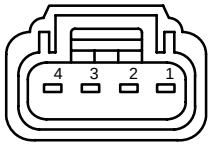

F04162

(1) 31S-LG11 (BK/WH)
(2) 31S-LF7 (BK/BU)
(3) 29S-LF7 (OG/BU)
(4) –



F04377

(1) 31S-LG18 (BK/YE)
(2) 31S-LF16 (BK/RD)
(3) 29S-LF16 (OG/GN)
(4) –

C111

12B637

Coil On Plug (COP) 1
(12029)

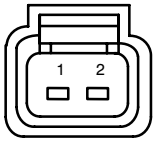

F02331

Pin	Circuit	Circuit function
1	91S-RR5 (BN)	Coil On Plug (COP) 1 (12029), control
2	15-RR5 (GN/YE)	Voltage supplied in Start and Run (overload protected)

C112

12B637

Coil On Plug (COP)
2 (12029)

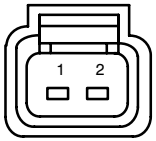

F02331

Pin	Circuit	Circuit function
1	91S-RR6 (BN/RD)	Coil On Plug (COP) 2 (12029), control
2	15-RR6 (GN/BU)	Voltage supplied in Start and Run (overload protected)

C113

13B637

Coil On Plug (COP)
3 (12029)

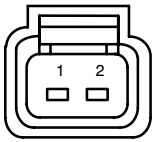

F02331

Pin	Circuit	Circuit function
1	91S-RR7 (BN/BU)	Coil On Plug (COP) 3 (12029), control
2	15-RR7 (GN/RD)	Voltage supplied in Start and Run (overload protected)