C118

12B637

P73
Coil On Plug (COP)
8 (12029)

F02183

Pin	Circuit	Circuit Function
1	91S-RR12 (BN/RD)	Ground, Switched
2	15-RR12 (GN/BU)	Voltage, ignition switch in Start or Run (not overload protected)

C119

12B637

Y218
Inlet air control valve solenoid

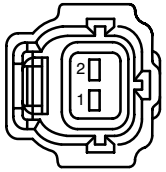

F02091

Pin	Circuit	Circuit Function
1	15S-RL19 (GN/YE)	Voltage, ignition switch in Start or Run (not overload protected), Switched
2	91S-RL19 (BN)	Ground, Switched

C120

14290

Y69
Power steering valve solenoid
(3783)

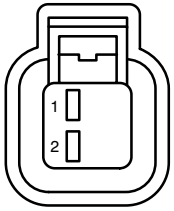

F02069

Pin	Circuit	Circuit Function
1	8-CE9 (WH/GN)	Sensor signal
2	9-CE9 (BN/GN)	Sensor signal return (reference/ground)

C122

14290

M87
Speed control servo
(9C735)

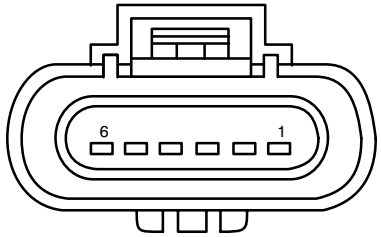

F06069

Pin	Circuit	Circuit Function
1	15S-PG12 (GN/WH)	Voltage, ignition switch in Start or Run (not overload protected), Switched
2	10-PG21 (GY/OG)	Signal 2 (Y–direction, reverse, downward)
3	8-PG21 (WH/GN)	Sensor signal
4	10-PG12 (GY/WH)	Signal 2 (Y–direction, reverse, downward)
5	8-PG12 (WH/VT)	Sensor signal
6	29S-PG16 (OG/YE)	Voltage supplied at all times (overload protected), Switched

C123

14290

Y134
EVAP canister purge valve

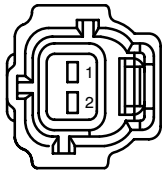

F02103

Pin	Circuit	Circuit Function
1	15S-RL25 (GN/BU)	Voltage, ignition switch in Start or Run (not overload protected), Switched
2	91S–RL25 (BK/BU)	Ground, Switched