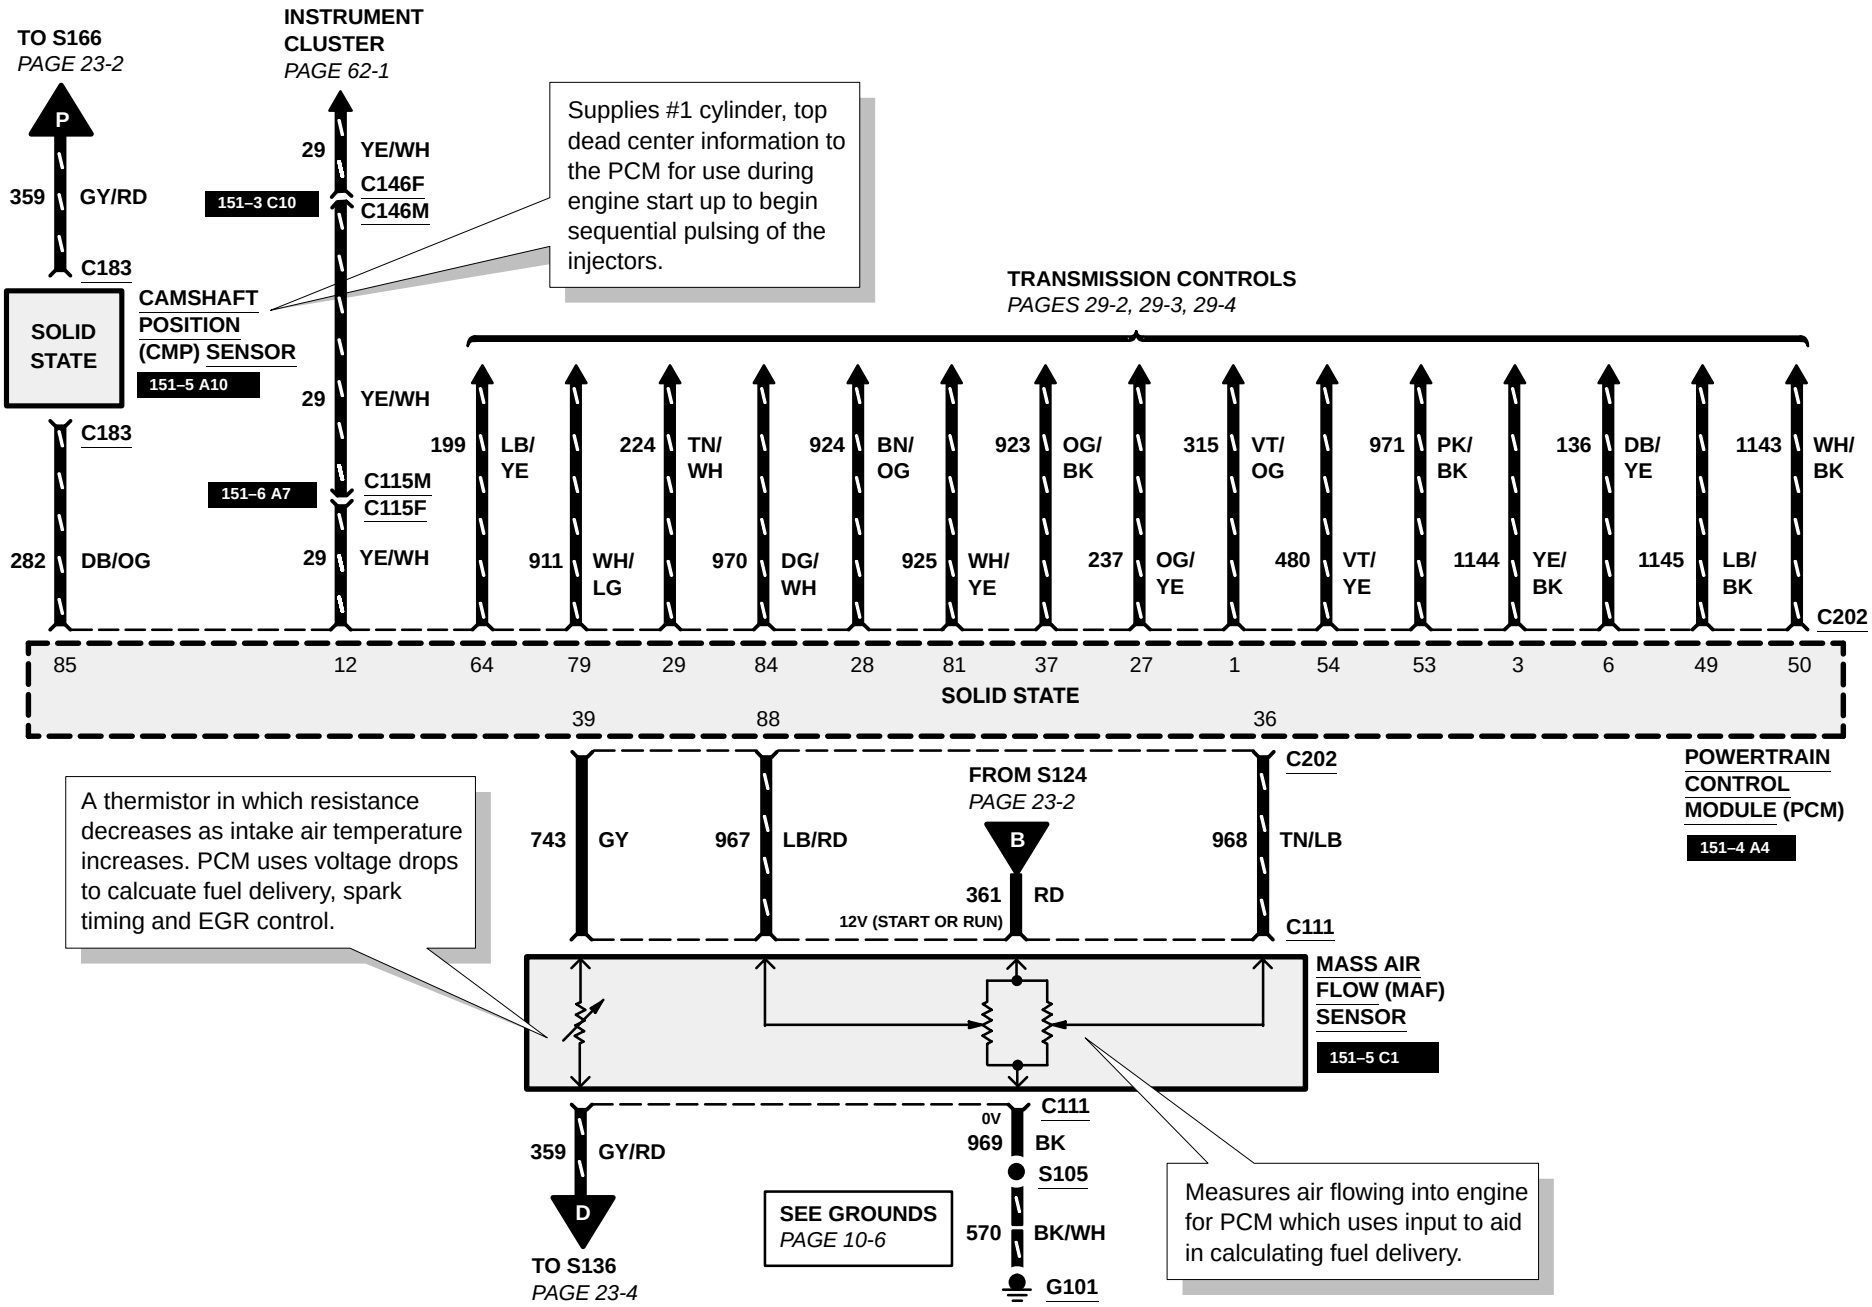
TO S166
PAGE 23-2
INSTRUMENT CLUSTER
PAGE 62-1
P
359 GY/RD
C183
SOLID STATE
CAMSHAFT POSITION (CMP) SENSOR
151–5 A10
C183
282 DB/OG
151–3 C10
29 YE/WH
C146F
C146M
151–6 A7
C115M
C115F
29 YE/WH
29 YE/WH
Supplies #1 cylinder, top dead center information to the PCM for use during engine start up to begin sequential pulsing of the injectors.
TRANSMISSION CONTROLS
PAGES 29-2, 29-3, 29-4
199 LB/YE
224 TN/WH
924 BN/OG
923 OG/BK
315 VT/OG
971 PK/BK
136 DB/YE
1143 WH/BK
911 WH/LG
970 DG/WH
925 WH/YE
237 OG/YE
480 VT/YE
1144 YE/BK
1145 LB/BK
C202
85 12 64 79 29 84 28 81 37 27 1 54 53 3 6 49 50
SOLID STATE
39 88 36
A thermistor in which resistance decreases as intake air temperature increases. PCM uses voltage drops to calcuate fuel delivery, spark timing and EGR control.
743 GY
967 LB/RD
FROM S124
PAGE 23-2
B
361 RD
12V (START OR RUN)
968 TN/LB
C202
C111
POWERTRAIN CONTROL MODULE (PCM)
151–4 A4
MASS AIR FLOW (MAF) SENSOR
151–5 C1
C111
0V
969 BK
S105
570 BK/WH
G101
359 GY/RD
D
TO S136
PAGE 23-4
SEE GROUNDS
PAGE 10-6
Measures air flowing into engine for PCM which uses input to aid in calculating fuel delivery.