C706 (GY)

14632

Sliding door contact switch, left

Late production



F08307

Pin	Circuit	Circuit function
1	1252 (GY/RD)	Module, power sliding door, LH side, to, Latch/unlatch motor, LH
2	1227 (WH)	Detent switch, LH, to, Module, power sliding door, LH side
3	1251 (YE/RD)	Power sliding door motor, return
4	825 (TN/LG)	Speaker, left rear (18808) +
5	1385 (LG)	Rear Electronic Module (REM), to, Door lock actuator assembly, left sliding door, Lock
6	803 (BN/PK)	Speaker, left rear (18808) –
7	1386 (OG)	Rear Electronic Module (REM), to, Door lock actuator assembly, right sliding door, Unlock
8	–	not used

Early production

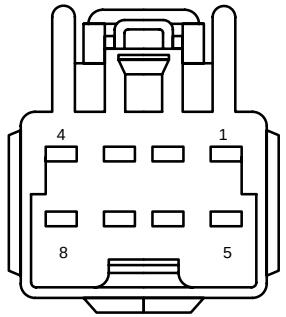

F08132

Pin	Circuit	Circuit function
1	1252 (GY/RD)	Rear Electronic Module (REM), to, Door lock actuator assembly, left sliding door, Unlock
2	1227 (WH)	Speaker, left rear (18808) +
3	–	not used
4	825 (TN/LG)	Power sliding door motor, return
5	1385 (LG)	Rear Electronic Module (REM), to, Door lock actuator assembly, left sliding door, Lock
6	803 (BN/PK)	Speaker, left rear (18808) –
7	1386 (OG)	Detent switch, LH, to, Module, power sliding door, LH side
8	–	Module, power sliding door, LH side, to, Latch/unlatch motor, LH