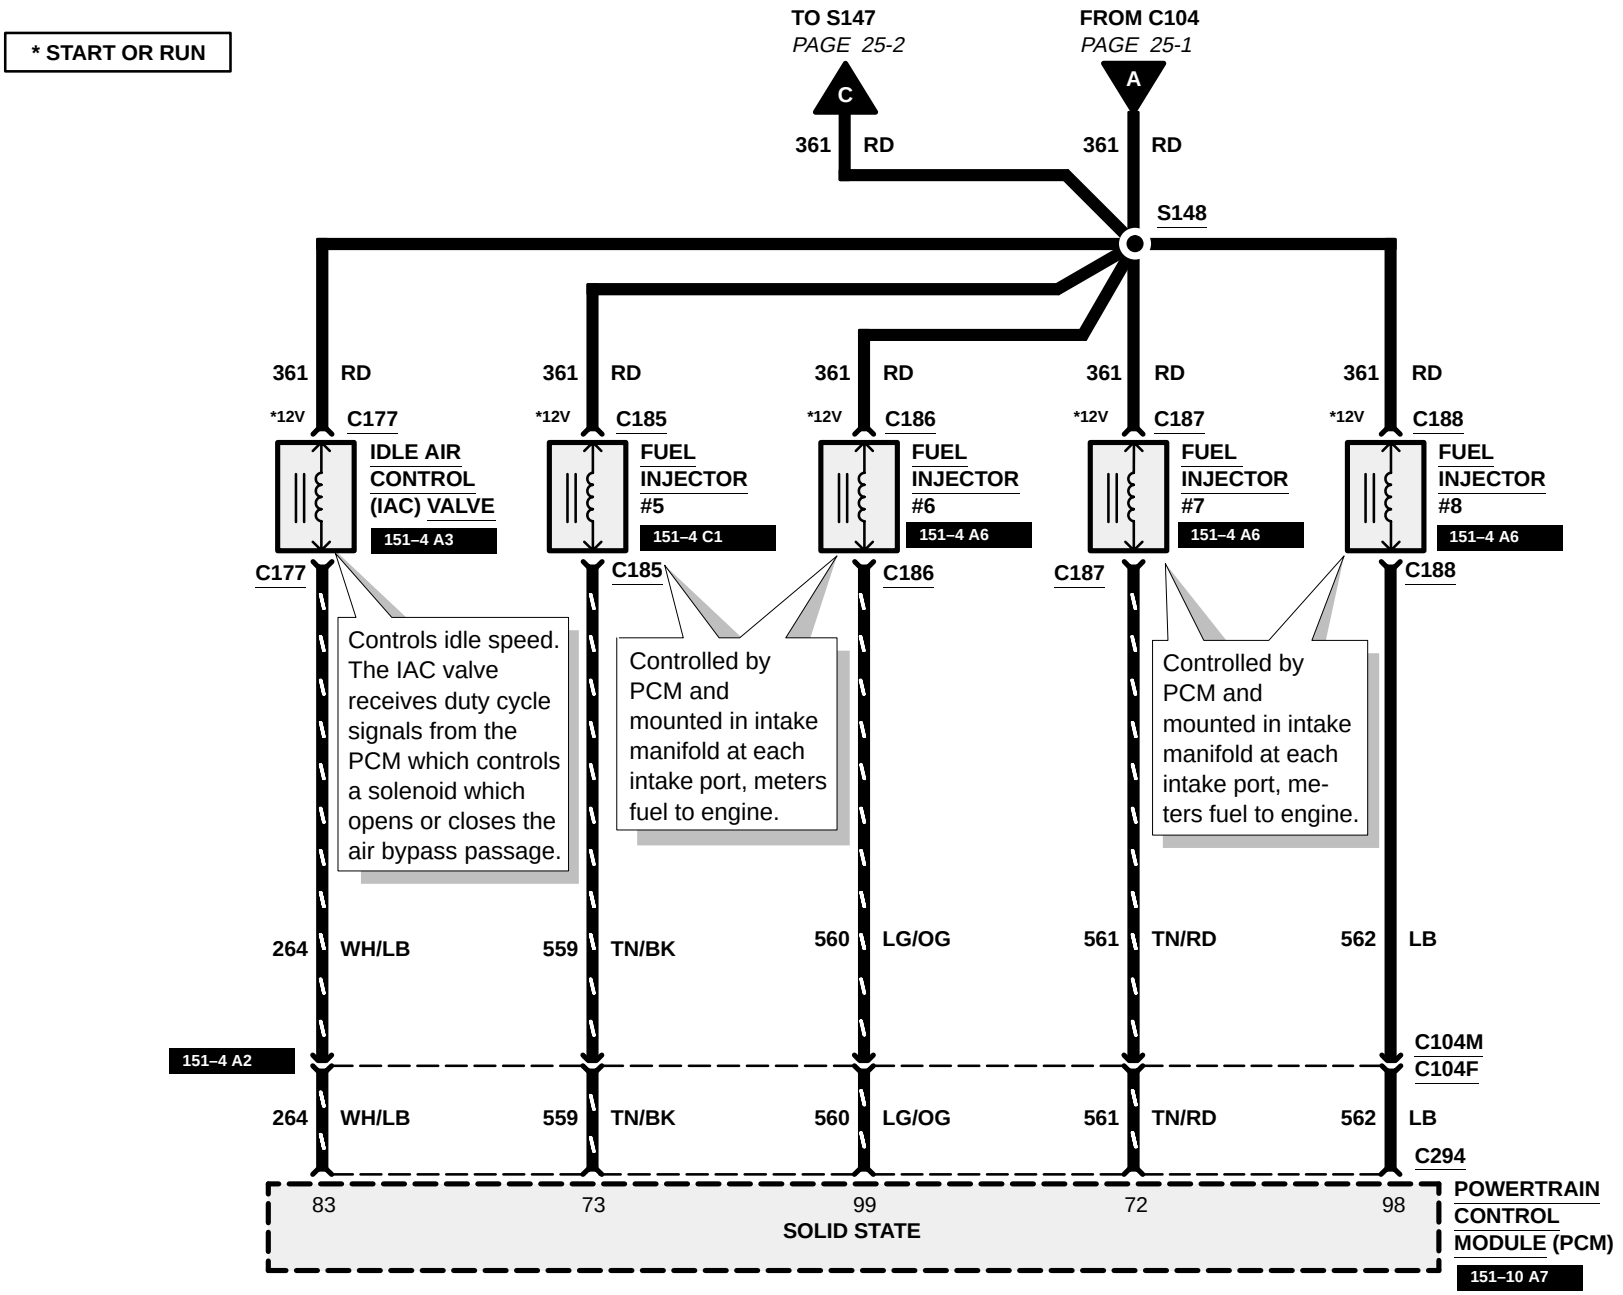
* START OR RUN
TO S147
PAGE 25-2
FROM C104
PAGE 25-1
C
A
361 RD
361 RD
S148
361 RD
*12V
C177
IDLE AIR CONTROL (IAC) VALVE
151–4 A3
361 RD
*12V
C185
FUEL INJECTOR #5
151–4 C1
361 RD
*12V
C186
FUEL INJECTOR #6
151–4 A6
361 RD
*12V
C187
FUEL INJECTOR #7
151–4 A6
361 RD
*12V
C188
FUEL INJECTOR #8
151–4 A6
C177
C185
C186
C187
C188
Controls idle speed. The IAC valve receives duty cycle signals from the PCM which controls a solenoid which opens or closes the air bypass passage.
Controlled by PCM and mounted in intake manifold at each intake port, meters fuel to engine.
Controlled by PCM and mounted in intake manifold at each intake port, meters fuel to engine.
264 WH/LB
559 TN/BK
560 LG/OG
561 TN/RD
562 LB
151–4 A2
C104M
C104F
264 WH/LB
559 TN/BK
560 LG/OG
561 TN/RD
562 LB
C294
83
73
99
72
98
SOLID STATE
POWERTRAIN CONTROL MODULE (PCM)
151–10 A7