## C1041

**14290**
**14398**

E7
Headlamp, right

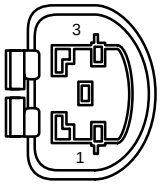


F03169

| Pin | Circuit | Circuit Function |
|---|---|---|
| 1 | 12 (LG/BK) | Power, Hot with High Beams on |
| 2 | 57 (BK) | Ground |
| 3 | 1056 (DB/LG) | Headlamp, right - fused feed |

## C1043

**14290**
**14398**

E166
Park/turn lamp, right front

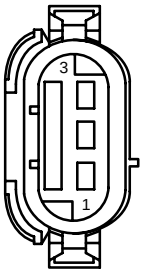


F03099

| Pin | Circuit | Circuit Function |
|---|---|---|
| 1 | 57 (BK) | Ground |
| 2 | 14 (BN) | Power, Exterior lamps |
| 3 | 2 (WH/LB) | Turn lamps, feed, right front |

## C1051

**14290**
**14398**

K4
Fuel pump relay

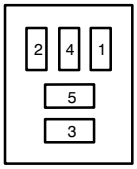


F05064

| Pin | Circuit | Circuit Function |
|---|---|---|
| 1 | 361 (RD) | Voltage supplied in Start and Run (overload protected) |
| 2 | 926 (LB/OG) | Fuel pump relay, control |
| 3 | 1059 (LB/OG) | Voltage supplied at all times (overload protected) |
| 4 | – | not used |
| 5 | 238 (DG/YE) | Fuel pump relay, switched power, output |

## C1056

**14290**
**14398**

K305
High speed fan control relay

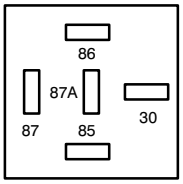


F05051

| Pin | Circuit | Circuit Function |
|---|---|---|
| 87 | 57 (BK) | Ground |
| 87A | 515 (OG/RD) | Resistor, Blower motor, High |
| 85 | 261 (OG/BK) | Blower motor, to switch - High |
| 86 | 371 (PK/WH) | Blower motor relay, switched output |
| 30 | 536 (BK/LG) | Blower motor relay, Blower motor |

## C1061 (BN)

**12B637**

B227
Engine Coolant Temperature (ECT) sender

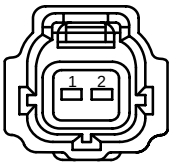


F02091

| Pin | Circuit | Circuit Function |
|---|---|---|
| 1 | 39 (RD/WH) | Engine Coolant Temperature (ECT) sender, input |
| 2 | 570 (BK/WH) | Ground |

## C1064 (GY)

**12B637**

B10
Engine Coolant Temperature (ECT) sensor

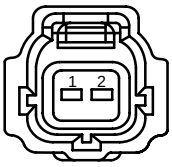


F02091

| Pin | Circuit | Circuit Function |
|---|---|---|
| 1 | 354 (LG/RD) | Engine Coolant Temperature (ECT) sensor, input |
| 2 | 359 (GY/RD) | signal, return |