118-1 PRESSURE ALERT SYSTEM

2001 CONTINENTAL

For diagnostic information, refer to Section 413-09 of the Workshop Manual.

The Pressure Alert System has five main components: The module mounted in the aft section of the overhead console and four pressure transmitters mounted to the drop well inside the tire cavity of each of four wheels. The module performs the following functions:

- Monitors the four transmitter's pressure readings.
- Controls the "Low Pressure" warning lamp in the over head console.
- Controls the "Warning Low Tire Pressure" warning message in the message center.
- Illuminates the warning lamp if a transmitter reports a tire pressure of 18 PSI or less.
- Illuminates the warning lamp and activates the warning message, if a transmitter or module fails.
- Flashes the warning lamp if a transmitter reports a tire pressure of 10 PSI or less.
- Turns off the warning lamp on ignition cycle, if tire pressure rises above 25 PSI, or if the failed transmitter is repaired or replaced.
- Activates the warning message if a transmitter reports a tire pressure of 10 PSI or less ('96).
- Turns off the warning message on ignition cycle or if the tire pressure rises above 25 PSI.

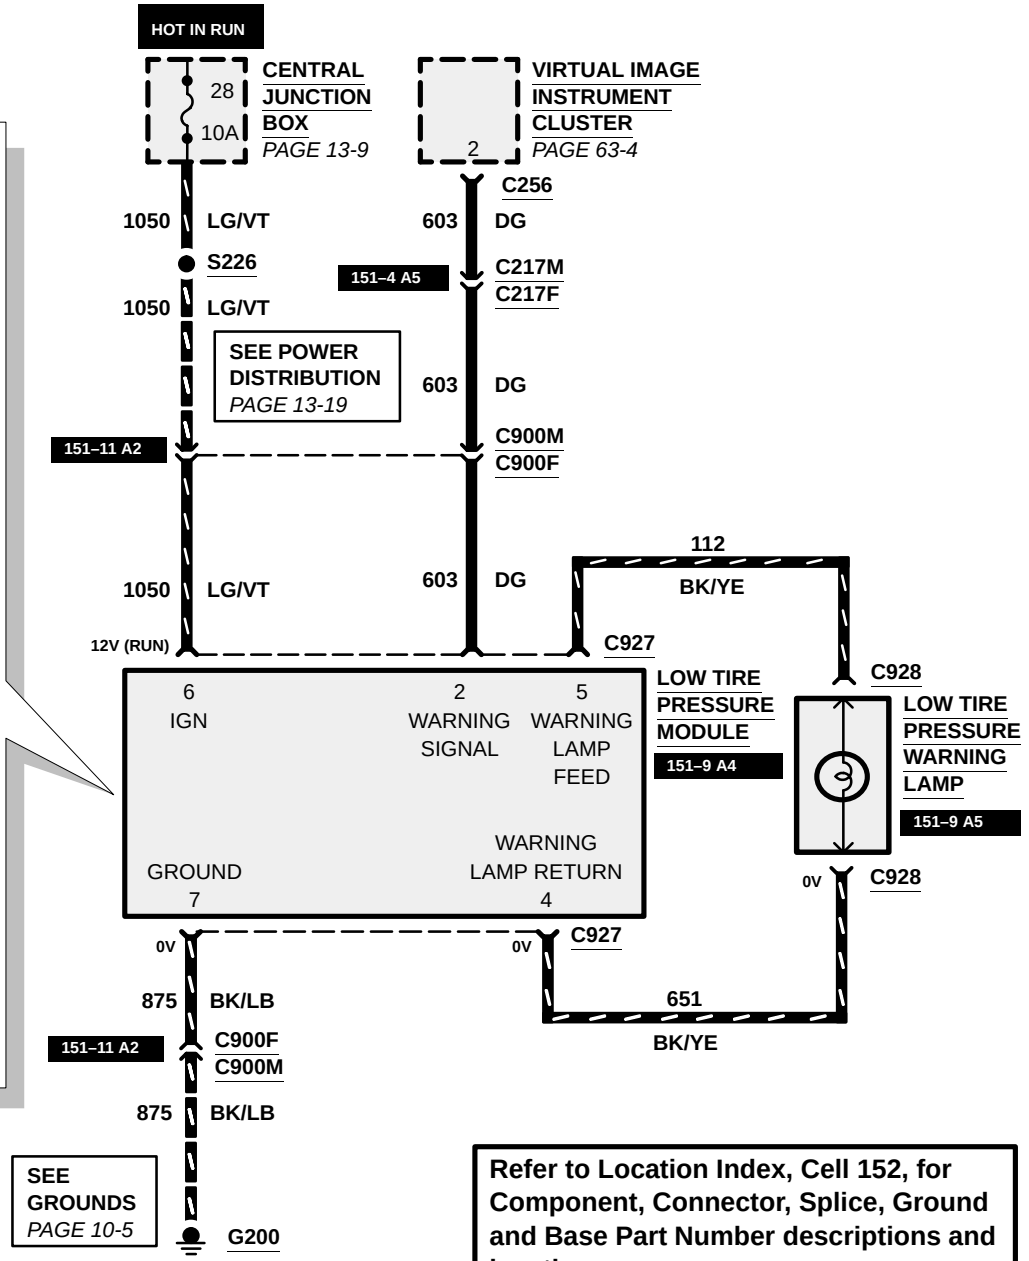

Refer to Location Index, Cell 152, for Component, Connector, Splice, Ground and Base Part Number descriptions and locations.