C220a

14401

A30
Instrument cluster

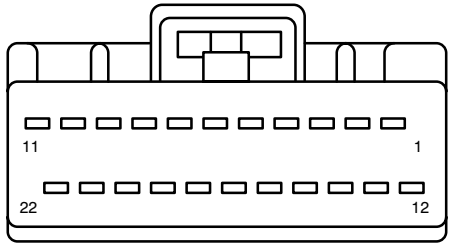

F22003

Pin	Circuit	Circuit Function
1	29-AL12 (OG)	Voltage supplied at all times (overload protected)
2	33-AL6 (YE/BU)	Switched between: Battery voltage, Ground or Open
3	32-AL6 (WH/BU)	Switched between: Battery voltage, Ground or Open
4	35-AL7 (VT/BK)	Switched between: Battery voltage, Ground or Open
5	34-AL7 (BU/BK)	Switched between: Battery voltage, Ground or Open
6	31-AL11 (BK)	Ground
7	64S-LK29 (BU/RD)	Variable D.C. voltage (not overload protected), switch
8	–	not used
9	–	not used
10	10-GL6 (GY/VT)	Signal 2 (Y–direction, reverse, downward)

Pin	Circuit	Circuit Function
11	15-JA14 (GN/BK)	Voltage, ignition switch in Start or Run (not overload protected)
12	–	not used
13	–	not used
14	–	not used
15	–	not used
16	–	not used
17	–	not used
18	8-GE52 (WH/BK)	Sensor signal
19	8-LE42 (WH/BU)	Sensor signal
20	–	not used
21	30S-GM7 (RD/WH)	Voltage supplied at all times (not overload protected), Switched
22	31S-JA14 (BK/GN)	Ground, Switched