C222

14401

Steering column position sensor

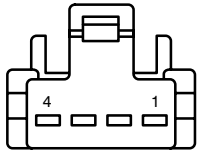

F04145

Pin	Circuit	Circuit function
1	8-AL16 (WH/BK)	Sensor signal
2	9-AL17 (BN/WH)	Sensor signal return (reference/ground)
3	8-AL17 (WH/VT)	Sensor signal
4	7-AL17 (YE/VT)	Voltage DC supplied at all times (sensor)

C225

14401

Center image amplifier

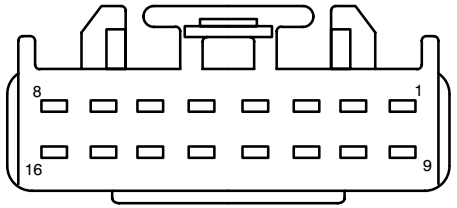

F16029

Pin	Circuit	Circuit function
1	1-MD12 (WH)	Center image amplifier, audio, signal (+)
2	2-MD12 (GY)	Center image amplifier, audio, signal (–)
3	31-MD12B (BK/YE)	Center image amplifier, audio, signal, Shield
4	–	not used
5	8-MD31 (WH/GN)	Center image speaker, right (+)
6	10-MD31 (GY/OG)	Center image speaker, right (–)
7	8-MD30 (WH/BU)	Center image speaker, left (+)
8	10-MD30 (GY/VT)	Center image speaker, left (–)
9	–	not used
10	–	not used
11	–	not used
12	–	not used
13	7-MD12 (YE)	Amplifier enable, output
14	–	not used
15	31-MD12 (BK/YE)	Ground
16	29-MD12 (OG/YE)	Battery