C1054

14398

Ignition relay

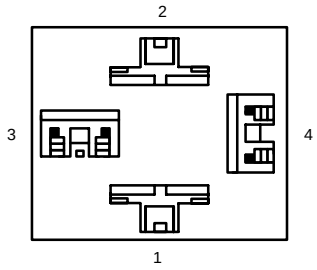

F04291

Pin	Circuit	Circuit function
1	1205 (BK)	Ground
2	16 (RD/LG)	Voltage supplied in Start and Run (overload protected)
3	326 (WH/VT)	Central Junction Box (CJB) (14A068) to Ignition relay
4	1050 (LG/VT)	Voltage supplied at all times (overload protected)

C1065 (BK)

12B637

Ignition coil (12029)

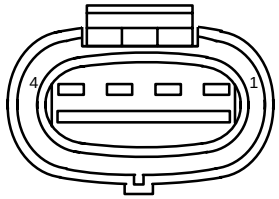

F04215

Pin	Circuit	Circuit function
1	20 (WH/LB)	Voltage supplied in Start and Run (overload protected)
2	527 (RD/LB)	PCM to Ignition coil (12029)
3	528 (PK/WH)	PCM to Ignition coil (12029)
4	526 (DB/LG)	PCM to Ignition coil (12029)

C1066 (BK)

12B637

Idle Air Control
(IAC) valve (9F715)

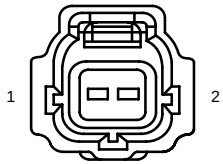

F02091

Pin	Circuit	Circuit function
1	1138 (VT/WH)	Voltage supplied in Start and Run (overload protected)
2	264 (WH/LB)	Idle Air Control (IAC) valve (9F715), control

C1064 (GY)

12B637

Engine Coolant
Temperature (ECT)
sensor (12A648)

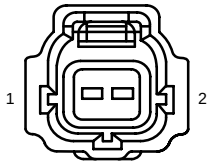

F02091

Pin	Circuit	Circuit function
1	354 (LG/RD)	Engine Coolant Temperature (ECT) sensor (12A648), in-
2	359 (GY/RD)	put signal, return

C1078 (BK)

14398

A/C high pressure
switch (19D594)

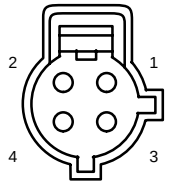

F04195

Pin	Circuit	Circuit function
1	570 (BK/WH)	Ground
2	–	not used
3	441 (RD/YE)	A/C pressure switch, to A/C cycling switch
4	–	not used