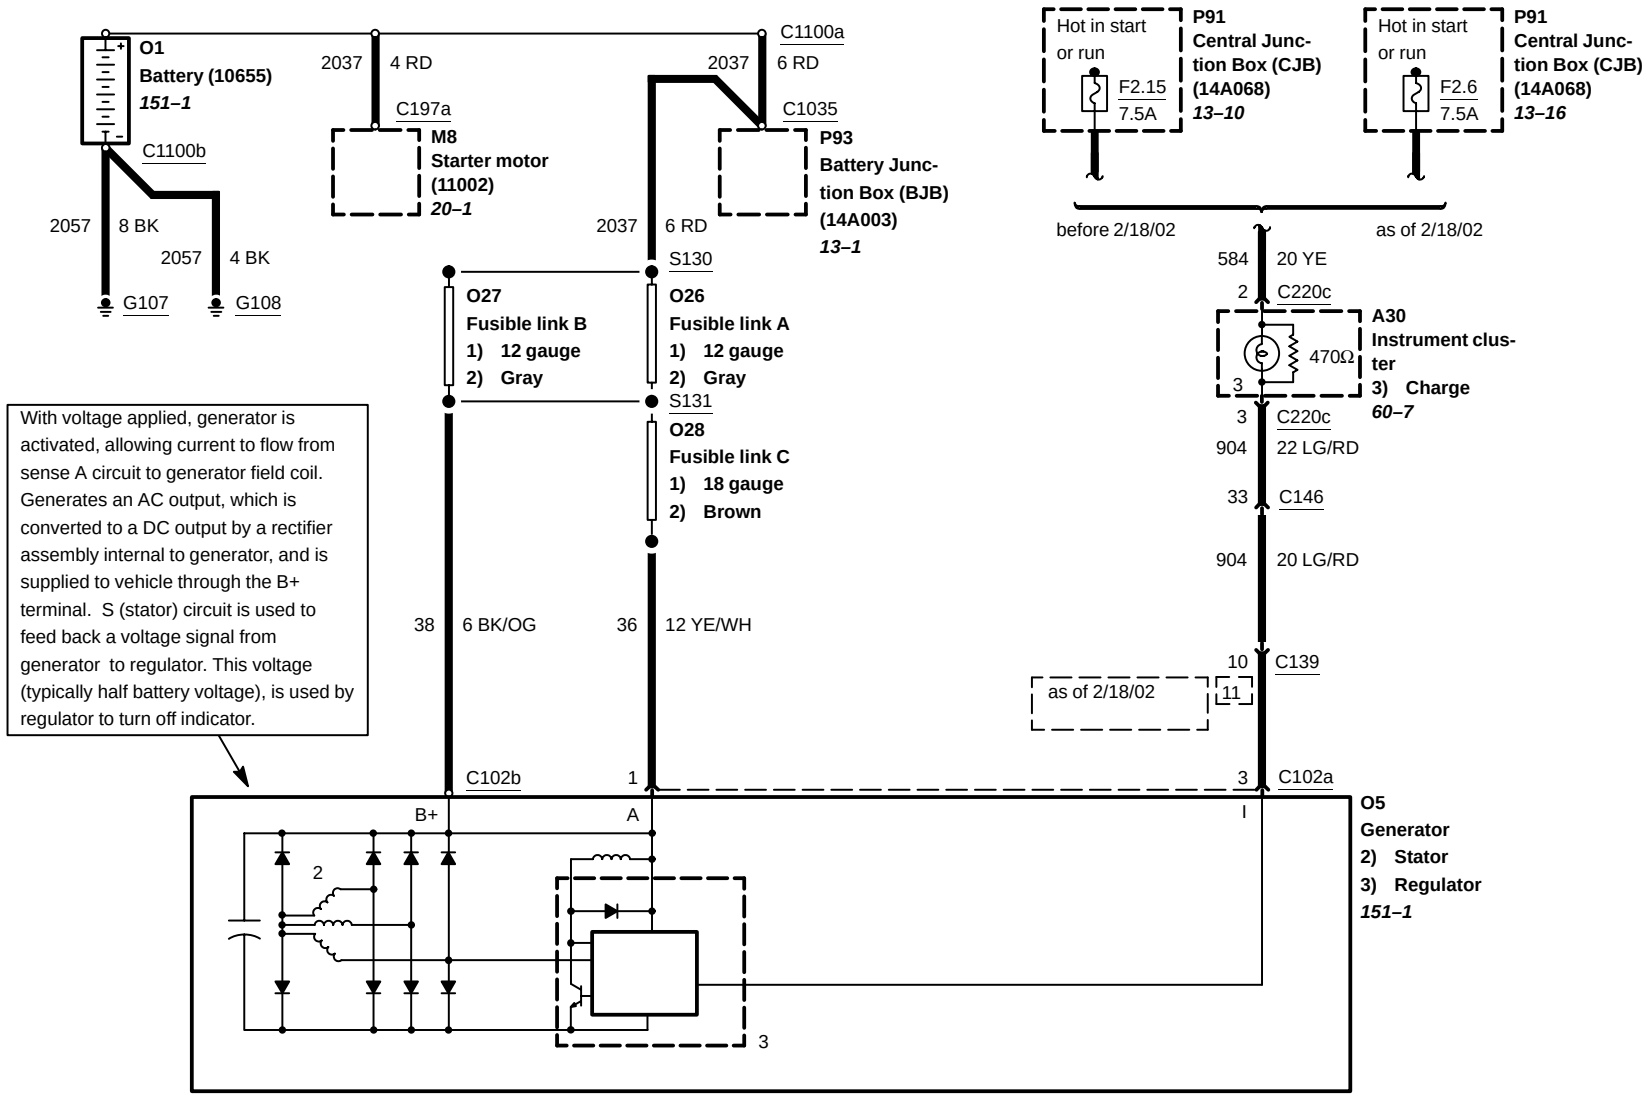
O1
Battery (10655)
151–1
C1100b
2057 8 BK
2057 4 BK
G107
G108
2037 4 RD
C197a
M8
Starter motor
(11002)
20–1
C1100a
2037 6 RD
C1035
P93
Battery Junction Box (BJB)
(14A003)
13–1
Hot in start or run
F2.15
7.5A
P91
Central Junction Box (CJB)
(14A068)
13–10
Hot in start or run
F2.6
7.5A
P91
Central Junction Box (CJB)
(14A068)
13–16
before 2/18/02
as of 2/18/02
584 20 YE
2 C220c
A30
Instrument cluster
3) Charge
60–7
470Ω
3 C220c
904 22 LG/RD
33 C146
904 20 LG/RD
10 C139
11
as of 2/18/02
S130
O26
Fusible link A
1) 12 gauge
2) Gray
S131
O28
Fusible link C
1) 18 gauge
2) Brown
O27
Fusible link B
1) 12 gauge
2) Gray
38 6 BK/OG
36 12 YE/WH
With voltage applied, generator is activated, allowing current to flow from sense A circuit to generator field coil. Generates an AC output, which is converted to a DC output by a rectifier assembly internal to generator, and is supplied to vehicle through the B+ terminal. S (stator) circuit is used to feed back a voltage signal from generator to regulator. This voltage (typically half battery voltage), is used by regulator to turn off indicator.
C102b 1
C102a 3
B+
A
I
2
3
O5
Generator
2) Stator
3) Regulator
151–1