C603 (GY)

14A005

Door lock actuator, right front

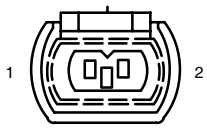

F02116

Pin	Circuit	Circuit function
1	118 (PK/OG)	Door unlock, output
2	117 (PK/BK)	Door lock, output

C604 (GY)

*Supercrew, Harley Davidson

14A005

Window adjust switch, passenger side

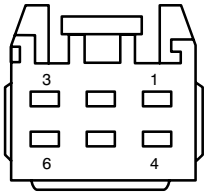

F06303

Pin	Circuit	Circuit function
1	313 (WH/YE)	Window switch, feed, right front – Down
2	333 (YE/RD)	Window motor – Down
3	400 (LB/BK)	Accessory relay, switched power, output
	*193 (YE/LG)	Window switch, feed
4	–	not used
5	334 (RD/YE)	Window motor – Up
6	314 (TN/LB)	Window switch, feed, right front – Up

C605 (GN)

14A005

Door lock switch, passenger side (14028)

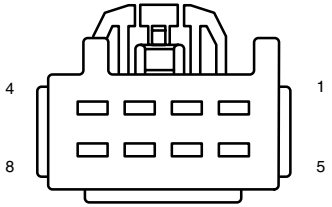

F08193

Pin	Circuit	Circuit function
1	57 (BK)	Ground
2	–	not used
3	120 (PK/LG)	Door unlock, switch, input
4	57 (BK)	Ground
5	400 (LB/BK)	Accessory delay relay, switched output
6	–	not used
7	119 (PK/YE)	Door lock switch, input
8	–	not used

C606 (TN)

14A005

Door entry lamp, right front (13776)

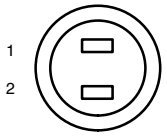

F02063

Pin	Circuit	Circuit function
1	57 (BK)	Ground
2	53 (BK/LB)	Interior lamp relay, switched power, output