C1181

12B637

Fuel injector 1 (9F593)

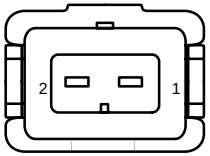

F02089

Pin	Circuit	Circuit function
1	1165 (WH/RD)	Fuel injector 1, control
2	361 (RD)	Voltage supplied in Start and Run (overload protected)

C1182

12B637

Fuel injector 2 (9F593)

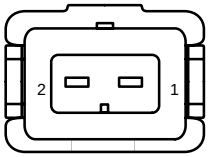

F02089

Pin	Circuit	Circuit function
1	1166 (YE/RD)	Fuel injector 2, control
2	361 (RD)	Voltage supplied in Start and Run (overload protected)

C1183

12B637

Fuel injector 3 (9F593)

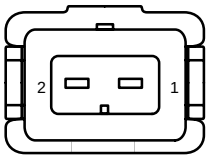

F02089

Pin	Circuit	Circuit function
1	1167 (WH/BK)	Fuel injector 3, control
2	361 (RD)	Voltage supplied in Start and Run (overload protected)

C1184

12B637

Fuel injector 4 (9F593)

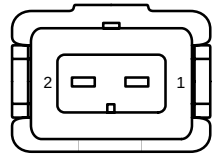

F02089

Pin	Circuit	Circuit function
1	1168 (YE/BK)	Fuel injector 4, control
2	361 (RD)	Voltage supplied in Start and Run (overload protected)

C1185

12B637

Fuel injector 5 (9F593)

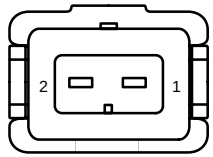

F02089

Pin	Circuit	Circuit function
1	1169 (WH/LB)	Fuel injector 5 (9F593), control
2	361 (RD)	Voltage supplied in Start and Run (overload protected)

C1186

12B637

Fuel injector 6 (9F593)

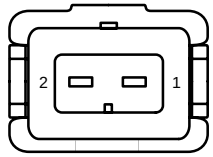

F02089

Pin	Circuit	Circuit function
1	1170 (YE/LB)	Fuel injector 6, control
2	361 (RD)	Voltage supplied in Start and Run (overload protected)