3.8L

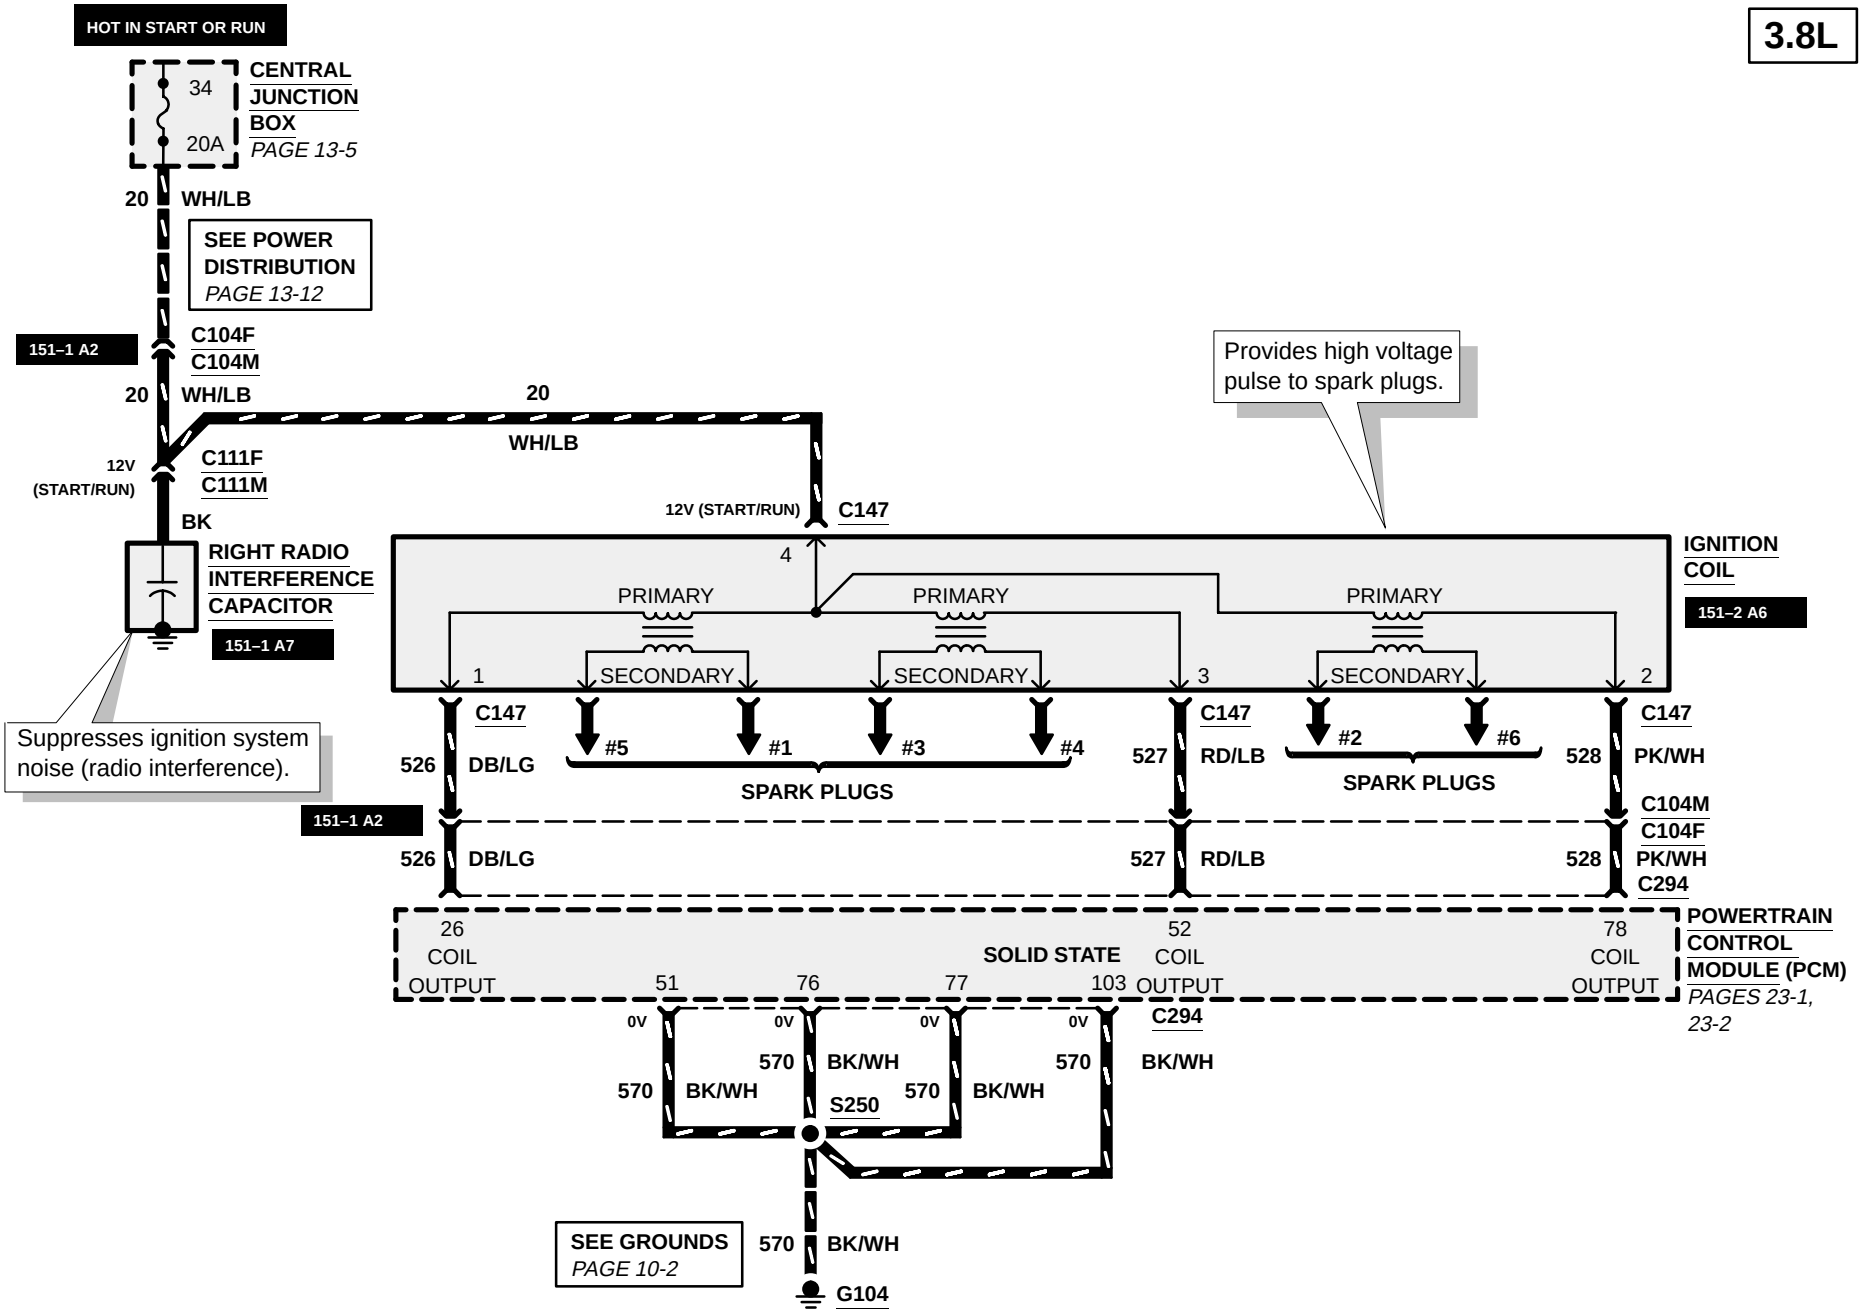
HOT IN START OR RUN
34
20A
CENTRAL JUNCTION BOX
PAGE 13-5
20 WH/LB
SEE POWER DISTRIBUTION
PAGE 13-12
151–1 A2
C104F
C104M
20 WH/LB
20 WH/LB
12V (START/RUN)
C111F
C111M
BK
RIGHT RADIO INTERFERENCE CAPACITOR
151–1 A7
Suppresses ignition system noise (radio interference).
Provides high voltage pulse to spark plugs.
12V (START/RUN) C147
4
PRIMARY
PRIMARY
PRIMARY
SECONDARY
SECONDARY
SECONDARY
1
3
2
IGNITION COIL
151–2 A6
C147
526 DB/LG
#5
#1
#3
#4
SPARK PLUGS
C147
527 RD/LB
#2
#6
SPARK PLUGS
C147
528 PK/WH
151–1 A2
C104M
C104F
526 DB/LG
527 RD/LB
528 PK/WH
C294
26 COIL OUTPUT
SOLID STATE
52 COIL OUTPUT
78 COIL OUTPUT
POWERTRAIN CONTROL MODULE (PCM)
PAGES 23-1, 23-2
51
76
77
103
0V
570 BK/WH
S250
C294
SEE GROUNDS
PAGE 10-2
570 BK/WH
G104