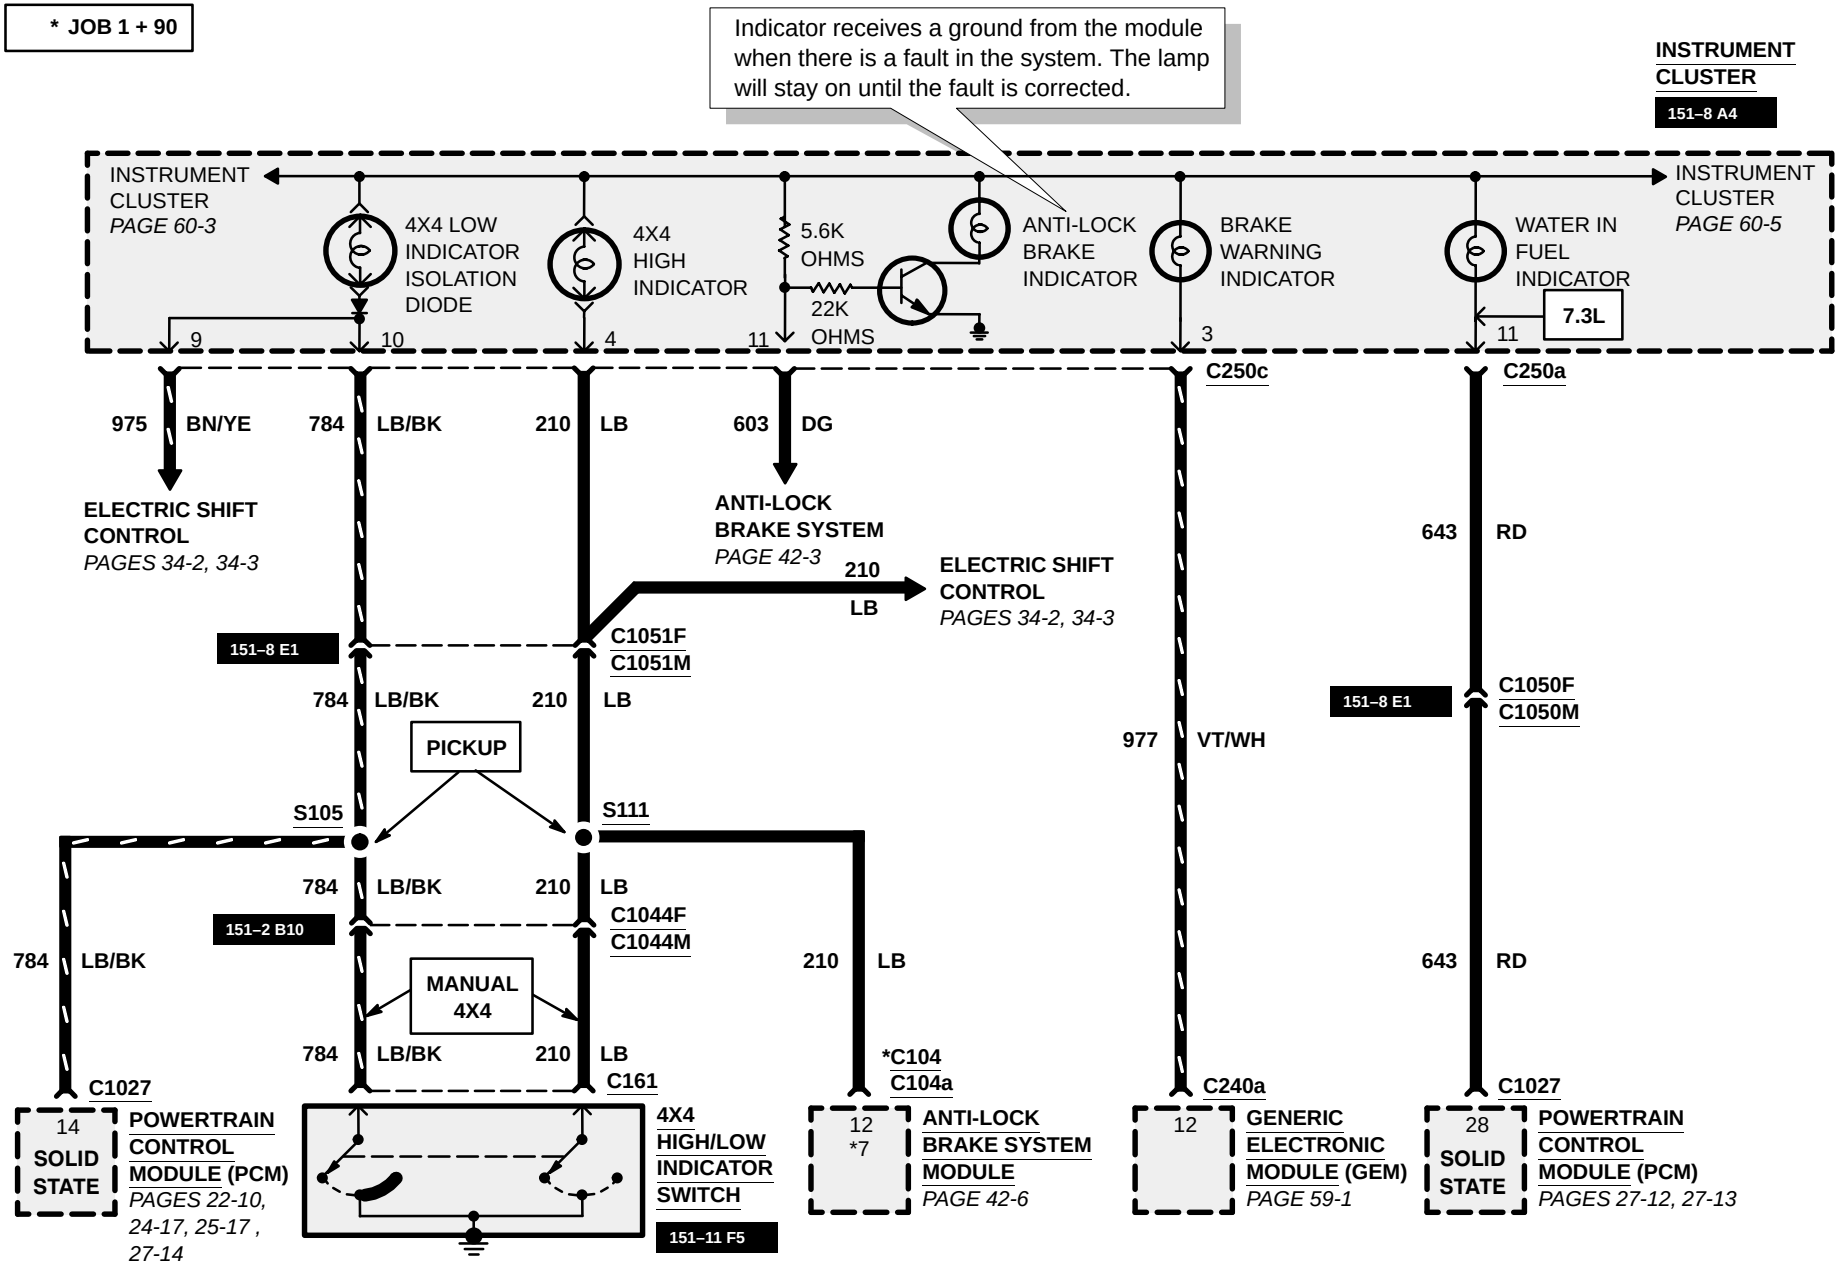
* JOB 1 + 90
Indicator receives a ground from the module when there is a fault in the system. The lamp will stay on until the fault is corrected.
INSTRUMENT CLUSTER
151–8 A4
INSTRUMENT CLUSTER PAGE 60-3
4X4 LOW INDICATOR ISOLATION DIODE
4X4 HIGH INDICATOR
5.6K OHMS
22K OHMS
ANTI-LOCK BRAKE INDICATOR
BRAKE WARNING INDICATOR
WATER IN FUEL INDICATOR
7.3L
INSTRUMENT CLUSTER PAGE 60-5
9
10
4
11
3
11
975 BN/YE
784 LB/BK
210 LB
603 DG
C250c
C250a
ELECTRIC SHIFT CONTROL PAGES 34-2, 34-3
ANTI-LOCK BRAKE SYSTEM PAGE 42-3
210 LB
ELECTRIC SHIFT CONTROL PAGES 34-2, 34-3
643 RD
151–8 E1
C1051F
C1051M
784 LB/BK
210 LB
PICKUP
977 VT/WH
151–8 E1
C1050F
C1050M
S105
S111
784 LB/BK
210 LB
151–2 B10
C1044F
C1044M
784 LB/BK
MANUAL 4X4
210 LB
643 RD
784 LB/BK
210 LB
C161
C1027
*C104
C104a
C240a
C1027
14 SOLID STATE
POWERTRAIN CONTROL MODULE (PCM) PAGES 22-10, 24-17, 25-17 , 27-14
4X4 HIGH/LOW INDICATOR SWITCH
151–11 F5
12 *7
ANTI-LOCK BRAKE SYSTEM MODULE PAGE 42-6
12
GENERIC ELECTRONIC MODULE (GEM) PAGE 59-1
28 SOLID STATE
POWERTRAIN CONTROL MODULE (PCM) PAGES 27-12, 27-13