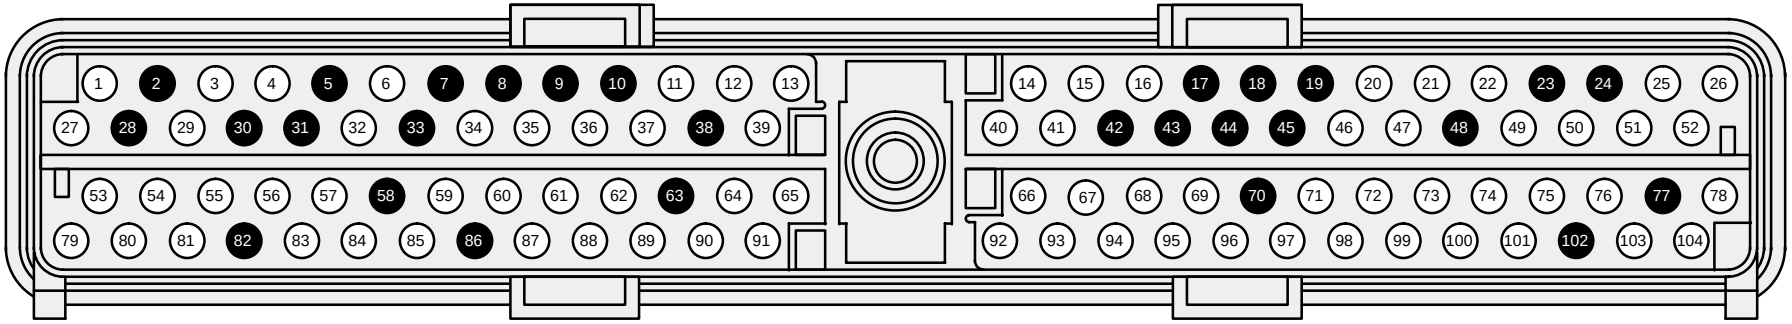

C174 (GRAY)
POWERTRAIN CONTROL MODULE (PCM)

PIN	CIRCUIT	CIRCUIT FUNCTION	PIN	CIRCUIT	CIRCUIT FUNCTION
1	1025 (OG/YE)	Coil on Plug #6	18	–	NOT USED
2	–	NOT USED	19	–	NOT USED
3	570 (BK/WH)	Power Ground	20	924 (BN/OG)	Clutch Coast Solenoid (CSS) (4R100)
4	1496 (PK)	Transfer Case Speed Sensor	21	349 (DB)	Crankshaft Position (CKP) (+) Sensor
5	–	NOT USED	22	350 (GY)	Crankshaft Position (CKP) (–) Sensor
6	237 (OG/YE)	Shift Solenoid A (SSA)	23	–	NOT USED
7	–	NOT USED	24	–	NOT USED
8	–	NOT USED	25	567 (LB/YE)	Ground
9	–	NOT USED	26	1024 (LG/WH)	Coil on Plug #1
10	–	NOT USED	27	1021 (LG/YE)	Coil on Plug #5
11	315 (VT/OG)	Shift Solenoid B (SSB)	28	–	NOT USED
12	911 (WH/LG)	Transmission Control Indicator Lamp (TCIL) Output	29	224 (TN/WH)	Transmission Control Switch (TCS)
			30	–	NOT USED
13	107 (VT)	Data Link Connector (DLC)	31	–	NOT USED
14	784 (LB/BK)	4X4 Low Indicator Switch	32	311 (DG/VT)	Knock Sensor (–) (KS)
15	915 (PK/LB)	J1850 Bus (–)	33	–	NOT USED
16	914 (TN/OG)	J1850 Bus (+)	34	1144 (YE/BK)	TR1
17	–	NOT USED	35	392 (RD/LG)	Heated Oxygen Sensor #12 (HO2S) Input

PIN	CIRCUIT	CIRCUIT FUNCTION	PIN	CIRCUIT	CIRCUIT FUNCTION
36	968 (TN/LB)	Mass Air Flow (MAF) Sensor Signal Return	64	199 (LB/YE)	TR3A
37	923 (OG/BK)	Transmission Fluid Temperature (TFT) Sensor	65	352 (BN/LG)	Differential Pressure Feedback EGR (DPFE) Sensor
38	–	NOT USED	66	1102 (YE/LG)	Cylinder Head Temperature (CHT) Sensor
39	743 (GY)	Intake Air Temperature (IAT) Sensor	67	91 (VT/WH)	Canister Vent
40	238 (DG/YE)	Fuel Pump Monitor	68	679 (GY/BK)	Vehicle Speed Output Sensor
41	347 (BK/YE)	A/C High Pressure Cutoff Switch Input	69	331 (PK/YE)	WOT Relay
42	–	NOT USED	70	–	NOT USED
43	–	NOT USED	71	361 (RD)	Vehicle Power (VPWR)
44	–	NOT USED	72	561 (TN/RD)	Fuel Injector #7 Control
45	–	NOT USED	73	559 (TN/BK)	Fuel Injector #5 Control
46	367 (BN)	Intake Manifold Communicator Control (IMCC)	74	557 (BN/YE)	Fuel Injector #3 Control
			75	555 (TN)	Fuel Injector #1 Control
47	360 (BN/PK)	EGR Vacuum Regulator (EVR) Control	76	570 (BK/WH)	Power Ground
48	–	NOT USED	77	–	NOT USED
49	1145 (LB/BK)	TR2	78	1027 (PK/LB)	Coil on Plug #7
50	1143 (WH/BK)	TR4	79	1029 (WH/RD)	Coil on Plug #8
51	570 (BK/WH)	Power Ground	80	926 (LB/OG)	Fuel Pump Relay Control
52	1028 (WH/PK)	Coil on Plug #3	81	925 (WH/YE)	Electronic Pressure Control (EPC) Solenoid
53	1030 (DG/VT)	Coil on Plug #4			
54	480 (VT/YE)	Torque Converter Clutch (TCC) Solenoid	82	–	NOT USED
55	729 (RD/WH)	Keep Alive Power (KAPWR)	83	264 (WH/LB)	Idle Air Control (IAC) Valve Control
56	191 (LG/BK)	EVAP Canister Purge Solenoid	84	136 (DB/YE)	Output Shaft Speed (OSS) Sensor
57	310 (YE/RD)	Knock Sensor (+) (KS)	85	795 (DG)	Camshaft Position (CMP) Sensor
58	–	NOT USED	86	–	NOT USED
59	970 (DG/WH)	Turbine Shaft Speed (TSS) Sensor (4R100)	87	94 (RD/BK)	Heated Oxygen Sensor #21 (HO2S) Input
			88	967 (LB/RD)	Mass Air Flow (MAF) Sensor
60	74 (GY/LB)	Heated Oxygen Sensor #11 (HO2S) Input	89	355 (GY/WH)	Throttle Position (TP) Sensor
			90	351 (BN/WH)	Reference Voltage
61	393 (VT/LG)	Heated Oxygen Sensor #22 (HO2S) Input	91	359 (GY/RD)	Signal Return
62	791 (RD/PK)	Fuel Tank Pressure (FTP) Sensor	92	810 (RD/LG)	Brake Pedal Position (BPP) Switch
63	–	NOT USED			

PIN	CIRCUIT	CIRCUIT FUNCTION
93	387 (RD/WH)	Heated Oxygen Sensor #11 (HO2S) Heater
94	388 (YE/LB)	Heated Oxygen Sensor #21 (HO2S) Heater
95	389 (WH/BK)	Heated Oxygen Sensor #12 (HO2S) Heater
96	390 (TN/YE)	Heated Oxygen Sensor #22 (HO2S) Heater
97	361 (RD)	Vehicle Power (VPWR)
98	562 (LB)	Fuel Injector #8 Control
99	560 (LG/OG)	Fuel Injector #6 Control
100	558 (BN/LB)	Fuel Injector #4 Control
101	556 (WH)	Fuel Injector #2 Control
102	–	NOT USED
103	570 (BK/WH)	Power Ground
104	1026 (PK/WH)	Coil on Plug #2

CONNECTOR REFERENCE LIST

CONNECTOR	SECTION-PAGE
C157	31-4
C182	29-5, 30-5
C183	29-5
C193	30-5
C224	130-5
C236	62-6
C237	62-6
C267	59-6
C915	102-2

5.4L

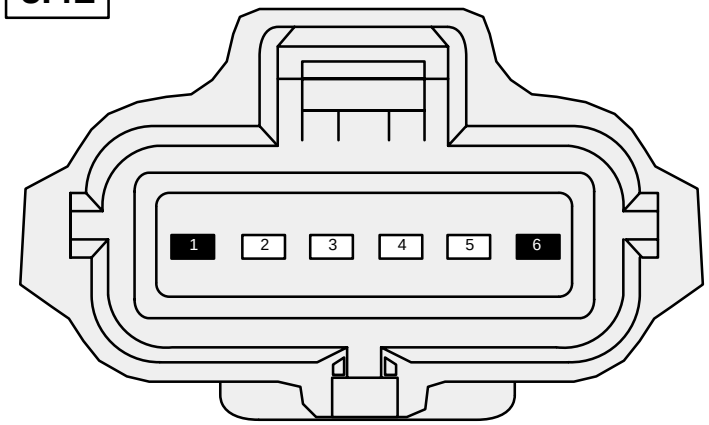

C141

MASS AIR FLOW (MAF) SENSOR

PIN	CIRCUIT	CIRCUIT FUNCTION
1	–	NOT USED
2	361 (RD)	Power (Hot in Start or Run)
3	570 (BK/WH)	Ground
4	968 (TN/LB)	MAF Sensor Signal Return
5	967 (LB/RD)	MAF Signal Out
6	–	NOT USED

PIN	CIRCUIT	CIRCUIT FUNCTION	PIN	CIRCUIT	CIRCUIT FUNCTION
33	–	NOT USED	62	791 (RD/PK)	Fuel Tank Pressure (FTP) Sensor
34	1144 (YE/BK)	TR1 (A/T)	63	–	NOT USED
35	392 (RD/LG)	Heated Oxygen Sensor #12 (HO2S) Input	64	199 (LB/YE)	TR3A (A/T), Clutch Pedal Position (CPP) Switch (M/T)
36	968 (TN/LB)	Mass Air Flow (MAF) Sensor			
37	923 (OG/BK)	Transmission Fluid Temperature (TFT) Sensor	65	352 (BN/LG)	Differential Pressure Feedback EGR (DPFE) Sensor
38	–	NOT USED	66	1102 (YE/LG)	Cylinder Head Temperature (CHT) Sensor
39	743 (GY)	Intake Air Temperature (IAT) Sensor	67	91 (VT/WH)	Canister Vent
40	238 (DG/YE)	Fuel Pump Monitor	68	679 (GY/BK)	Vehicle Speed Output Sensor
41	347 (BK/YE)	A/C High Pressure Cutoff Switch Input	69	331 (PK/YE)	WOT Relay
42	–	NOT USED	70	–	NOT USED
43	–	NOT USED	71	361 (RD)	Vehicle Power (VPWR)
44	–	NOT USED	72	561 (TN/RD)	Fuel Injector #7 Control
45	–	NOT USED	73	559 (TN/BK)	Fuel Injector #5 Control
46	367 (BN)	Intake Manifold Communicator Control (IMCC)	74	557 (BN/YE)	Fuel Injector #3 Control
			75	555 (TN)	Fuel Injector #1 Control
47	360 (BN/PK)	EGR Vacuum Regulator (EVR) Control	76	** 570 (BK/WH)	Power Ground
48	–	NOT USED	77	*570 (BK/WH)	Power Ground
49	1145 (LB/BK)	TR2	78	1027 (PK/LB)	Coil on Plug #7
50	1143 (WH/BK)	TR4	79	1029 (WH/RD)	Coil on Plug #8
51	570 (BK/WH)	Power Ground	80	926 (LB/OG)	Fuel Pump Relay Control
52	1028 (WH/PK)	Coil on Plug #3	81	925 (WH/YE)	Electronic Pressure Control (EPC) Solenoid
53	1030 (DG/VT)	Coil on Plug #4			
54	480 (VT/YE)	Torque Converter Clutch (TCC) Solenoid (A/T)	82	–	NOT USED
			83	264 (WH/LB)	Idle Air Control (IAC) Valve Control
55	729 (RD/WH)	Keep Alive Power (KAPWR)	84	136 (DB/YE)	Output Shaft Speed (OSS) Sensor
56	191 (LG/BK)	EVAP Canister Purge Valve	85	795 (DG)	Camshaft Position (CMP) Sensor
57	310 (YE/RD)	Knock Sensor (+) (KS)	86	–	NOT USED
58	–	NOT USED	87	94 (RD/BK)	Heated Oxygen Sensor #21 (HO2S) Input
59	970 (OG/WH)	NOT USED	88	967 (LB/RD)	Mass Air Flow (MAF) Sensor
60	74 (GY/LB)	Heated Oxygen Sensor #11 (HO2S) Input			
61	393 (VT/LG)	Heated Oxygen Sensor #22 (HO2S) Input			

*** W/SUPERCREW**
**** W/O SUPERCREW**

PIN	CIRCUIT	CIRCUIT FUNCTION
89	355 (GY/WH)	Throttle Position (TP) Sensor
90	351 (BN/WH)	Reference Voltage
91	359 (GY/RD)	Signal Return
92	810 (RD/LG)	Brake Pedal Position (BPP) Switch
93	387 (RD/WH)	Heated Oxygen Sensor #11 (HO2S) Heater
94	388 (YE/LB)	Heated Oxygen Sensor #21 (HO2S) Heater
95	389 (WH/BK)	Heated Oxygen Sensor #12 (HO2S) Heater
96	390 (TN/YE)	Heated Oxygen Sensor #22 (HO2S) Heater
97	361 (RD)	Vehicle Power (VPWR)
98	562 (LB)	Fuel Injector #8 Control
99	560 (LG/OG)	Fuel Injector #6 Control
100	558 (BN/LB)	Fuel Injector #4 Control
101	556 (WH)	Fuel Injector #2 Control
102	–	NOT USED
103	570 (BK/WH)	Power Ground
104	1026 (PK/WH)	Coil on Plug #2

CONNECTOR REFERENCE LIST

CONNECTOR	SECTION-PAGE
C157	31-4
C182	29-5, 30-5
C183	29-5
C224	130-5
C236	62-6
C237	62-6
C267	59-6
C915	102-2

4.6L

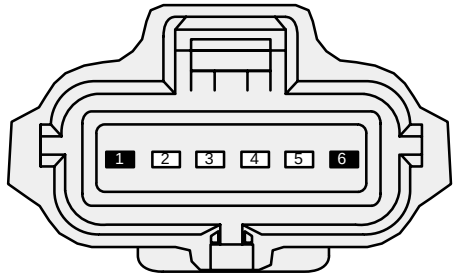

C141

MASS AIR FLOW (MAF) SENSOR

PIN	CIRCUIT	CIRCUIT FUNCTION
1	–	NOT USED
2	361 (RD)	Power (Hot in Start or Run)
3	570 (BK/WH)	Ground
4	968 (TN/LB)	MAF Sensor Signal Return
5	967 (LB/RD)	MAF Signal Out
6	–	NOT USED