## C926

**14334**

E51
Cargo lamp




F03032

| Pin | Circuit | Circuit function |
|---|---|---|
| 1 | 1205 (BK) | Ground |
| 2 | 1458 (VT/WH) | Fused battery feed, SSP 4 relay, to, right rear, Lamp |
| 3 | 1360 (BN/PK) | Lighting, Overhead console, control |

## C930

**14334**

A143
Overhead console

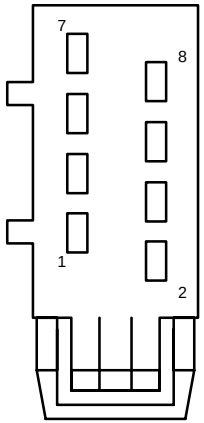


F08112

| Pin | Circuit | Circuit function |
|---|---|---|
| 1 | 1360 (BN/PK) | Lighting, Overhead console, control |
| 2 | 640 (RD/YE) | Voltage supplied in Start and Run (overload protected) |
| 3 | 1458 (VT/WH) | Fused battery feed, SSP 4 relay, to, right rear, Lamp |
| 4 | 1236 (VT/WH) | Module, power sliding door, LH side, to, Overhead console |
| 5 | 1205 (BK) | Ground |
| 6 | 1237 (LG/RD) | Module, power sliding door, RH side, to, Overhead console |
| 7 | 1417 (LG/RD) | Light emitting diode (LED), Illumination |
| 8 | 1244 (WH/LG) | Module, power sliding door, LH side, to, Door unlock relay, and, Door lock relay |

## C951

**14334**

P83
Function selector switch assembly, rear

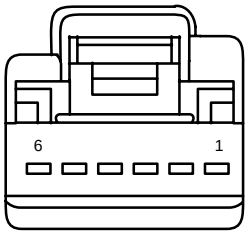


F06239

| Pin | Circuit | Circuit function |
|---|---|---|
| 1 | 1126 (LB) | Blend door actuator, return |
| 2 | 1349 (PK/LG) | Blower switch speed control |
| 3 | 1348 (GY/OG) | Rear Electronic Module (REM), voltage, Reference voltage, output |
| 4 | 465 (WH/LB) | Low coolant level switch, input |
| 5 | 1205 (BK) | Ground |
| 6 | 1418 (LB/WH) | Illumination, output |