C356

14A699

B231
Seat track position
sensor, left

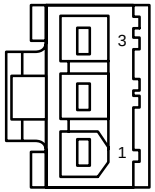

F03111

Pin	Circuit	Circuit function
1	1558 (TN/BK)	Seat position sensor - horizontal sense
2	–	not used
3	1520 (LG)	Seat position sensor - horizontal sense

C358

14A699

B231
Seat track position
sensor, left



F02221

Pin	Circuit	Circuit function
1	442 (LG/OG)	Seat position sensor - horizontal sense
2	1520 (LG)	Seat position sensor - horizontal sense

C357

14A699

M214
Power seat motor
assembly, left

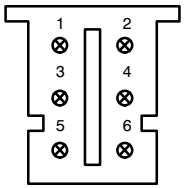

F06089

Pin	Circuit	Circuit function
1	981 (RD/WH)	Fwd/Rwd motor, Forward
2	980 (YE/WH)	Fwd/Rwd motor, Rearward
3	990 (YE/RD)	Front height motor, Down
4	983 (RD/LG)	Rear height motor, Up
5	979 (RD/LB)	Front height motor, Up
6	982 (YE/LG)	Rear height motor, Down

C360

14A699

N216
Seat adjust switch,
driver side front
(14A701)

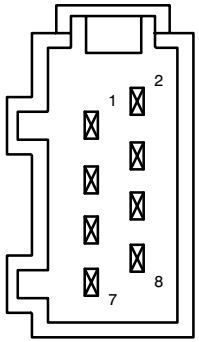

F08161

Pin	Circuit	Circuit function
1	57 (BK)	Ground
2	979 (RD/LB)	Front height motor, Up
3	980 (YE/WH)	Fwd/Rwd motor, Rearward
4	982 (YE/LG)	Rear height motor, Down
5	981 (RD/WH)	Fwd/Rwd motor, Forward
6	983 (RD/LG)	Rear height motor, Up
7	490 (RD)	Voltage supplied at all times (overload protected)
8	990 (YE/LB)	Front height motor, Down