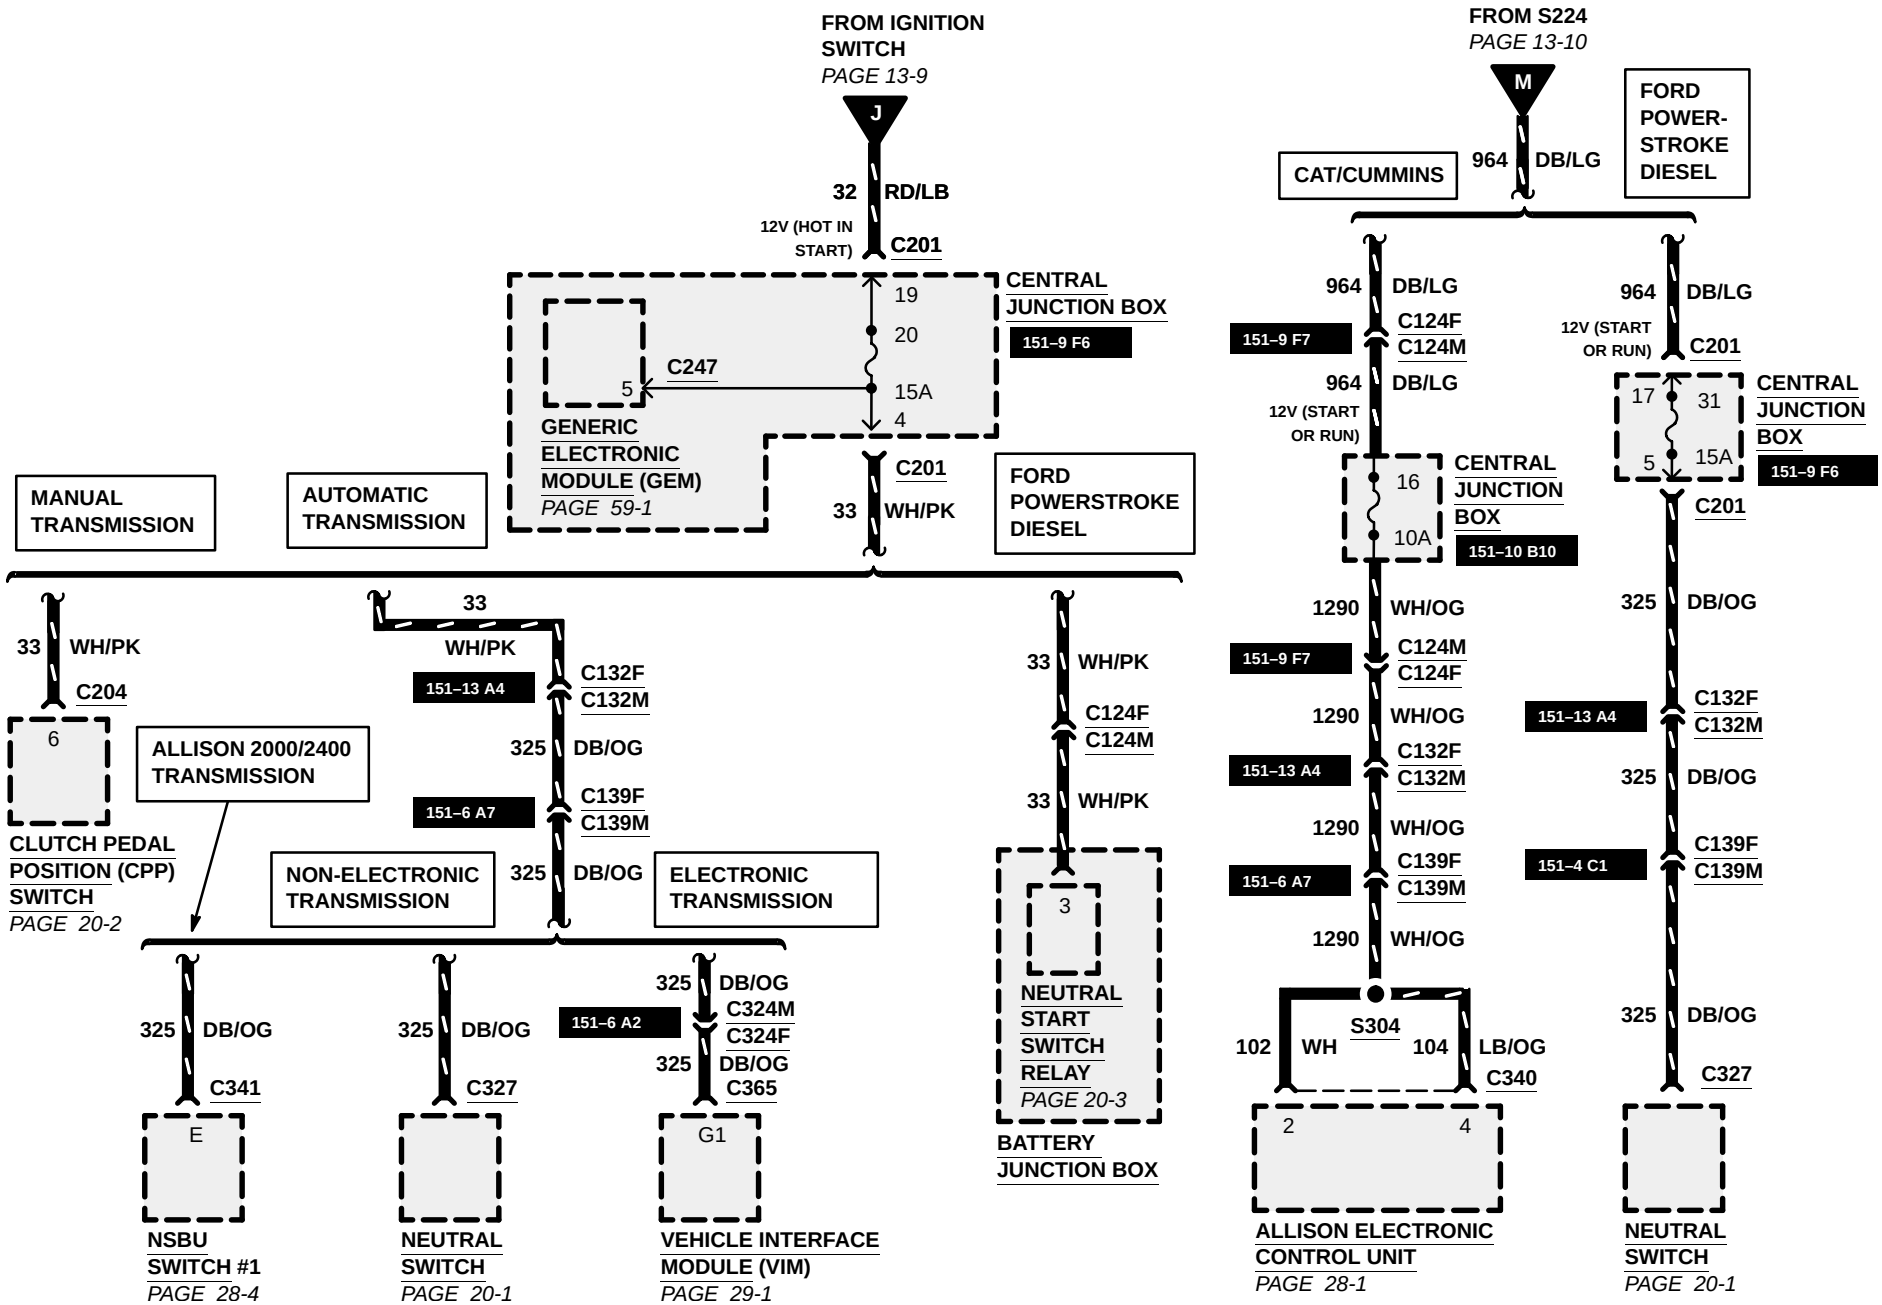
FROM IGNITION SWITCH
PAGE 13-9
J
32 RD/LB
12V (HOT IN START)
C201
CENTRAL JUNCTION BOX
151–9 F6
19
20
15A
4
5
C247
GENERIC ELECTRONIC MODULE (GEM)
PAGE 59-1
C201
33 WH/PK
FORD POWERSTROKE DIESEL
MANUAL TRANSMISSION
AUTOMATIC TRANSMISSION
33 WH/PK
C204
6
CLUTCH PEDAL POSITION (CPP) SWITCH
PAGE 20-2
ALLISON 2000/2400 TRANSMISSION
33 WH/PK
151–13 A4
C132F
C132M
325 DB/OG
151–6 A7
C139F
C139M
325 DB/OG
NON-ELECTRONIC TRANSMISSION
ELECTRONIC TRANSMISSION
33 WH/PK
C124F
C124M
33 WH/PK
3
NEUTRAL START SWITCH RELAY
PAGE 20-3
BATTERY JUNCTION BOX
325 DB/OG
C341
E
NSBU SWITCH #1
PAGE 28-4
325 DB/OG
C327
NEUTRAL SWITCH
PAGE 20-1
151–6 A2
325 DB/OG
C324M
C324F
325 DB/OG
C365
G1
VEHICLE INTERFACE MODULE (VIM)
PAGE 29-1
FROM S224
PAGE 13-10
M
964 DB/LG
CAT/CUMMINS
FORD POWER-STROKE DIESEL
964 DB/LG
151–9 F7
C124F
C124M
964 DB/LG
12V (START OR RUN)
964 DB/LG
12V (START OR RUN)
C201
17
31
5
15A
CENTRAL JUNCTION BOX
151–9 F6
16
10A
CENTRAL JUNCTION BOX
151–10 B10
C201
1290 WH/OG
151–9 F7
C124M
C124F
325 DB/OG
1290 WH/OG
151–13 A4
C132F
C132M
C132F
C132M
151–13 A4
325 DB/OG
1290 WH/OG
151–6 A7
C139F
C139M
151–4 C1
C139F
C139M
1290 WH/OG
S304
102 WH
104 LB/OG
C340
2
4
ALLISON ELECTRONIC CONTROL UNIT
PAGE 28-1
325 DB/OG
C327
NEUTRAL SWITCH
PAGE 20-1