Excursion

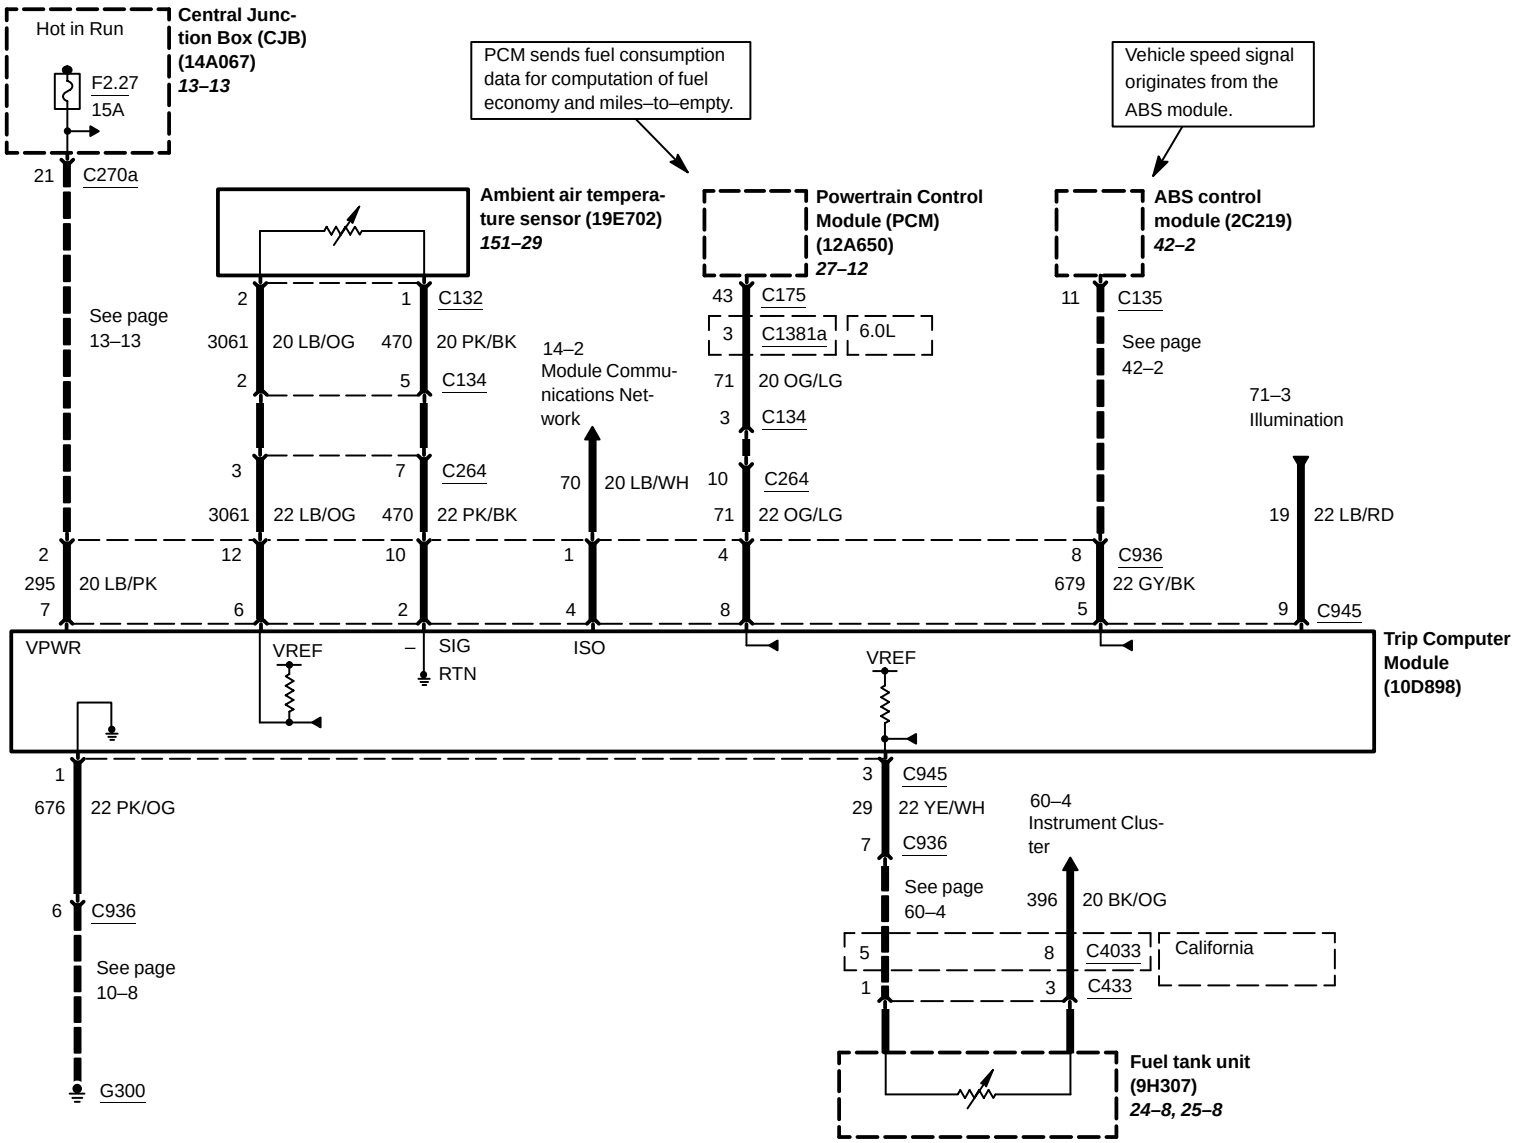
Hot in Run
Central Junction Box (CJB) (14A067) 13–13
F2.27
15A
21
C270a
See page 13–13
PCM sends fuel consumption data for computation of fuel economy and miles–to–empty.
Vehicle speed signal originates from the ABS module.
Ambient air temperature sensor (19E702) 151–29
Powertrain Control Module (PCM) (12A650) 27–12
ABS control module (2C219) 42–2
2
1
C132
3061
20 LB/OG
470
20 PK/BK
2
5
C134
3
7
C264
3061
22 LB/OG
470
22 PK/BK
43
C175
3
C1381a
6.0L
71
20 OG/LG
3
C134
10
C264
71
22 OG/LG
11
C135
See page 42–2
14–2 Module Communications Network
70
20 LB/WH
71–3 Illumination
19
22 LB/RD
2
295
7
20 LB/PK
12
6
10
2
1
4
4
8
8
679
5
C936
22 GY/BK
9
C945
VPWR
VREF
SIG RTN
ISO
VREF
Trip Computer Module (10D898)
1
676
22 PK/OG
6
C936
See page 10–8
G300
3
C945
29
22 YE/WH
7
C936
See page 60–4
60–4 Instrument Cluster
396
20 BK/OG
5
8
C4033
California
1
3
C433
Fuel tank unit (9H307) 24–8, 25–8