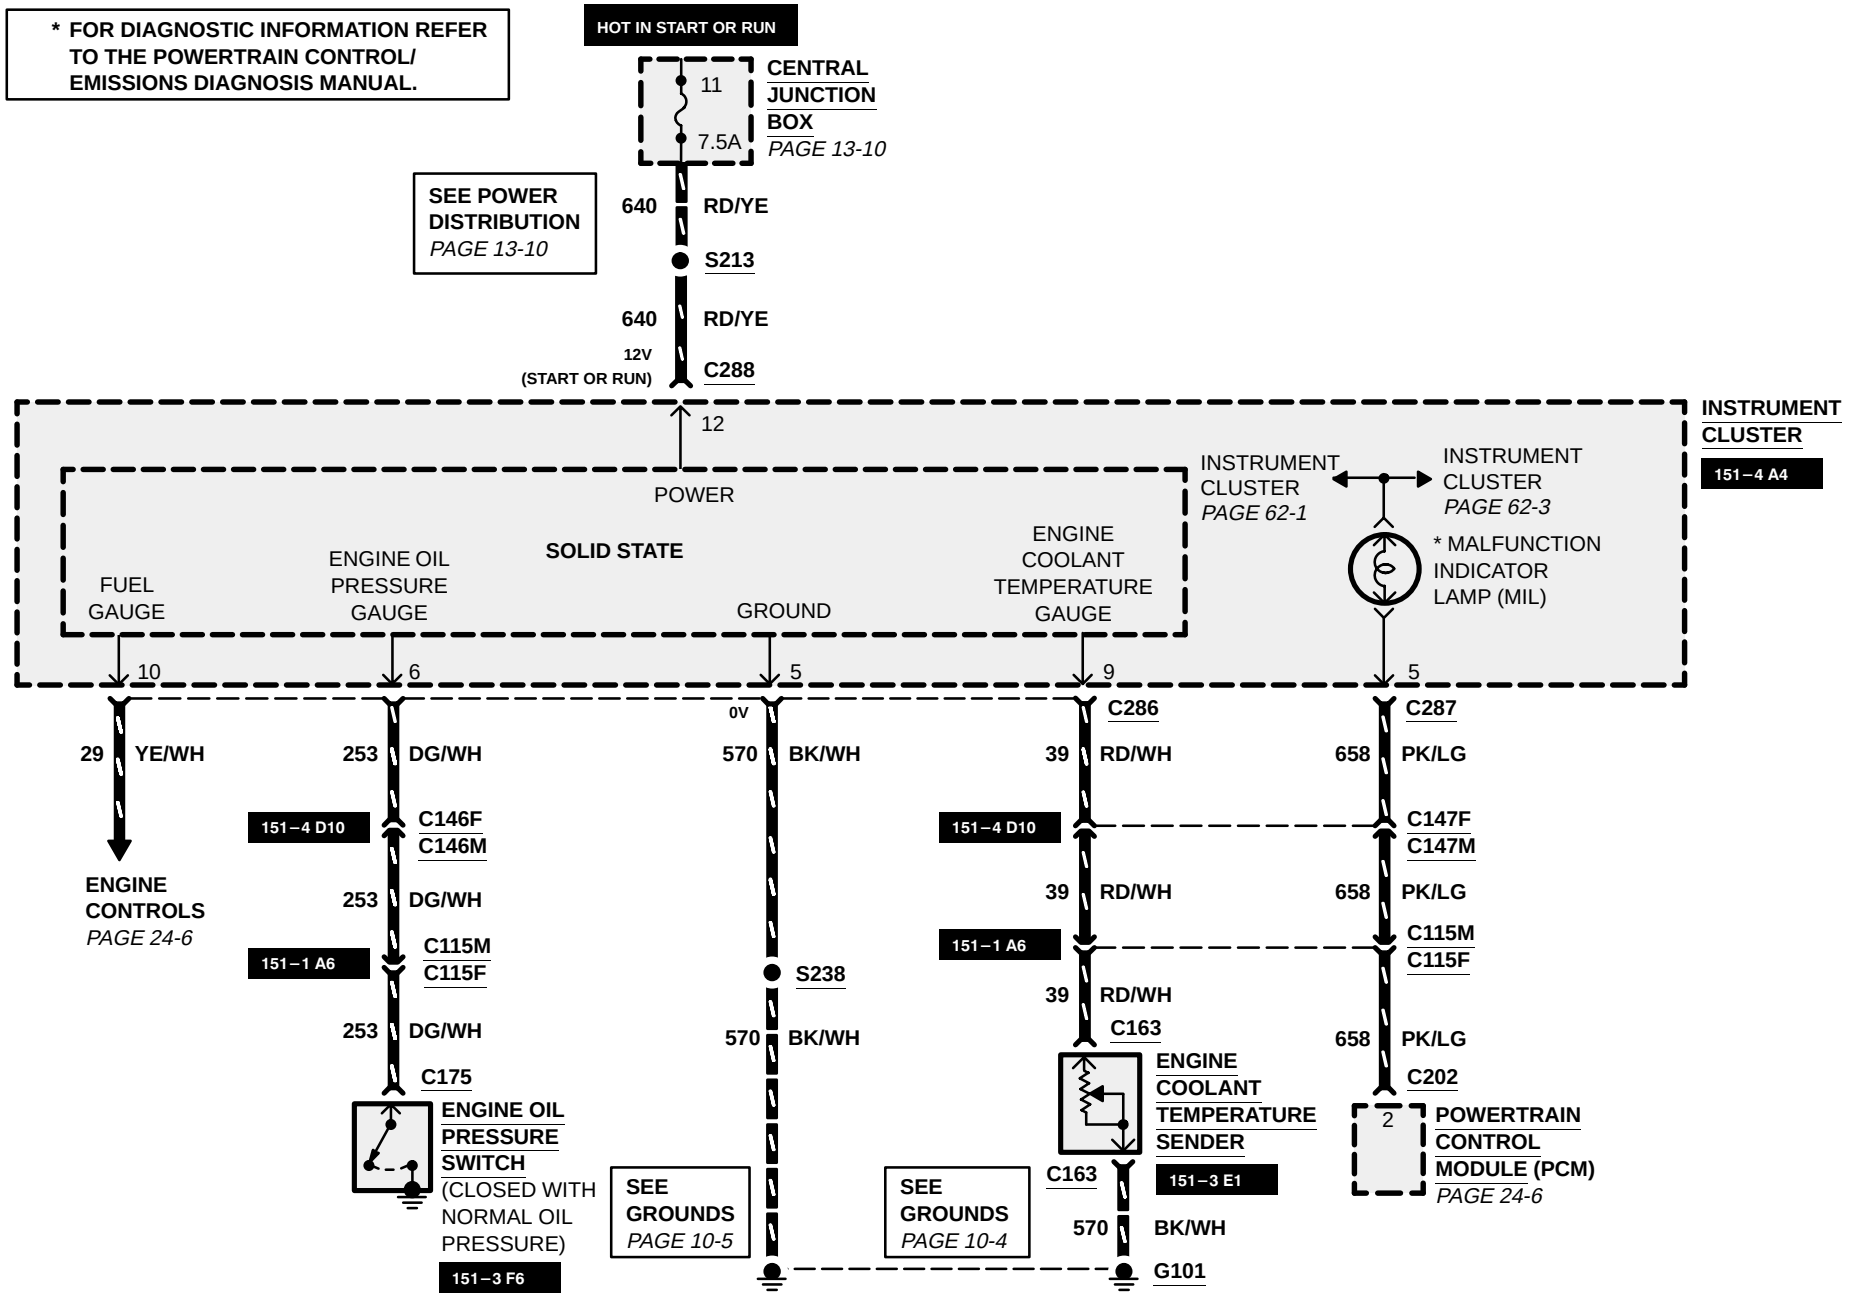
* FOR DIAGNOSTIC INFORMATION REFER TO THE POWERTRAIN CONTROL/ EMISSIONS DIAGNOSIS MANUAL.
HOT IN START OR RUN
11
7.5A
CENTRAL JUNCTION BOX
PAGE 13-10
SEE POWER DISTRIBUTION
PAGE 13-10
640 RD/YE
S213
640 RD/YE
12V (START OR RUN)
C288
12
INSTRUMENT CLUSTER
151–4 A4
POWER
SOLID STATE
FUEL GAUGE
ENGINE OIL PRESSURE GAUGE
GROUND
ENGINE COOLANT TEMPERATURE GAUGE
INSTRUMENT CLUSTER
PAGE 62-1
INSTRUMENT CLUSTER
PAGE 62-3
* MALFUNCTION INDICATOR LAMP (MIL)
10
6
5
9
5
29 YE/WH
ENGINE CONTROLS
PAGE 24-6
253 DG/WH
151–4 D10
C146F
C146M
253 DG/WH
151–1 A6
C115M
C115F
253 DG/WH
C175
ENGINE OIL PRESSURE SWITCH (CLOSED WITH NORMAL OIL PRESSURE)
151–3 F6
0V
570 BK/WH
S238
570 BK/WH
SEE GROUNDS
PAGE 10-5
C286
39 RD/WH
151–4 D10
39 RD/WH
151–1 A6
39 RD/WH
C163
ENGINE COOLANT TEMPERATURE SENDER
151–3 E1
C163
570 BK/WH
G101
SEE GROUNDS
PAGE 10-4
C287
658 PK/LG
C147F
C147M
658 PK/LG
C115M
C115F
658 PK/LG
C202
2
POWERTRAIN CONTROL MODULE (PCM)
PAGE 24-6