## C927 (BK)

**14A005**

Cargo lamp assembly




F03197

| Pin | Circuit | Circuit function |
|---|---|---|
| 1 | 55 (BK/PK) | Cargo lamp, output |
| 2 | 511 (LG) | Brake pedal position switch (13480), to stoplamps |
| 3 | 57 (BK) | Ground |

## C930 (BK)

**14334**

Overhead console

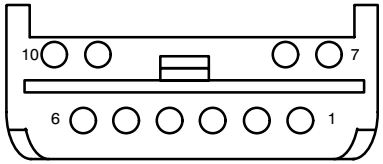


F10009

| Pin | Circuit | Circuit function |
|---|---|---|
| 1 | – | not used |
| 2 | 57 (BK) | Ground |
| 3 | 1003 (GY/YE) | Voltage in Run (overload protected) |
| 4 | 679 (GY/BK) | Vehicle Speed Sensor (VSS) + |
| 5 | 705 (LG/OG) | Battery saver relay, switched power |
| 6 | 53 (BK/LB) | Interior lamp relay, switched power, output |
| 7 | – | not used |
| 8 | 235 (RD/BK) | Instrument illumination + |
| 9 | 233 (DB/YE) | Ambient air temperature sensor (19E702), feed |
| 10 | 234 (DB/WH) | Ambient air temperature sensor (19E702), return |

## C931a

**14334**

Interior/map lamps assembly, front

F01017

| Pin | Circuit | Circuit function |
|---|---|---|
| 1 | 53 (BK/LB) | Interior lamp relay, switched power, output |

## C931b (GY)

**14A005**
**14334**

Interior/map lamps assembly, front

F01017

| Pin | Circuit | Circuit function |
|---|---|---|
| 1 | 705 (LG/OG) | Battery saver relay, switched power |

## C932a

**14A005**
**14334**

Interior/map lamps assembly, rear

F01017

| Pin | Circuit | Circuit function |
|---|---|---|
| 1 | 53 (BK/LB) | Interior lamp relay, switched power, output |