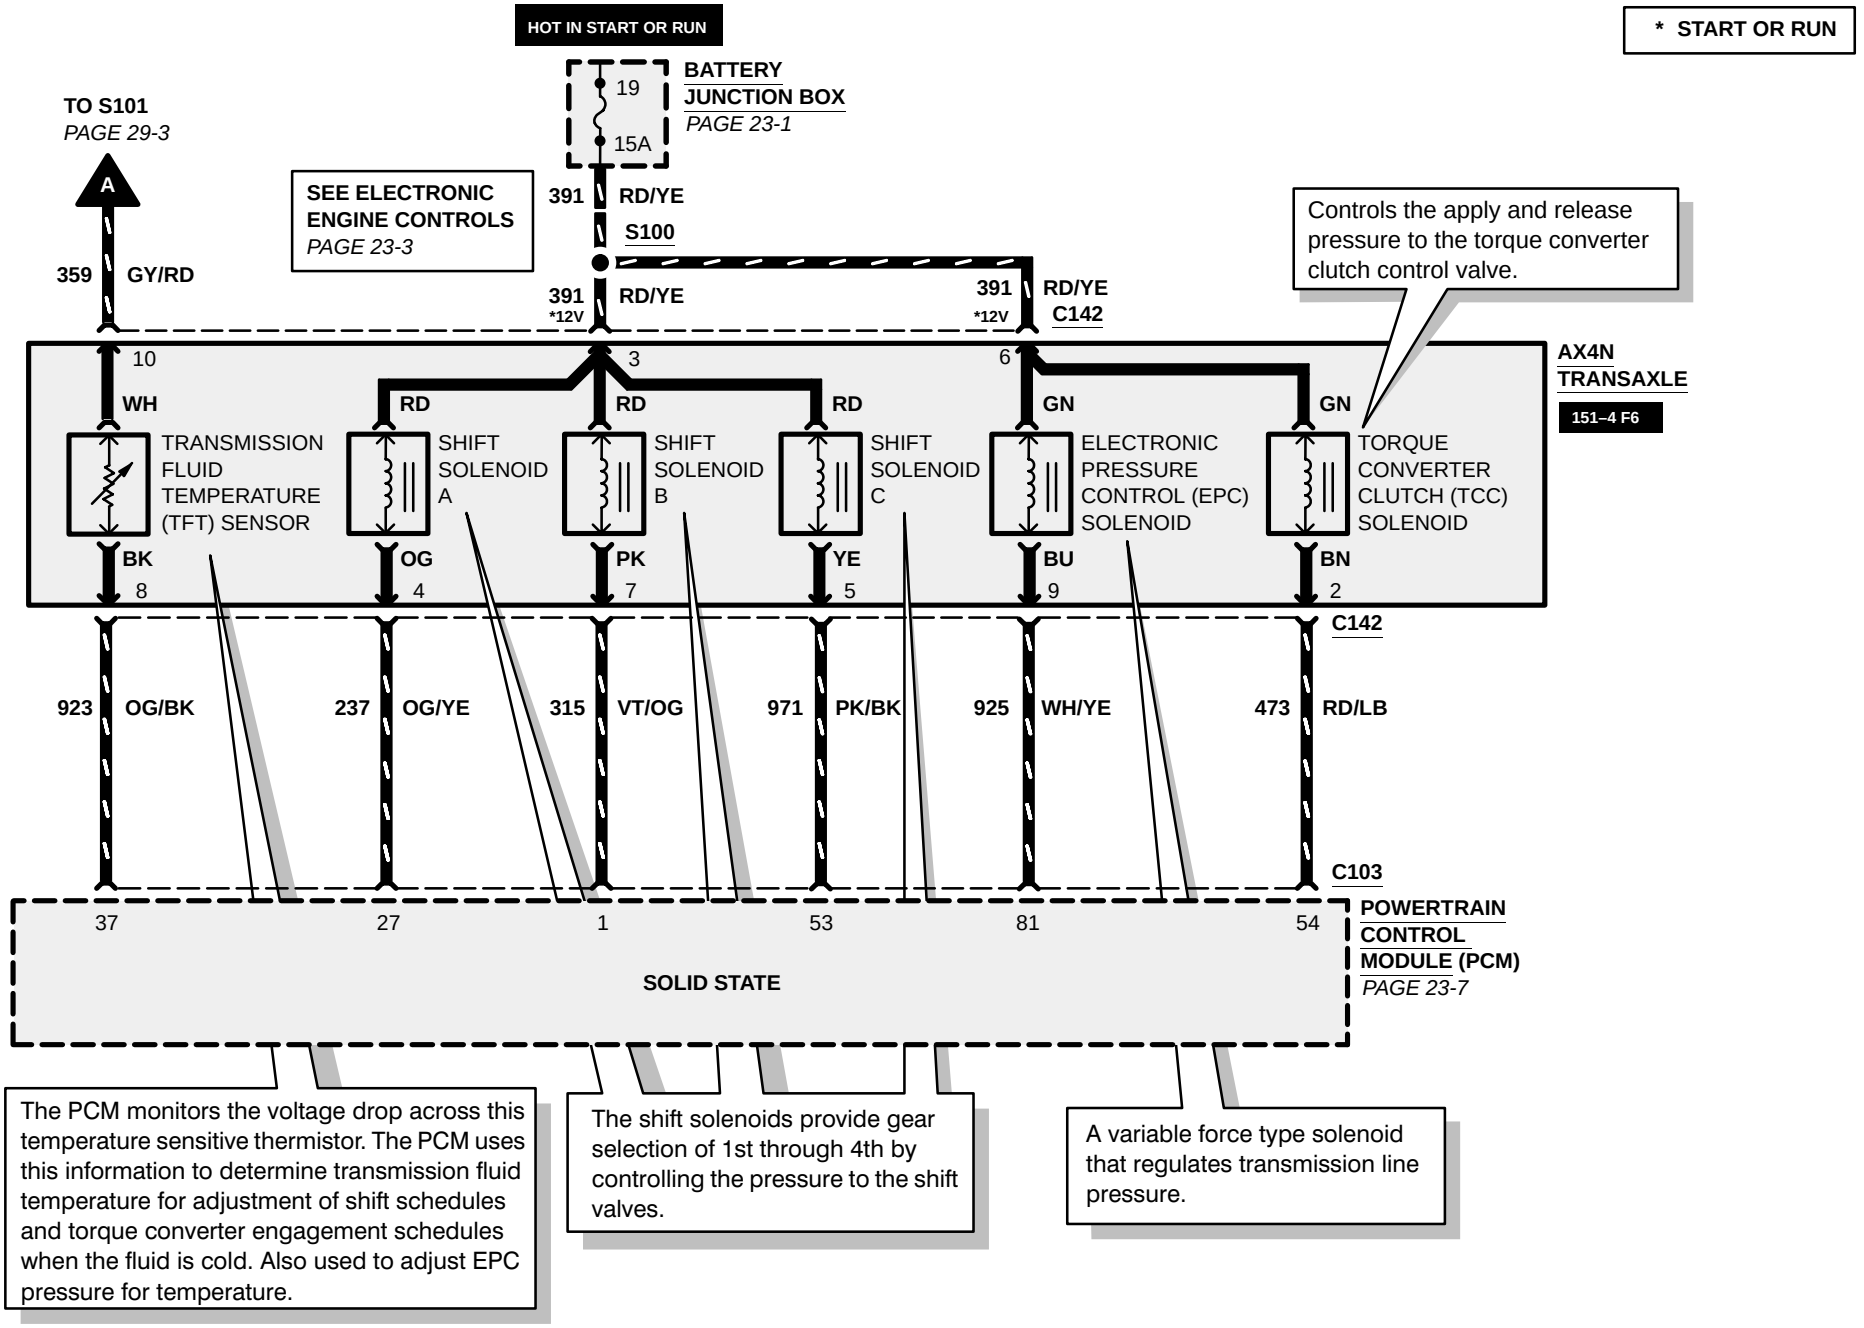
HOT IN START OR RUN
* START OR RUN
TO S101
PAGE 29-3
A
SEE ELECTRONIC ENGINE CONTROLS
PAGE 23-3
19
15A
BATTERY JUNCTION BOX
PAGE 23-1
391 RD/YE
S100
359 GY/RD
391 *12V RD/YE
391 *12V RD/YE C142
Controls the apply and release pressure to the torque converter clutch control valve.
AX4N TRANSAXLE
151–4 F6
10
3
6
WH
RD
RD
RD
GN
GN
TRANSMISSION FLUID TEMPERATURE (TFT) SENSOR
SHIFT SOLENOID A
SHIFT SOLENOID B
SHIFT SOLENOID C
ELECTRONIC PRESSURE CONTROL (EPC) SOLENOID
TORQUE CONVERTER CLUTCH (TCC) SOLENOID
BK 8
OG 4
PK 7
YE 5
BU 9
BN 2
C142
923 OG/BK
237 OG/YE
315 VT/OG
971 PK/BK
925 WH/YE
473 RD/LB
C103
37
27
1
53
81
54
SOLID STATE
POWERTRAIN CONTROL MODULE (PCM)
PAGE 23-7
The PCM monitors the voltage drop across this temperature sensitive thermistor. The PCM uses this information to determine transmission fluid temperature for adjustment of shift schedules and torque converter engagement schedules when the fluid is cold. Also used to adjust EPC pressure for temperature.
The shift solenoids provide gear selection of 1st through 4th by controlling the pressure to the shift valves.
A variable force type solenoid that regulates transmission line pressure.