C337

14C691

A154

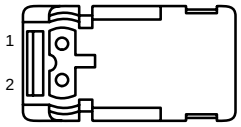

F02215

Pin	Circuit	Circuit Function
1	31S-JA38 (BK/RD)	Ground, switch
2	30S-JA38 (RD/BK)	Voltage supplied at all times (not overload protected), switch

C357

14B719

M214
Power seat motor assembly, left

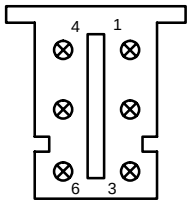

F06138

Pin	Circuit	Circuit Function
1	33-AH9 (YE/GN)	Switched between: Battery voltage, Ground or Open
2	32-AH10 (WH/BK)	Switched between: Battery voltage, Ground or Open
3	33-AH10 (YE/BK)	Switched between: Battery voltage, Ground or Open
4	32-AH9 (WH/GN)	Switched between: Battery voltage, Ground or Open
5	33-AH11 (YE/VT)	Switched between: Battery voltage, Ground or Open
6	32-AH11 (WH/VT)	Switched between: Battery voltage, Ground or Open

C360

14B719

N216
Seat adjust switch, driver side front (14A701)

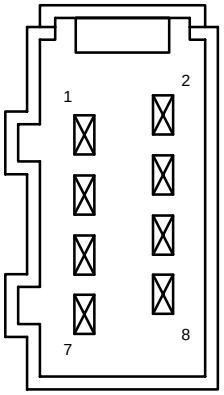

F08114

Pin	Circuit	Circuit Function
1	31-AH6 (BK/YE)	Ground
2	32-AH11 (WH/VT)	Switched between: Battery voltage, Ground or Open
3	33-AH9 (YE/GN)	Switched between: Battery voltage, Ground or Open
4	33-AH10 (YE/BK)	Switched between: Battery voltage, Ground or Open
5	32-AH9 (WH/GN)	Switched between: Battery voltage, Ground or Open
6	32-AH10 (WH/BK)	Switched between: Battery voltage, Ground or Open
7	30-AH6 (RD/YE)	Voltage supplied at all times (not overload protected)
8	33-AH11 (YE/VT)	Switched between: Battery voltage, Ground or Open