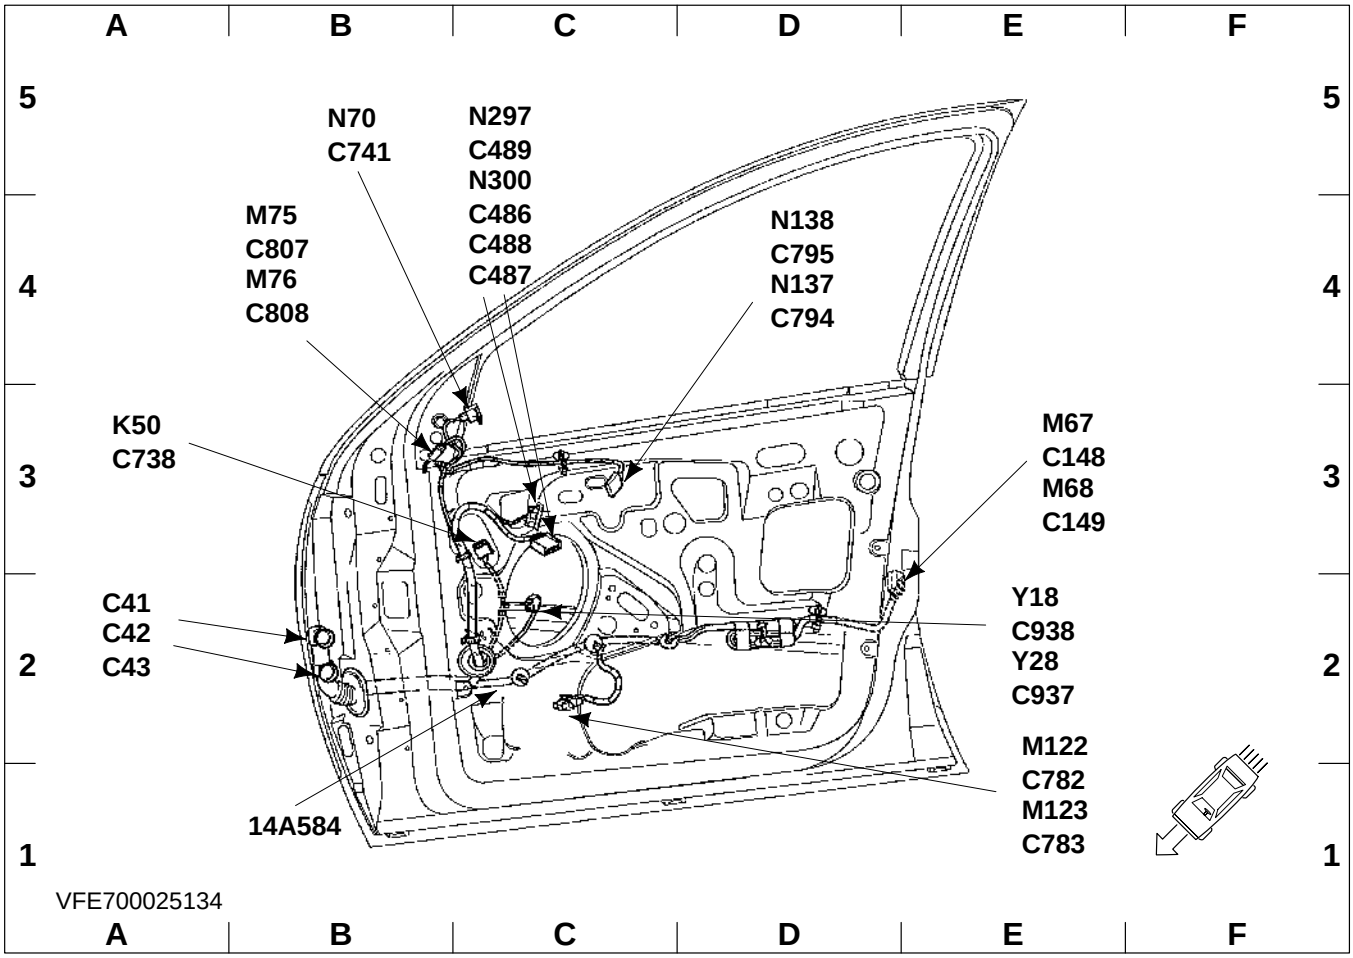

RH front door, LH side similar

14A584 . . . . . B 1
C41 . . . . . A 2
C42 . . . . . A 2
C43 . . . . . A 2
C488 . . . . . C 4
C148 . . . . . E 3
C149 . . . . . E 3
C486 . . . . . C 4
C487 . . . . . C 4
C489 . . . . . C 5
C738 . . . . . A 3
C741 . . . . . B 5
C782 . . . . . E 1
C783 . . . . . E 1
C794 . . . . . D 4
C795 . . . . . D 4
C807 . . . . . B 4
C808 . . . . . B 4
C937 . . . . . E 2
C938 . . . . . E 2
K50 . . One–touch window relay . . . . . A 3
M67 . Door lock motor, driver side . . . . . E 3
M68 . Door lock motor, passenger side . . . . . E 3
M75 . Mirror motor, driver side . . . . . B 4
M76 . Mirror motor, passenger side . . . . . B 4
M122 Window regulator motor, driver side front . . . . . E 2
M123 Window regulator motor, passenger side front . . . . . E 1
N70 . . Power mirror adjust switch . . . . . B 5
N137 . Door lock/unlock switch, driver . . . . . D 4
N138 . Door lock/unlock switch, passenger . . . . D 4
N297 . Window operating switch, passenger side front . C 5
N300 . Window operating switch, driver side front (multiple) . . . . . C 5
Y18 . . Speaker, right front . . . . . E 2
Y28 . . Speaker, left front . . . . . E 2