C912

14334

N411
Roof opening panel
switch (15B691)

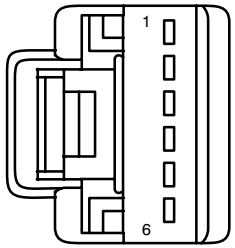

F006179

Pin	Circuit	Circuit function
1	–	not used
2	32-AG10 (WH/BU)	Switched between: Battery voltage, Ground or Open
3	9-AG7 (BN/RD)	Sensor signal return (reference/ground)
4	32-AG12 (WH/GN)	Switched between: Battery voltage, Ground or Open
5	33-AG10 (YE/BU)	Switched between: Battery voltage, Ground or Open
6	–	not used

C913

14334

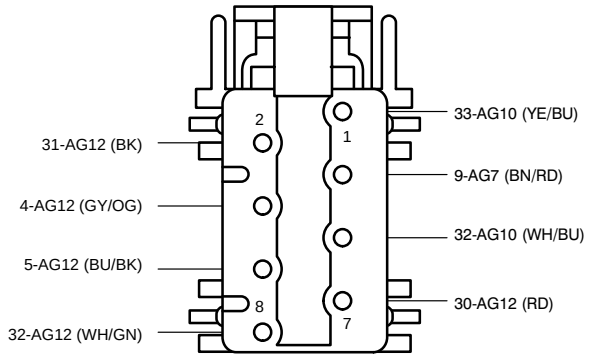

F08139

15C670

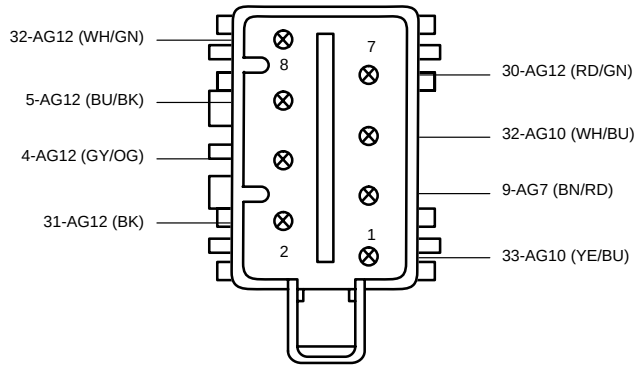

F08169