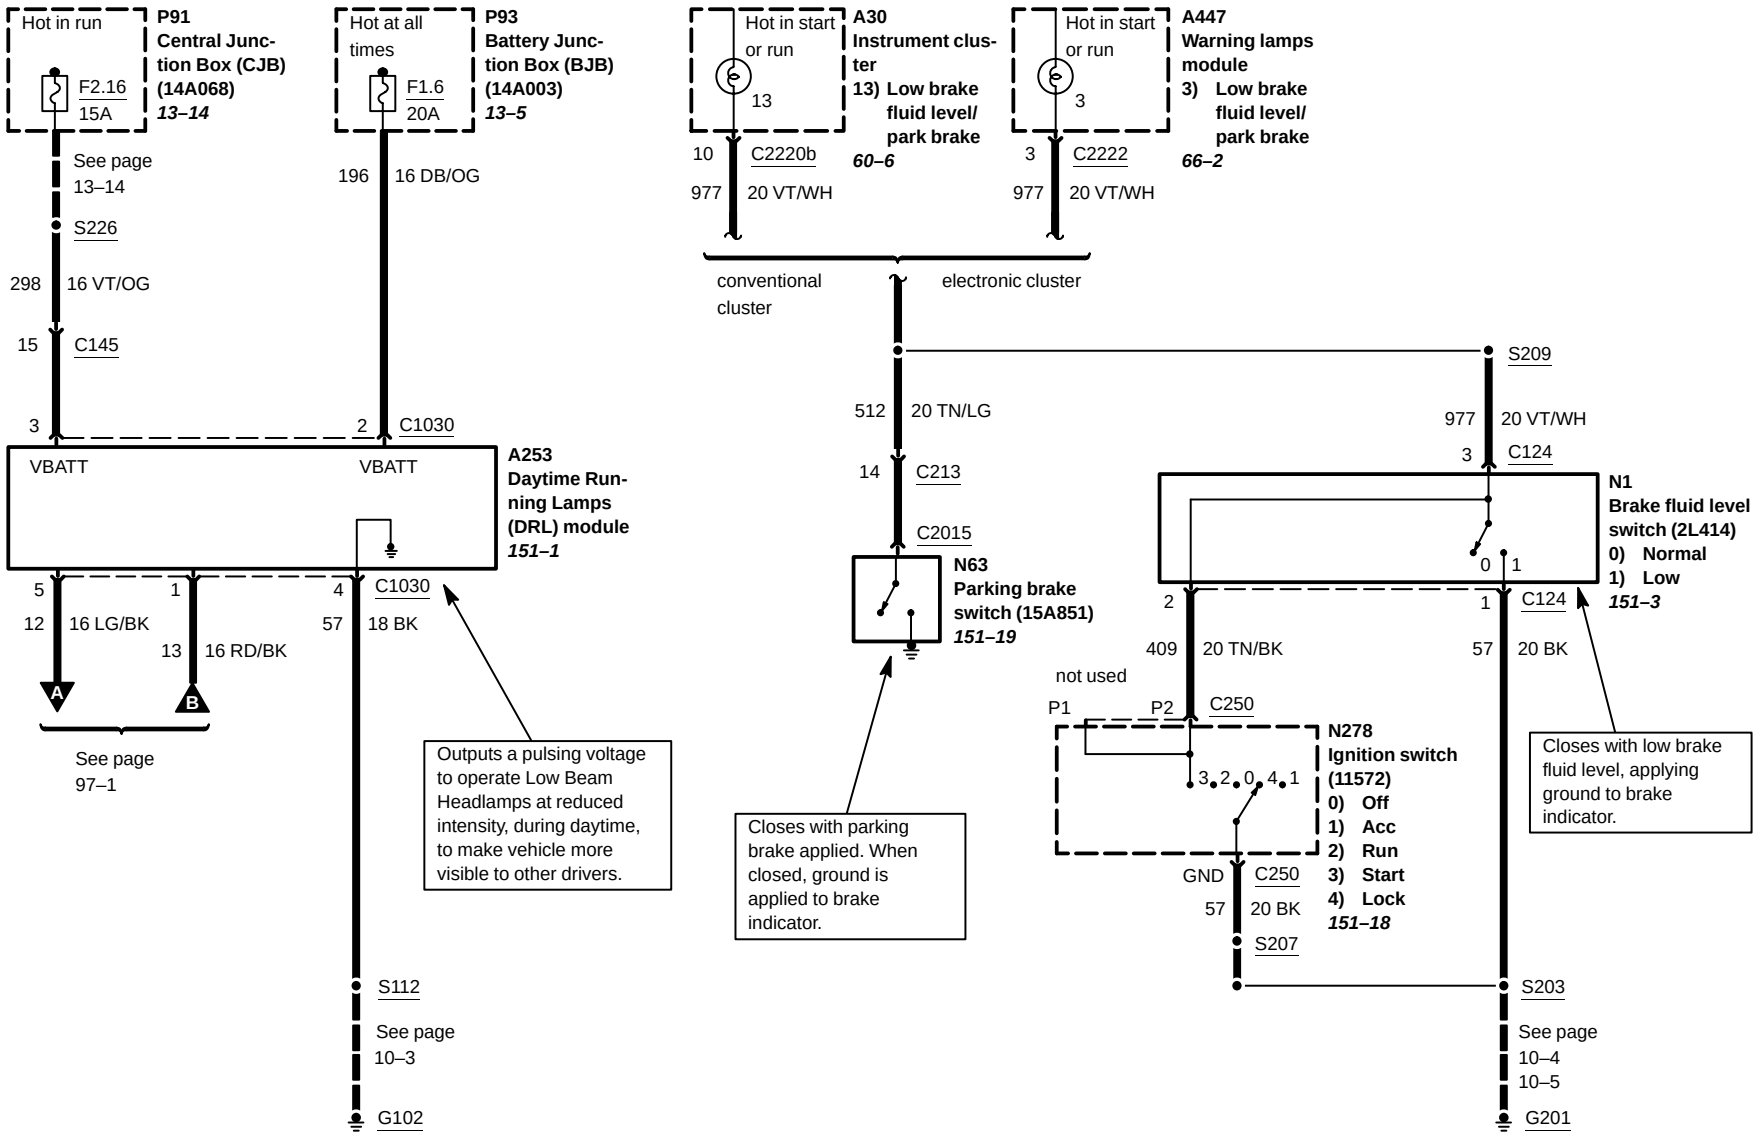
Hot in run
P91
Central Junction Box (CJB)
(14A068)
13–14
F2.16
15A
See page
13–14
S226
298 16 VT/OG
15 C145
3
Hot at all times
P93
Battery Junction Box (BJB)
(14A003)
13–5
F1.6
20A
196 16 DB/OG
2 C1030
VBATT
VBATT
A253
Daytime Running Lamps (DRL) module
151–1
5 12 16 LG/BK
1 13 16 RD/BK
4 C1030
57 18 BK
A
B
See page
97–1
Outputs a pulsing voltage to operate Low Beam Headlamps at reduced intensity, during daytime, to make vehicle more visible to other drivers.
S112
See page
10–3
G102
Hot in start or run
13
A30
Instrument cluster
13) Low brake fluid level/ park brake
60–6
10 C2220b
977 20 VT/WH
Hot in start or run
3
A447
Warning lamps module
3) Low brake fluid level/ park brake
66–2
3 C2222
977 20 VT/WH
conventional cluster
electronic cluster
512 20 TN/LG
14 C213
C2015
N63
Parking brake switch (15A851)
151–19
Closes with parking brake applied. When closed, ground is applied to brake indicator.
S209
977 20 VT/WH
3 C124
N1
Brake fluid level switch (2L414)
0) Normal
1) Low
151–3
0 1
2 409 20 TN/BK
1 C124
57 20 BK
not used
P1 P2 C250
N278
Ignition switch (11572)
0) Off
1) Acc
2) Run
3) Start
4) Lock
151–18
3 2 0 4 1
GND C250
57 20 BK
S207
Closes with low brake fluid level, applying ground to brake indicator.
S203
See page
10–4
10–5
G201