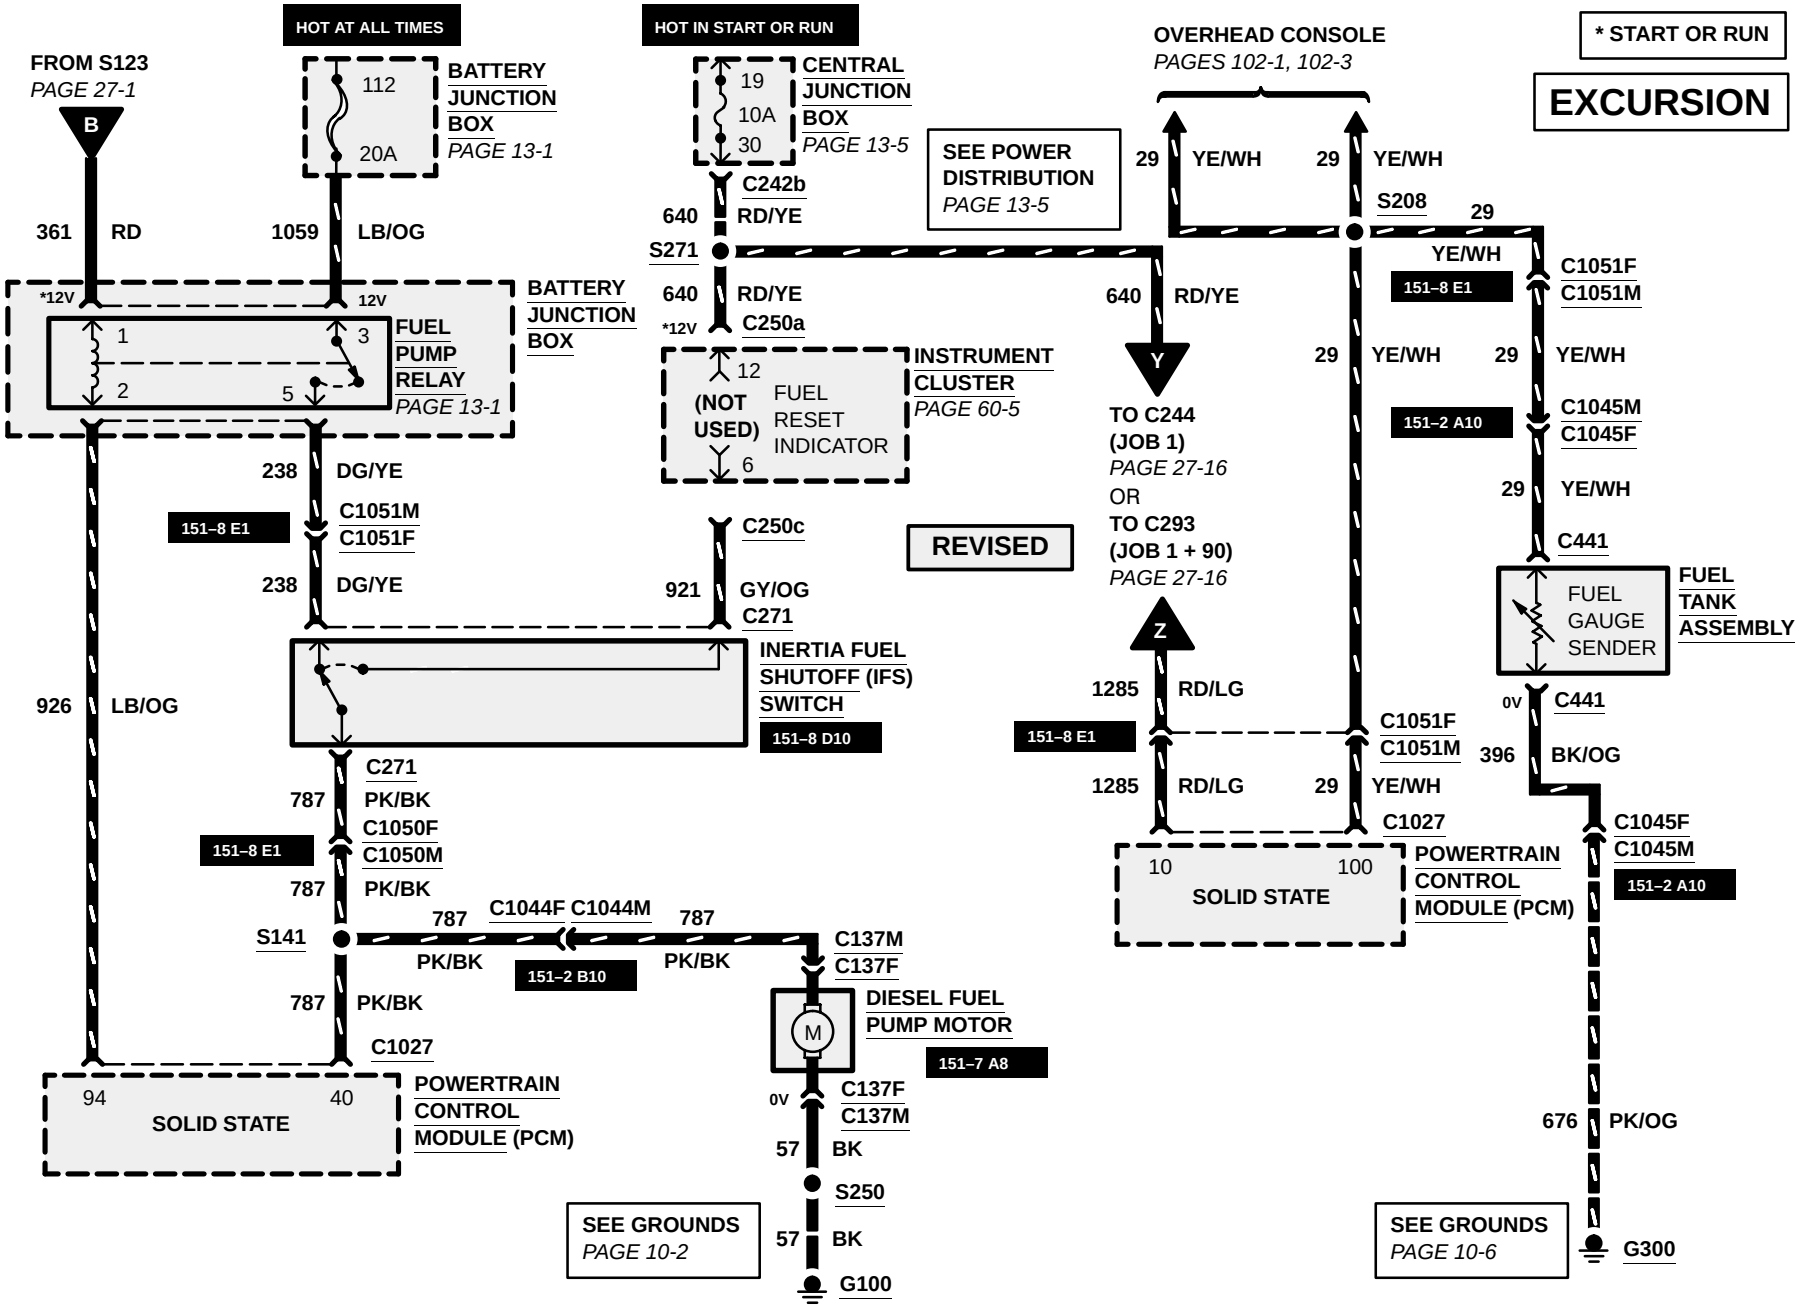
HOT AT ALL TIMES
HOT IN START OR RUN
* START OR RUN
EXCURSION
FROM S123
PAGE 27-1
B
361 RD
112
20A
1059 LB/OG
BATTERY JUNCTION BOX
PAGE 13-1
*12V
12V
1
2
3
5
FUEL PUMP RELAY
PAGE 13-1
BATTERY JUNCTION BOX
238 DG/YE
151–8 E1
C1051M
C1051F
238 DG/YE
926 LB/OG
INERTIA FUEL SHUTOFF (IFS) SWITCH
151–8 D10
C271
787 PK/BK
C1050F
C1050M
151–8 E1
787 PK/BK
787 PK/BK
S141
787 PK/BK
C1044F C1044M
151–2 B10
787 PK/BK
C1027
94
40
SOLID STATE
POWERTRAIN CONTROL MODULE (PCM)
19
10A
30
CENTRAL JUNCTION BOX
PAGE 13-5
C242b
640 RD/YE
S271
640 RD/YE
*12V
C250a
12
(NOT USED)
FUEL RESET INDICATOR
INSTRUMENT CLUSTER
PAGE 60-5
C250c
921 GY/OG
C271
REVISED
C137M
C137F
DIESEL FUEL PUMP MOTOR
151–7 A8
M
0V
C137F
C137M
57 BK
S250
57 BK
G100
SEE GROUNDS
PAGE 10-2
SEE POWER DISTRIBUTION
PAGE 13-5
OVERHEAD CONSOLE
PAGES 102-1, 102-3
29 YE/WH
29 YE/WH
S208
640 RD/YE
Y
TO C244
(JOB 1)
PAGE 27-16
OR
TO C293
(JOB 1 + 90)
PAGE 27-16
Z
1285 RD/LG
151–8 E1
1285 RD/LG
C1051F
C1051M
29 YE/WH
C1027
10
100
SOLID STATE
POWERTRAIN CONTROL MODULE (PCM)
29 YE/WH
151–8 E1
C1051F
C1051M
29 YE/WH
29 YE/WH
151–2 A10
C1045M
C1045F
29 YE/WH
C441
FUEL GAUGE SENDER
FUEL TANK ASSEMBLY
0V
C441
396 BK/OG
C1045F
C1045M
151–2 A10
676 PK/OG
G300
SEE GROUNDS
PAGE 10-6