C230

14401

Center image speaker, left



F02048

Pin	Circuit	Circuit function
1	8-MD30 (WH/BU)	Center image speaker, left +
2	10-MD30 (GY/VT)	Center image speaker, left -

C231

14401

Center image speaker, right



F02048

Pin	Circuit	Circuit function
1	8-MD31 (WH/GN)	Center image speaker, right +
2	10-MD31 (GY/OG)	Center image speaker, right -

C232

14401

Defrost mode actuator (19E616)

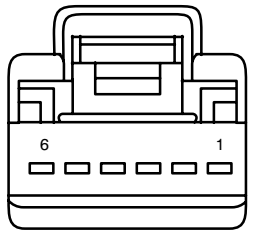

F006179

Pin	Circuit	Circuit function
1	33-FB5 (YE/BK)	Defrost mode actuator (19E616) +/-
2	–	not used
3	8-FB5 (WH/BK)	Defrost mode actuator (19E616), signal
4	7-FB5 (YE/BK)	Reference voltage
5	9-FB5 (BN/YE)	Signal return
6	32-FB5 (WH/BK)	Defrost mode actuator (19E616) +/-

C233 (GN)

14401

In–vehicle temperature sensor (19C734)

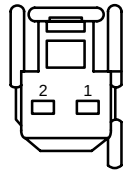

F02307

Pin	Circuit	Circuit function
1	8-FA48 (WH/GN)	In–vehicle temperature sensor (19C734), signal
2	9-FA48 (BN/GN)	Signal return