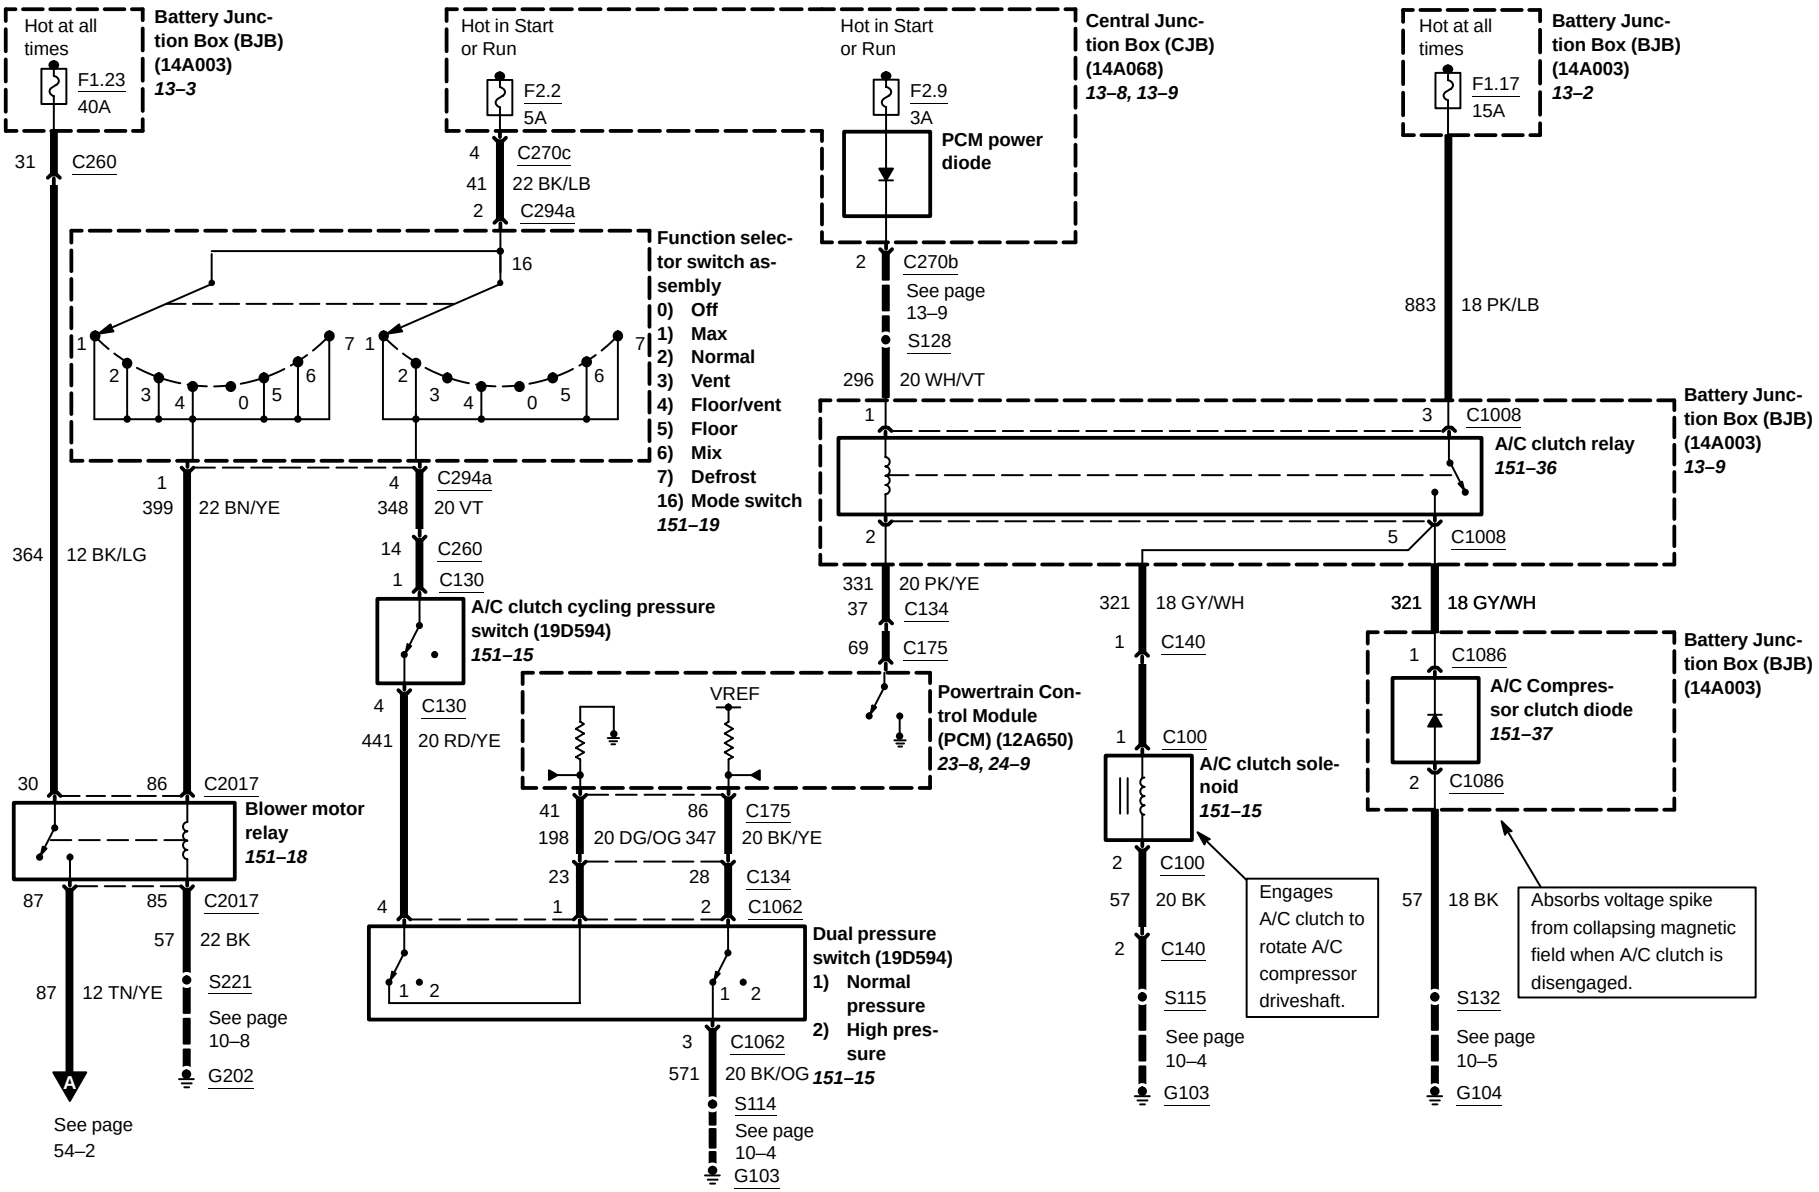
Hot at all times
F1.23
40A
Battery Junction Box (BJB) (14A003) 13–3
31 C260
Hot in Start or Run
F2.2
5A
4 C270c
41 22 BK/LB
2 C294a
Hot in Start or Run
F2.9
3A
PCM power diode
Central Junction Box (CJB) (14A068) 13–8, 13–9
2 C270b
See page 13–9
S128
296 20 WH/VT
Hot at all times
F1.17
15A
Battery Junction Box (BJB) (14A003) 13–2
883 18 PK/LB
Function selector switch assembly
0) Off
1) Max
2) Normal
3) Vent
4) Floor/vent
5) Floor
6) Mix
7) Defrost
16) Mode switch 151–19
1 399 22 BN/YE
4 348 20 VT
C294a
364 12 BK/LG
14 C260
1 C130
A/C clutch cycling pressure switch (19D594) 151–15
4 C130
441 20 RD/YE
VREF
Powertrain Control Module (PCM) (12A650) 23–8, 24–9
331 20 PK/YE
37 C134
69 C175
1 C1008
3 C1008
A/C clutch relay 151–36
5 C1008
Battery Junction Box (BJB) (14A003) 13–9
321 18 GY/WH
1 C140
321 18 GY/WH
1 C1086
A/C Compressor clutch diode 151–37
2 C1086
Battery Junction Box (BJB) (14A003)
30 86 C2017
Blower motor relay 151–18
87 85 C2017
57 22 BK
87 12 TN/YE
S221
See page 10–8
G202
A
See page 54–2
41 198 20 DG/OG
86 347 20 BK/YE
C175
23 1
28 2
C134
C1062
4
Dual pressure switch (19D594)
1) Normal pressure
2) High pressure
3 C1062
571 20 BK/OG 151–15
S114
See page 10–4
G103
1 C100
A/C clutch solenoid 151–15
2 C100
57 20 BK
2 C140
S115
See page 10–4
G103
Engages A/C clutch to rotate A/C compressor driveshaft.
57 18 BK
S132
See page 10–5
G104
Absorbs voltage spike from collapsing magnetic field when A/C clutch is disengaged.