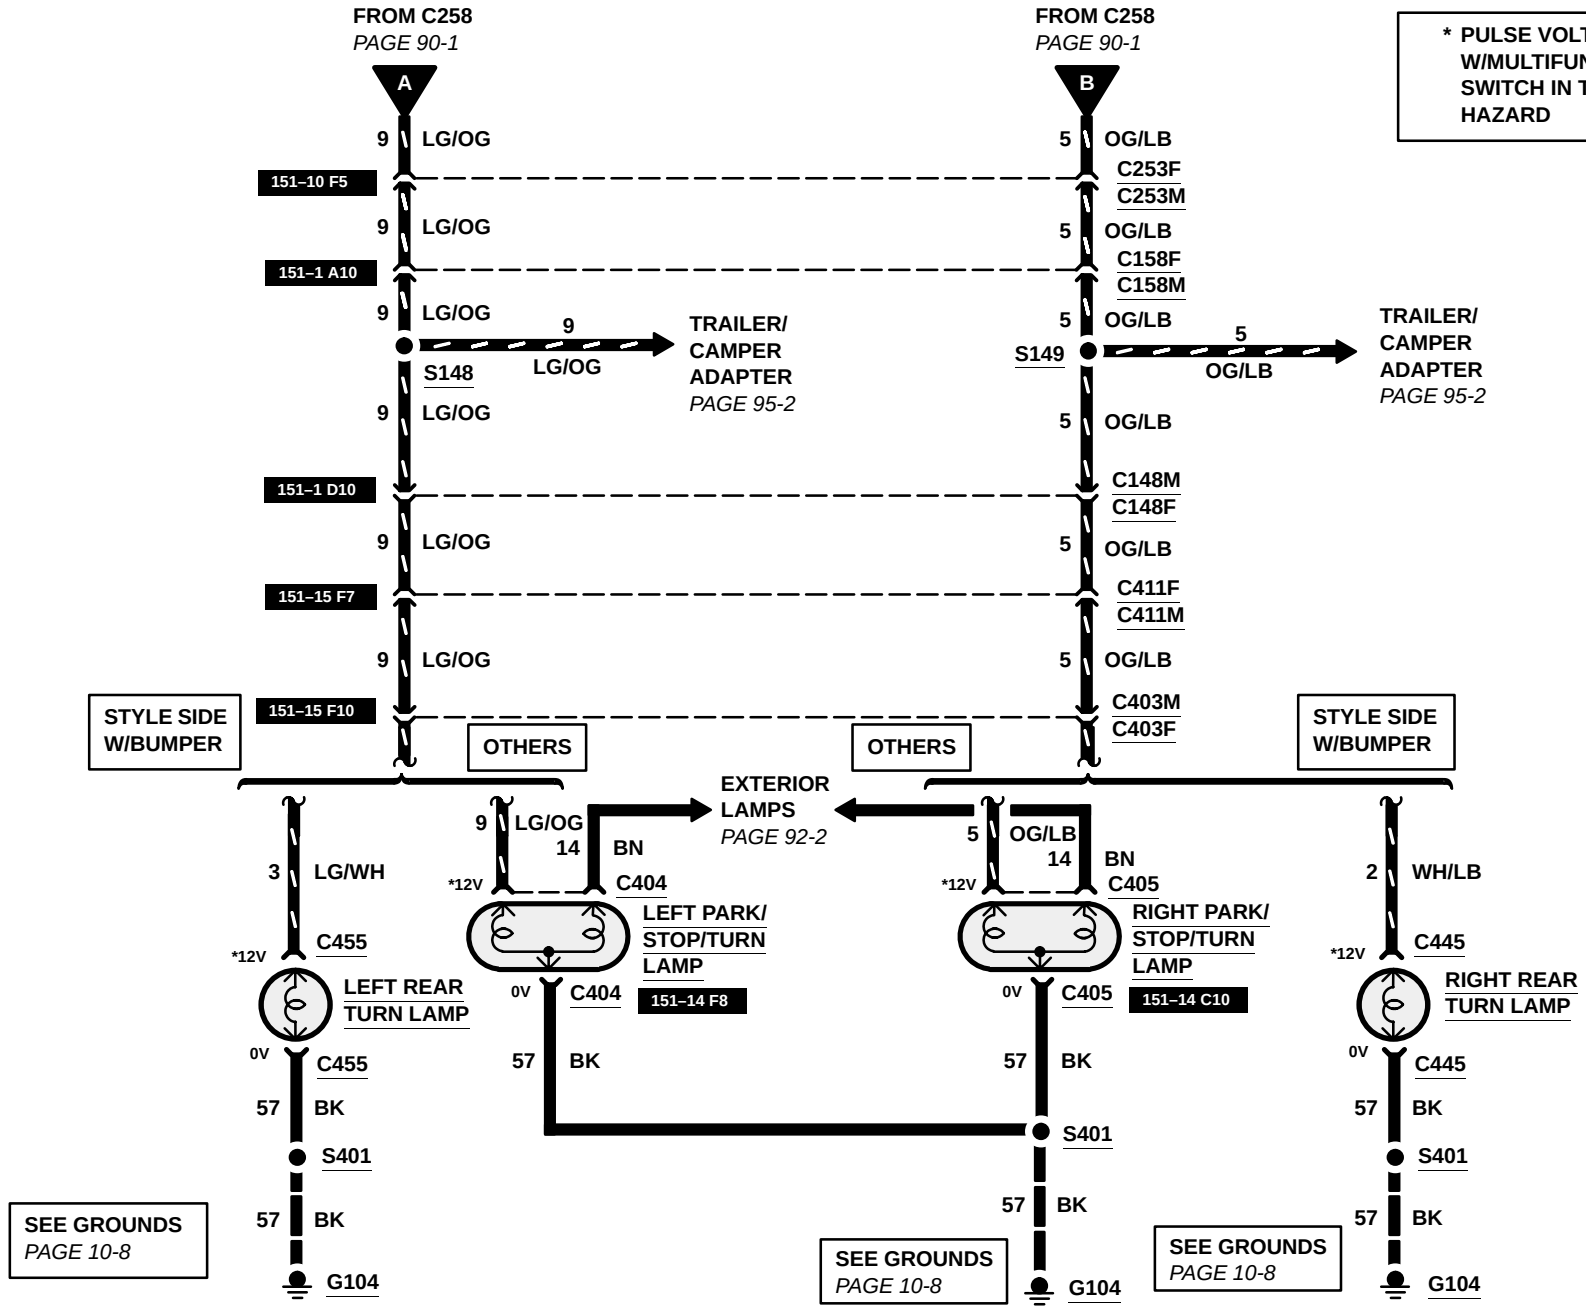
FROM C258
PAGE 90-1
FROM C258
PAGE 90-1
* PULSE VOLTAGE W/MULTIFUNCTION SWITCH IN TURN OR HAZARD
A
B
9 LG/OG
151–10 F5
9 LG/OG
151–1 A10
9 LG/OG
S148
9 LG/OG
151–1 D10
9 LG/OG
151–15 F7
9 LG/OG
151–15 F10
5 OG/LB
C253F
C253M
5 OG/LB
C158F
C158M
5 OG/LB
S149
5 OG/LB
C148M
C148F
5 OG/LB
C411F
C411M
5 OG/LB
C403M
C403F
9 LG/OG
TRAILER/ CAMPER ADAPTER
PAGE 95-2
5 OG/LB
TRAILER/ CAMPER ADAPTER
PAGE 95-2
STYLE SIDE W/BUMPER
OTHERS
OTHERS
STYLE SIDE W/BUMPER
EXTERIOR LAMPS
PAGE 92-2
3 LG/WH
*12V
C455
LEFT REAR TURN LAMP
0V
C455
57 BK
S401
57 BK
G104
SEE GROUNDS
PAGE 10-8
9 LG/OG
14 BN
*12V
C404
LEFT PARK/ STOP/TURN LAMP
0V
C404
151–14 F8
57 BK
5 OG/LB
14 BN
*12V
C405
RIGHT PARK/ STOP/TURN LAMP
0V
C405
151–14 C10
57 BK
S401
57 BK
G104
SEE GROUNDS
PAGE 10-8
2 WH/LB
*12V
C445
RIGHT REAR TURN LAMP
0V
C445
57 BK
S401
57 BK
G104
SEE GROUNDS
PAGE 10-8