C1000

14A103

P55
Battery Junction Box
(BJB) joint connector

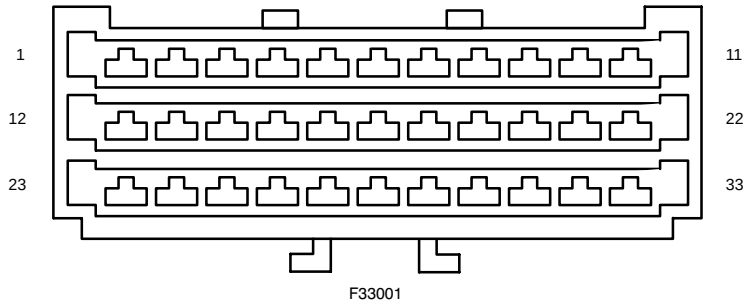

Pin	Circuit	Circuit Function
1	EE03 (BK)	Ground
2	LCE2 (BK)	Ground
3	LCE6 (BK)	Ground
4	ZE61 (BK)	Ground
5	WAE3 (BK)	Ground
6	–	not used
7	NBE2 (BK)	Ground
8	ERE3 (BK)	Ground
9	–	not used
10	EE05 (BK)	Ground
11	LBE4 (BK)	Ground
12	HA40 (BU)	Voltage supplied in Start and Run (overload protected)
13	HA42 (GY)	Voltage supplied in Start and Run (overload protected)
14	AV76 (BK/RD)	Voltage supplied in Start and Run (overload protected)
15	–	not used
16	FA07 (BU)	Voltage supplied in Start and Run (overload protected)

Pin	Circuit	Circuit Function
17	FA04 (BU)	Voltage supplied in Start and Run (overload protected)
18	FA02 (BU)	Voltage supplied in Start and Run (overload protected)
19	–	not used
20	–	not used
21	DA30 (BU)	Voltage supplied in Start and Run (overload protected)
22	DA25 (BU)	Voltage supplied in Start and Run (overload protected)
23	LC18 (PK/BU)	Tail lamp relay, switched output
24	LC12 (PK/BU)	Tail lamp relay, switched output
25	LD04 (PK/BU)	Tail lamp relay, switched output
26	LC17 (PK/BU)	Tail lamp relay, switched output
27	LC10 (PK/BU)	Tail lamp relay, switched output
28	LC11 (PK/BU)	Tail lamp relay, switched output
29	–	not used
30	STE1 (BK)	Ground
31	NBE1 (BK)	Ground
32	EE05 (BK)	Ground
33	EE04 (BK)	Ground

C1003 (GY)

12B637

Y200
Idle Speed Control
(ISC)

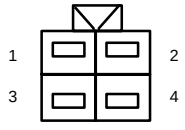

Pin	Circuit	Circuit Function
1	AV87 (BU/YE)	Voltage supplied in Start and Run (overload protected)
2	AV63 (LB)	Idle Speed Control (ISC), input
3	AV72 (GY/RD)	Voltage in Run (overload protected)
4	EP92 (BK)	Ground