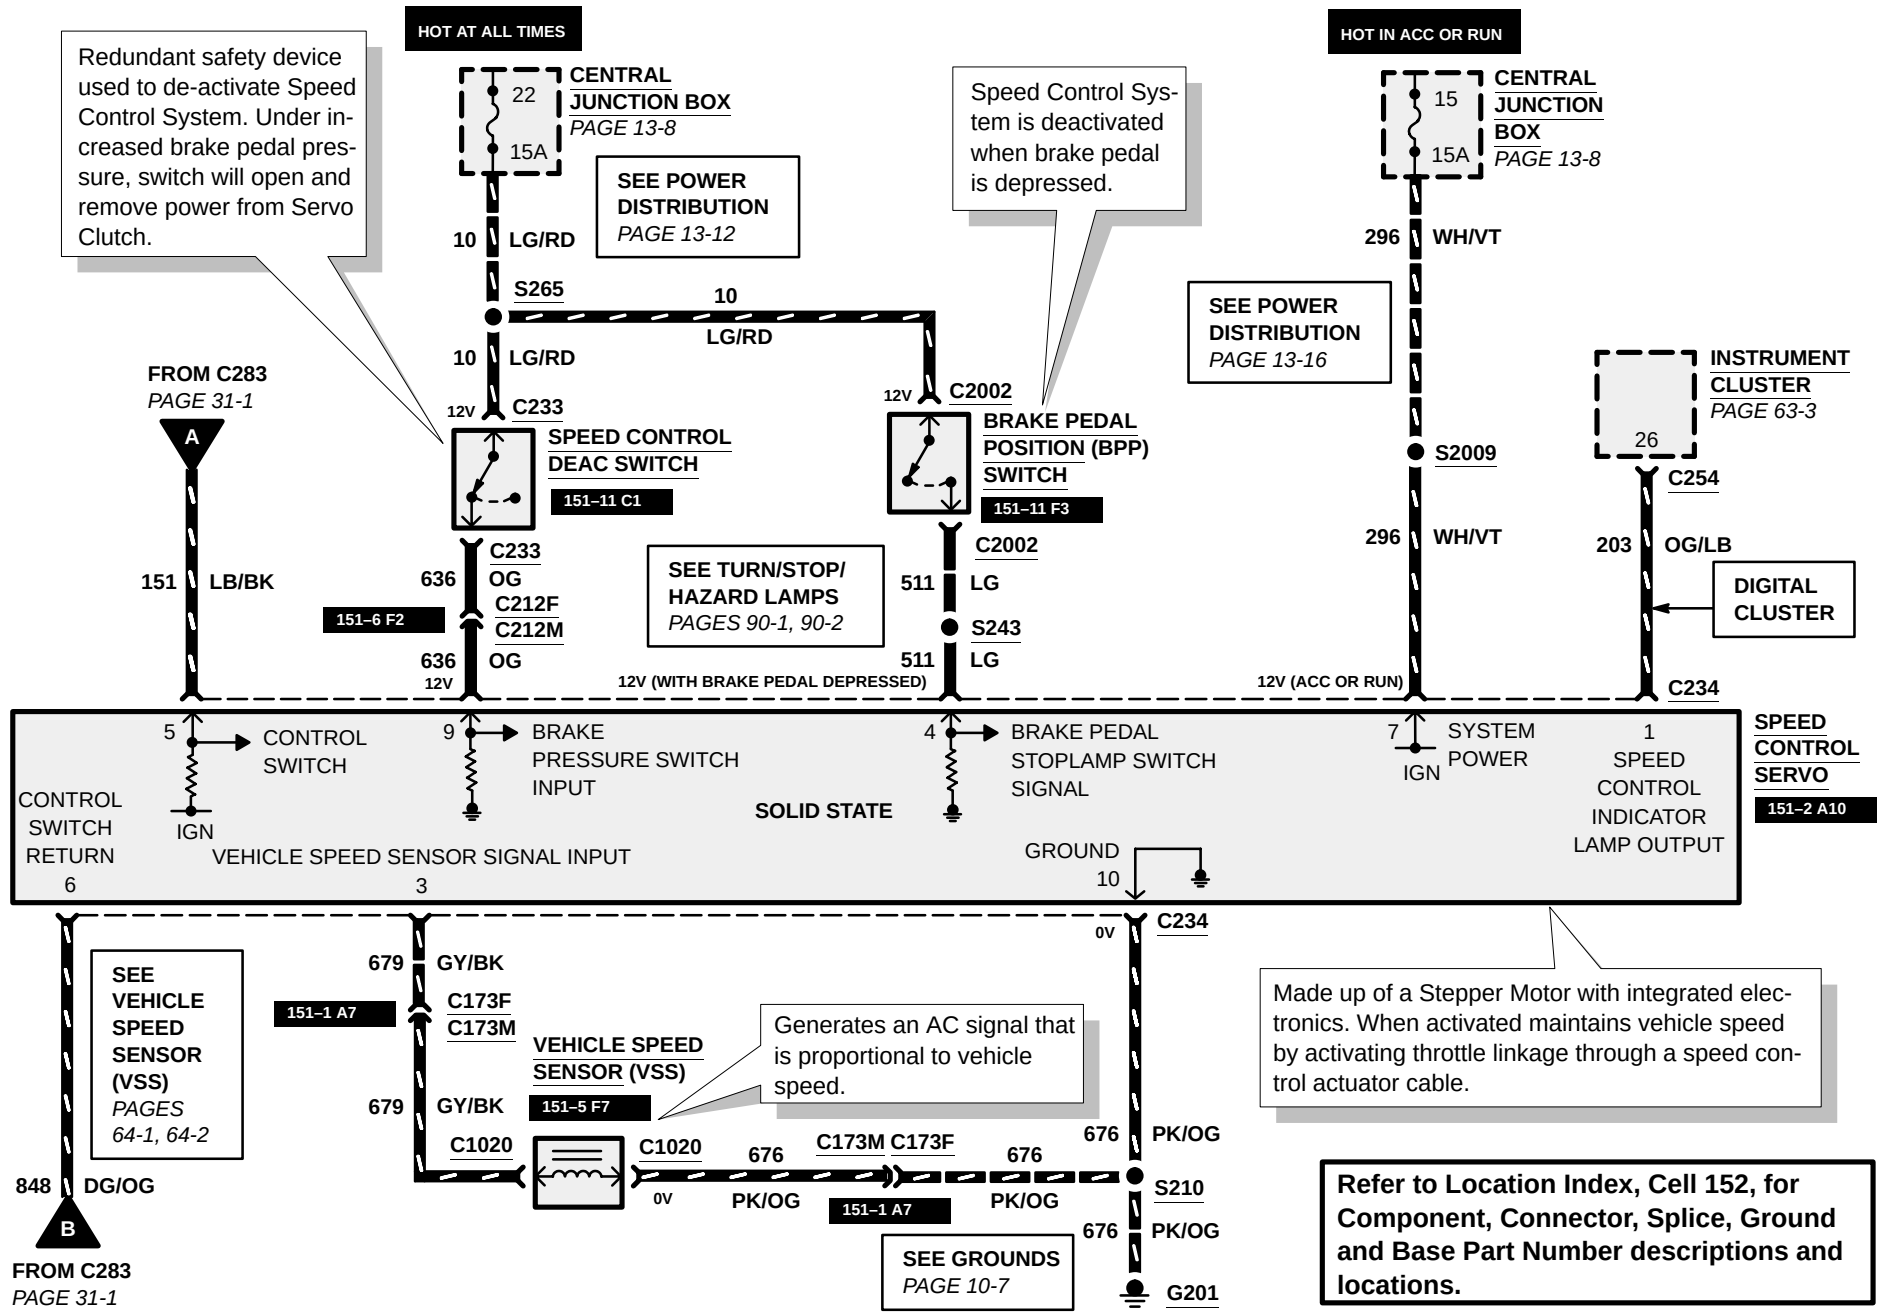
HOT AT ALL TIMES
HOT IN ACC OR RUN
Redundant safety device used to de-activate Speed Control System. Under increased brake pedal pressure, switch will open and remove power from Servo Clutch.
Speed Control System is deactivated when brake pedal is depressed.
CENTRAL JUNCTION BOX
PAGE 13-8
22
15A
15
SEE POWER DISTRIBUTION
PAGE 13-12
SEE POWER DISTRIBUTION
PAGE 13-16
10 LG/RD
296 WH/VT
S265
FROM C283
PAGE 31-1
A
12V C233
SPEED CONTROL DEAC SWITCH
151–11 C1
12V C2002
BRAKE PEDAL POSITION (BPP) SWITCH
151–11 F3
INSTRUMENT CLUSTER
PAGE 63-3
26
C254
S2009
151 LB/BK
636 OG
C212F
C212M
151–6 F2
C2002
511 LG
S243
203 OG/LB
DIGITAL CLUSTER
SEE TURN/STOP/ HAZARD LAMPS
PAGES 90-1, 90-2
12V (WITH BRAKE PEDAL DEPRESSED)
12V (ACC OR RUN)
C234
SPEED CONTROL SERVO
151–2 A10
5 CONTROL SWITCH
9 BRAKE PRESSURE SWITCH INPUT
4 BRAKE PEDAL STOPLAMP SWITCH SIGNAL
7 SYSTEM POWER
IGN
1 SPEED CONTROL INDICATOR LAMP OUTPUT
CONTROL SWITCH RETURN
6
IGN
VEHICLE SPEED SENSOR SIGNAL INPUT
3
SOLID STATE
GROUND
10
0V
679 GY/BK
C173F
C173M
151–1 A7
VEHICLE SPEED SENSOR (VSS)
151–5 F7
Generates an AC signal that is proportional to vehicle speed.
Made up of a Stepper Motor with integrated electronics. When activated maintains vehicle speed by activating throttle linkage through a speed control actuator cable.
SEE VEHICLE SPEED SENSOR (VSS)
PAGES 64-1, 64-2
848 DG/OG
B
FROM C283
PAGE 31-1
C1020
676 PK/OG
S210
SEE GROUNDS
PAGE 10-7
G201
Refer to Location Index, Cell 152, for Component, Connector, Splice, Ground and Base Part Number descriptions and locations.