CAT ENGINE

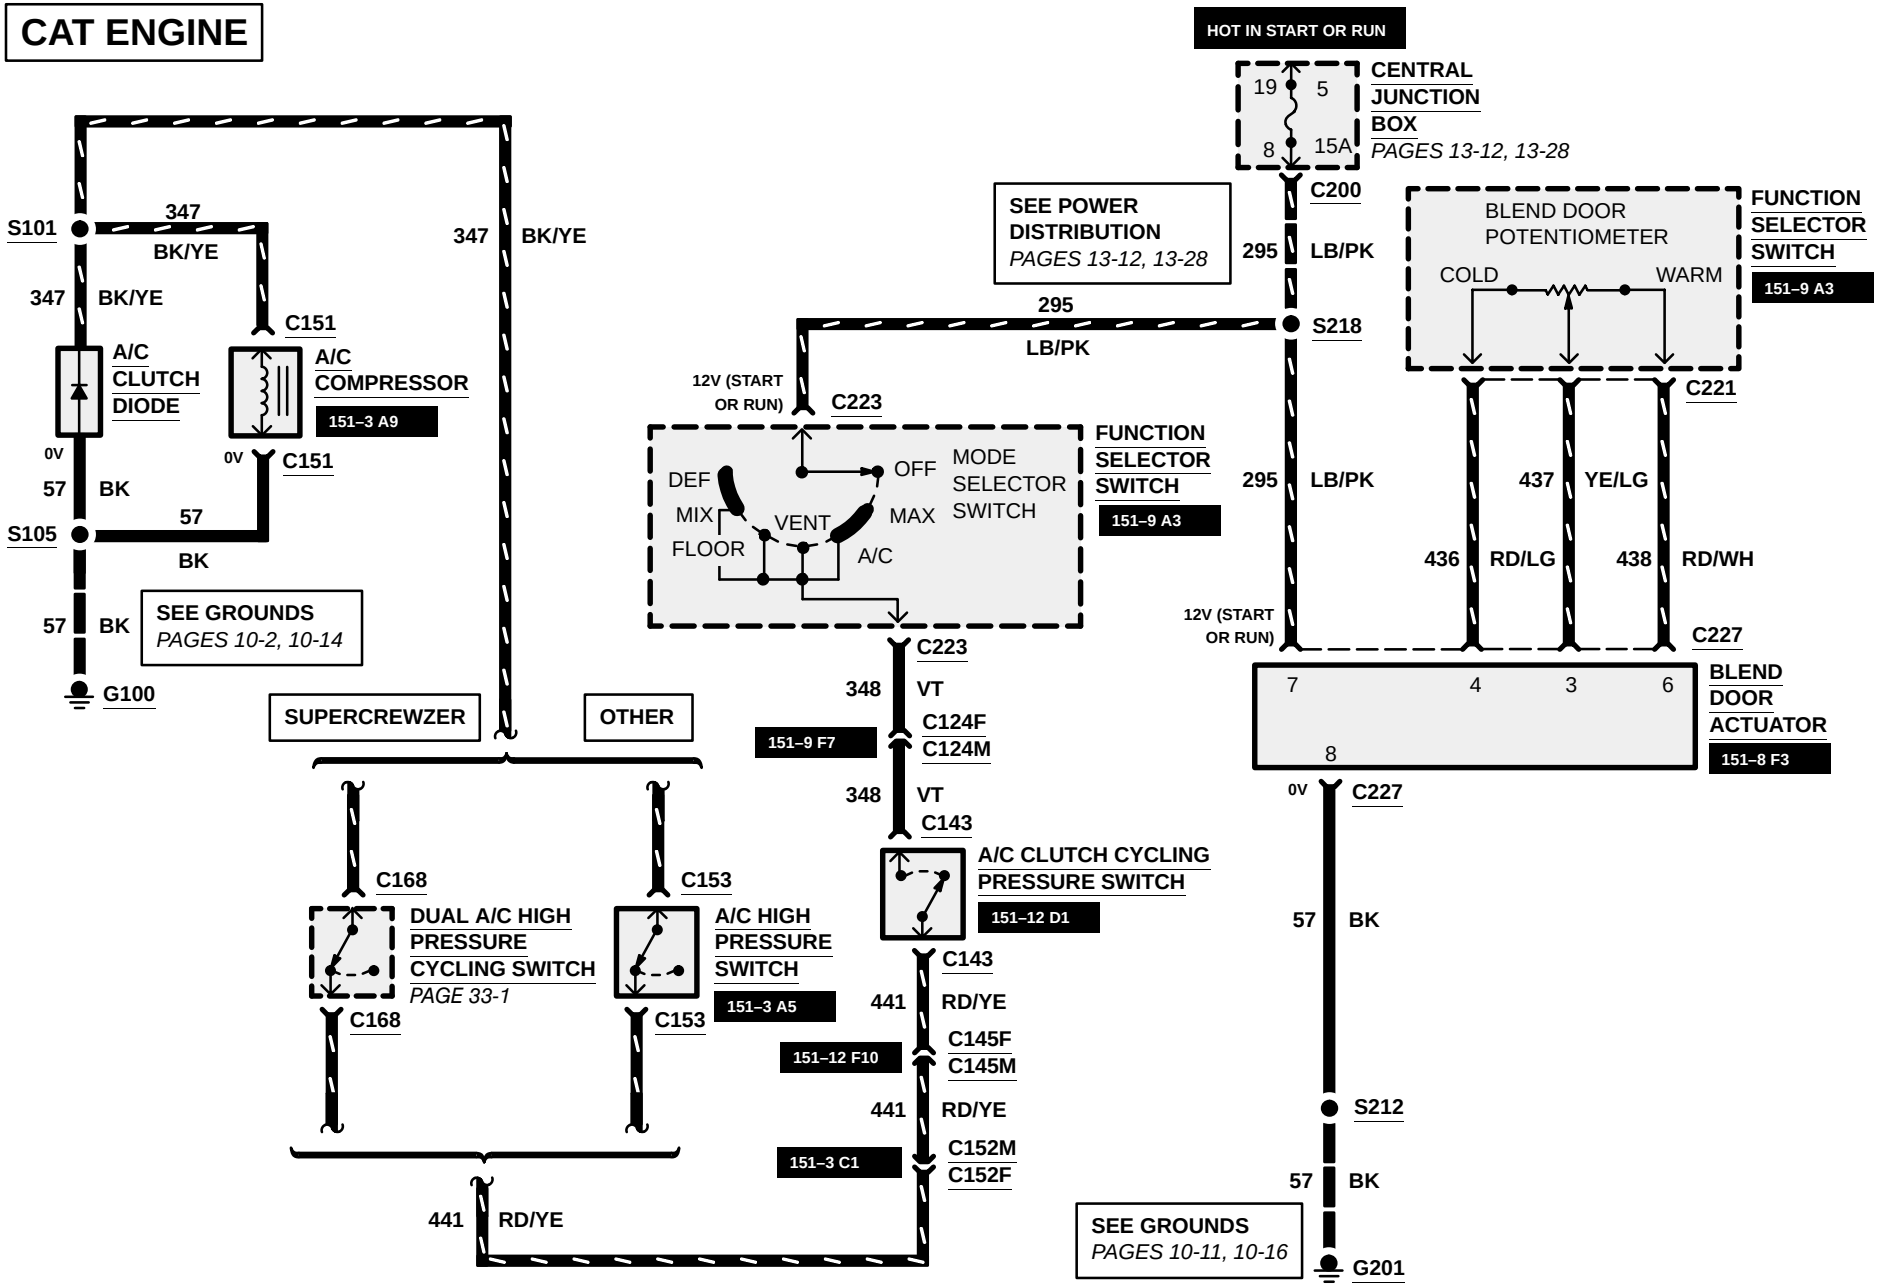
HOT IN START OR RUN
CENTRAL JUNCTION BOX
PAGES 13-12, 13-28
19
5
8
15A
C200
SEE POWER DISTRIBUTION
PAGES 13-12, 13-28
295 LB/PK
S218
BLEND DOOR POTENTIOMETER
COLD
WARM
FUNCTION SELECTOR SWITCH
151–9 A3
C221
12V (START OR RUN)
C223
FUNCTION SELECTOR SWITCH
151–9 A3
MODE SELECTOR SWITCH
DEF
OFF
MIX
VENT
MAX
FLOOR
A/C
295 LB/PK
437 YE/LG
436 RD/LG
438 RD/WH
12V (START OR RUN)
C227
BLEND DOOR ACTUATOR
151–8 F3
7
4
3
6
8
S101
347 BK/YE
347 BK/YE
347 BK/YE
C151
A/C CLUTCH DIODE
A/C COMPRESSOR
151–3 A9
0V
0V
C151
57 BK
S105
57 BK
SEE GROUNDS
PAGES 10-2, 10-14
57 BK
G100
SUPERCREWZER
OTHER
C223
348 VT
C124F
C124M
151–9 F7
348 VT
C143
A/C CLUTCH CYCLING PRESSURE SWITCH
151–12 D1
C168
C153
DUAL A/C HIGH PRESSURE CYCLING SWITCH
PAGE 33-1
A/C HIGH PRESSURE SWITCH
151–3 A5
C168
C153
C143
441 RD/YE
C145F
C145M
151–12 F10
441 RD/YE
C152M
C152F
151–3 C1
441 RD/YE
0V
C227
57 BK
S212
57 BK
SEE GROUNDS
PAGES 10-11, 10-16
G201